Manuals+ — User Manuals Simplified.

Yealink W76P DECT Phone System User Guide

Quick Reference Guide: Yealink W76P DECT
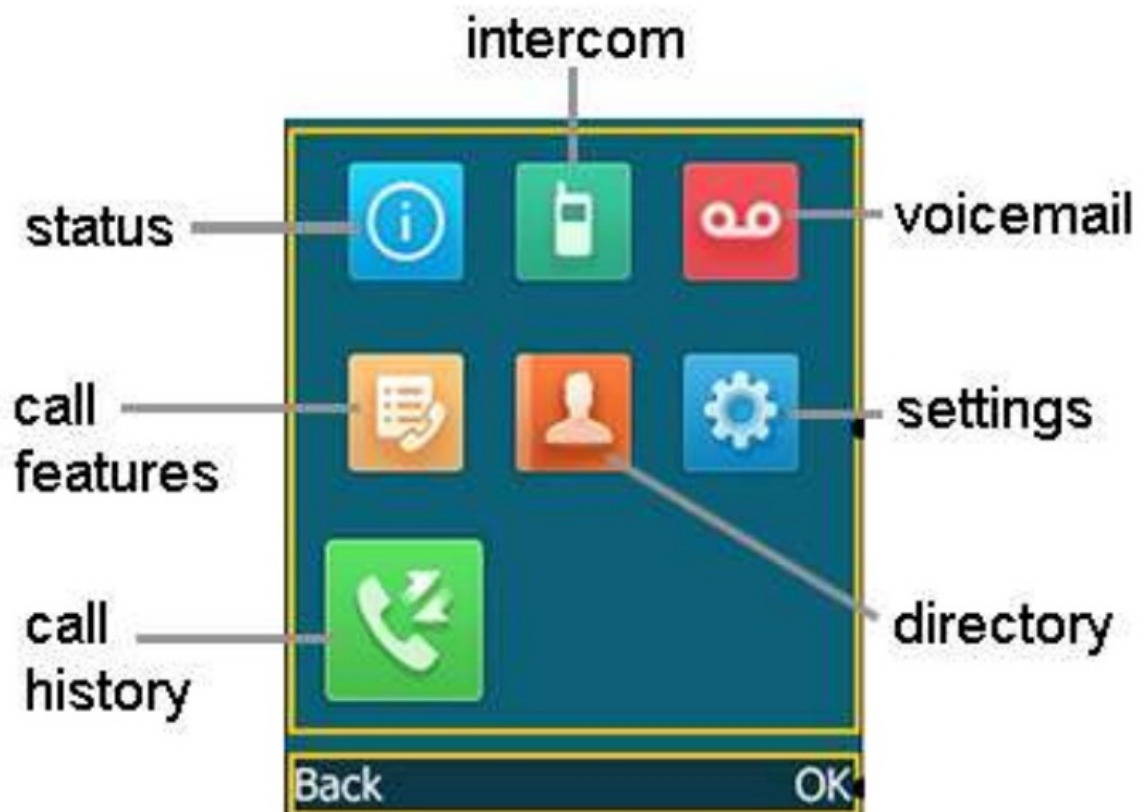
Contents

W76P DECT Phone System

This quick reference guide is for the Yealink W56H DECT handset, which is the handset used in Yealink's W76P and W60P DECT phone systems.

Handset Layout

Buttons
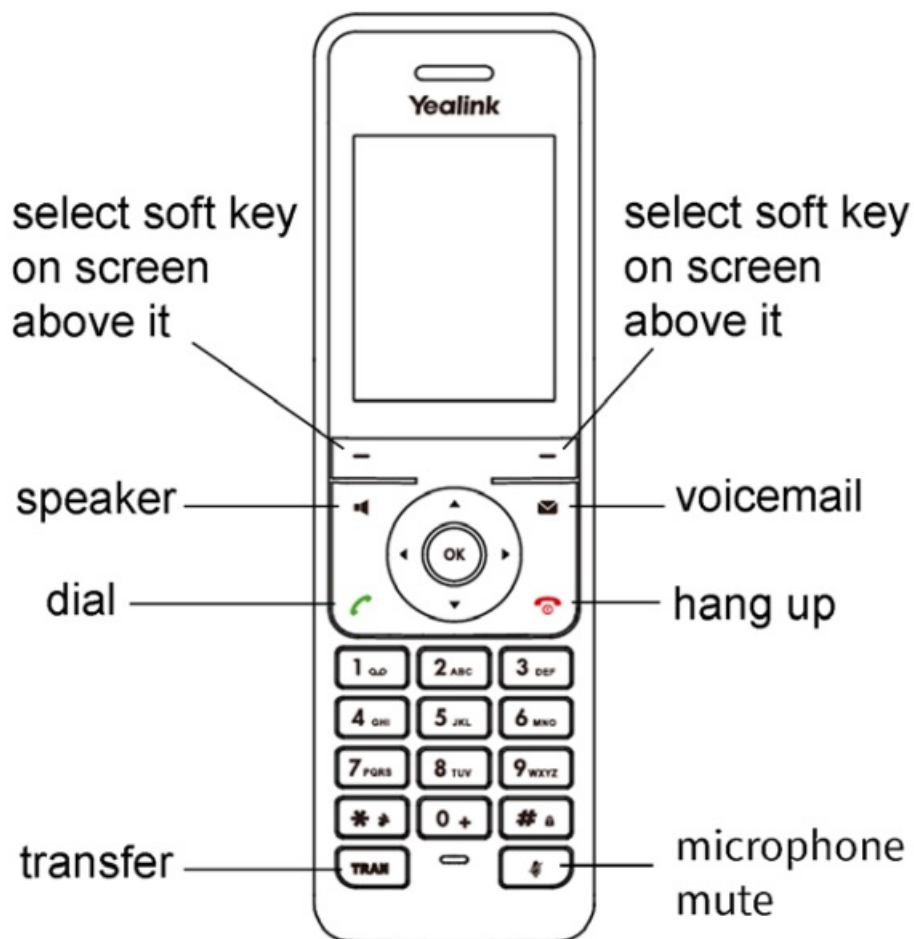
Onscreen Menu

Turn Handset On/Off

Turn Handset On

Press and hold 📞

Turn Handset Off

When phone display is on home screen (shows time of day) press and hold 📞

Voicemail

Setup Voicemail

The first time you access the Message Center, the system will walk your through your voicemail setup.

1. Press ✉

2. Use the arrow keys to highlight the line with the envelope icon with your extension.

3. Press (OK) or Select

4. Follow the prompts.

Check Voicemail

1. Press ✉

2. Use the arrow keys to highlight the line with the envelope icon with your extension.

3. Press (OK) or (OK) Select

4. Follow the prompts.

Place Calls

Using the Handset

1. Enter number on keypad.

2. Press 📞 or (OK)

Using the Speakerphone

1. Enter number on keypad.

2. Press 🔊

   1. Plug headphones into the 3.5mm jack on bottom of handset.

   2. Enter number on keypad.

3. Press 📞 or (OK)

Answer Calls

Using the Handset

Press Accept soft key 📞 or (OK)

Using the Speakerphone

Press 🔊

1. Plug headphones into the 3.5mm jack on bottom of handset.

2. Press Accept soft key 📞 or (OK)

Transfer Calls

Blind

1. Press [TRAN]

2. Dial number to which would like to transfer call.
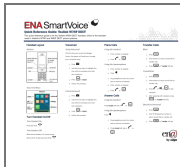
3. Press [TRAN] or Transfer soft key

Consultative

1. Press [TRAN]

2. Dial number to which would like to transfer call.

3. Press 📞 or 🔊 or (OK) to dial recipient.

4. After speaking with recipient, press [TRAN] or Transfer soft key.

Directly to Voicemail

1. Press [TRAN]

2. Dial *90 followed by number to which would like to transfer call.

3. Press [TRAN] or Transfer soft key

Documents / Resources

Yealink W76P DECT Phone System [pdf] User Guide
W76P DECT Phone System, W76P, DECT Phone System, Phone System