Manuals+ — User Manuals Simplified.

Zigbee SR-ZG9101CS LED Controller Instructions

Zigbee LED Dimmer

09.ZG901CS.04007

Important: Read All Instructions Prior to Installation

Contents

Function introduction

Push switch

GND
Push Switch

Zigbee LED Dimmer

Prog. Key

SEC 1

INPUT 12-48VDC

1 CH output

DC Power input

Program Key: short press to switch on/off load, press and hold down to increase/decrease light intensity
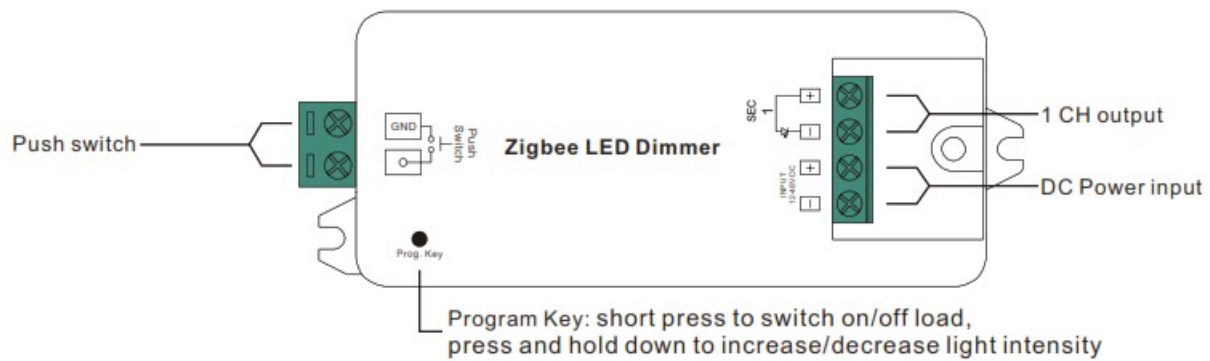
Product Data

No	Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)
1	12-48VDC	1x8A@12-36VDC 1x4A@48VDC	1x(96-288)W@12-36VDC 1x192W@48VDC	Constant voltage	95x37x20mm
2	12-48VDC	1x350mA	1x(4.2-16.8)W	Constant current	95x37x20mm
3	12-48VDC	1x700mA	1x(8.4-33.6)W	Constant current	95x37x20mm

- ZigBee LED dimming light device based on latest ZigBee 3.0 protocol
- Enables to control ON/OFF and light intensity of connected LED lights
- ZigBee end device that supports Touchlink commissioning
- Can directly pair to a compatible ZigBee remote via Touchlink without coordinator
- Supports self-forming zigbee network without coordinator
- Enables to add devices to the self-formed zigbee network
- Supports slef-forming zigbee network without coordinator and add other devices to the network
- Supports find and bind mode to bind a ZigBee remote
- Supports zigbee green power and can bind max. 20 zigbee green power remotes
- Compatible with universal ZigBee gateway products
- Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
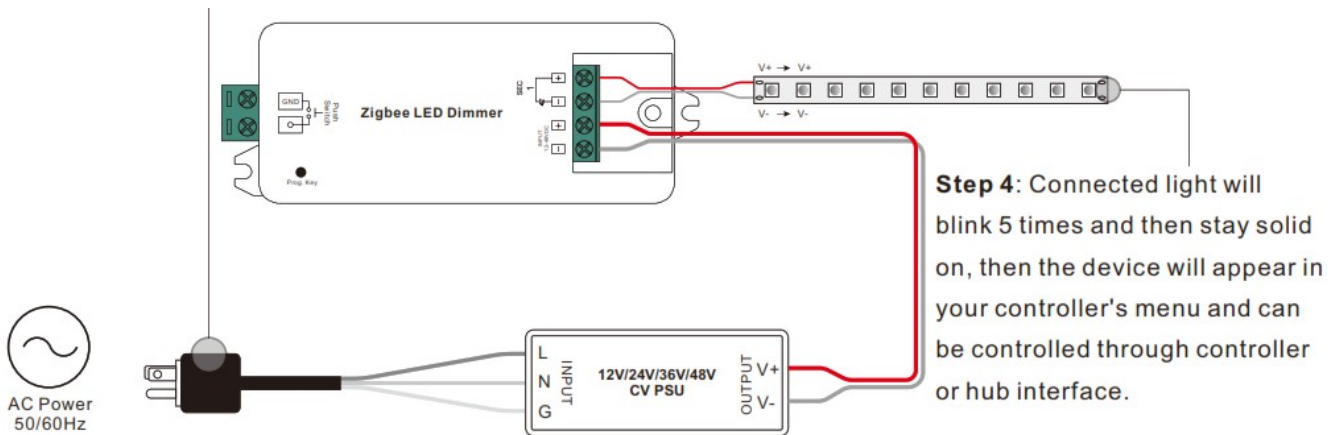- DO NOT expose the device to moisture.

Operation

1. Do wiring according to connection diagram correctly.
2. This ZigBee device is a wireless receiver that communicates with a variety of ZigBee compatible systems. This receiver receives and is controlled by wireless radio signals from the compatible ZigBee system.
3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)
   Step 1: Remove the device from previous zigbee network if it has already been added to, otherwise pairing will fail. Please refer to the part "Factory Reset Manually".

Step 2: From your ZigBee Controller or hub interface, choose to add lighting device and enter Pairing mode as instructed by the controller.
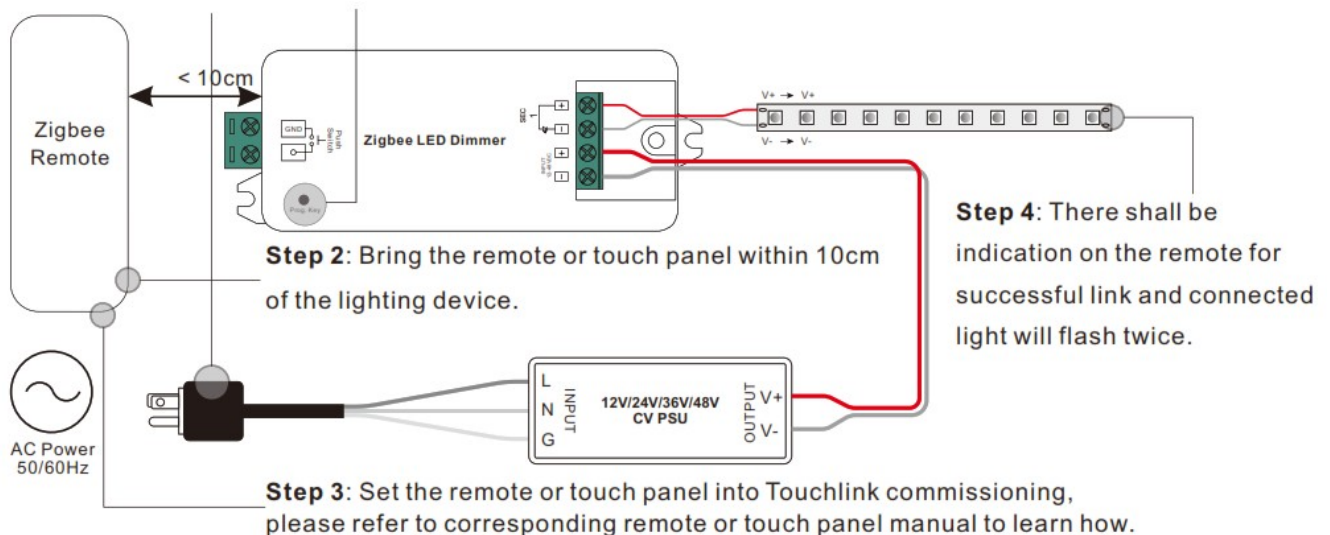
Step 3: power on the device, it will be set into network pairing mode (connected light flashes twice slowly), the network pairing mode will last until the device is added to a zigbee network.

Step 4: Connected light will blink 5 times and then stay solid on, then the device will appear in your controller's menu and can be controlled through controller or hub interface.

4. **TouchLink to a Zigbee Remote**

Step 1: Method 1: Short press "Prog" button (or re-power on the device) 4 times to start Touchlink commissioning immediately, 180S timeout, repeat the operation.

Method 2: If the device is already added to a network, it will be set into Touchlink commissioning immediately, 180S timeout. Once timeout, re-power on the device to set it into touchlink commissioning again.

Step 4: There shall be indication on the remote for successful link and connected light will flash twice.

Step 2: Bring the remote or touch panel within 10cm of the lighting device.

Step 3: Set the remote or touch panel into Touchlink commissioning, please refer to corresponding remote or touch panel manual to learn how.

Note:

1) Directly TouchLink (both not added to a ZigBee network), each device can link with 1 remote.

2) TouchLink after both added to a ZigBee network, each device can link with max. 30 remotes.

3) To control by both gateway and remote, add remote and device to network first then TouchLink.

4) After TouchLink, the device can be controlled by the linked remotes.

5. **Removed from a Zigbee Network through Coordinator or Hub Interface**
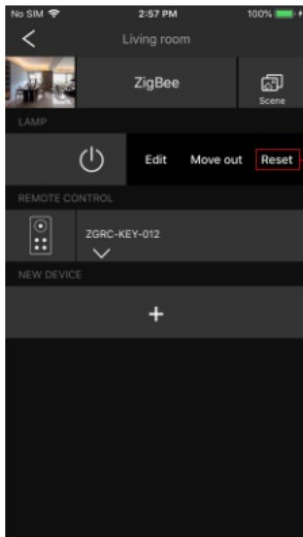
From your ZigBee controller or hub interface, choose to delete or reset the lighting device as instructed. The connected light blinks 3 times to indicate successful reset.
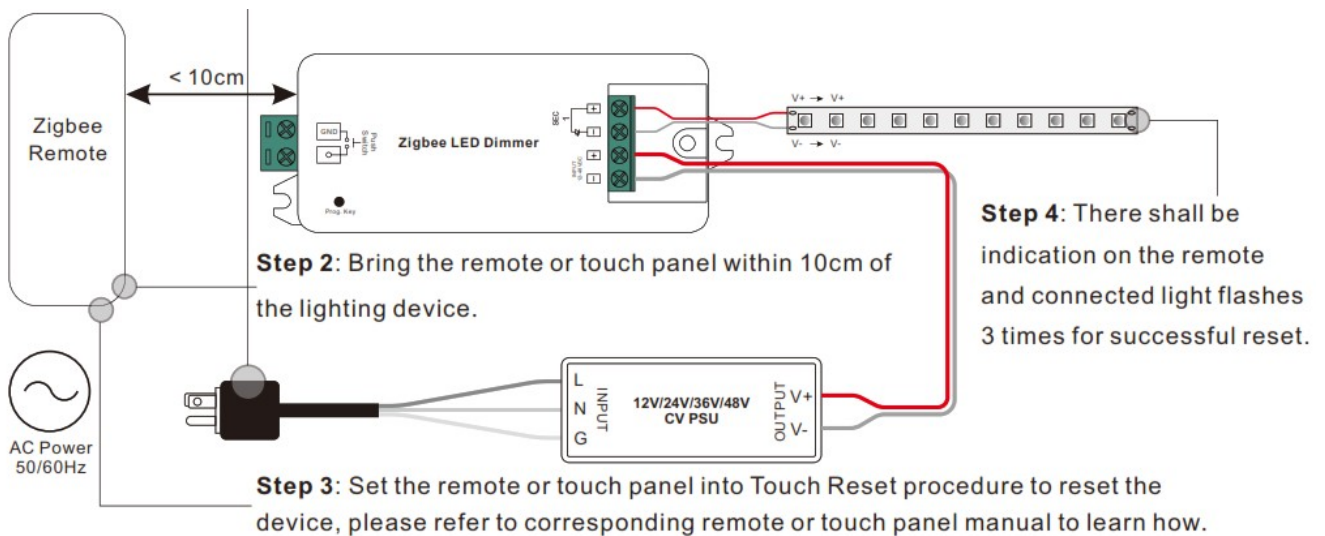
6. **Factory Reset Manually**

Step 1: Short press "Prog." key for 5 times continuously or re-power on the device for 5 times continuously if the "Prog." key is not accessible.

Step 2: Connected light will blink 3 times to indicate successful reset.
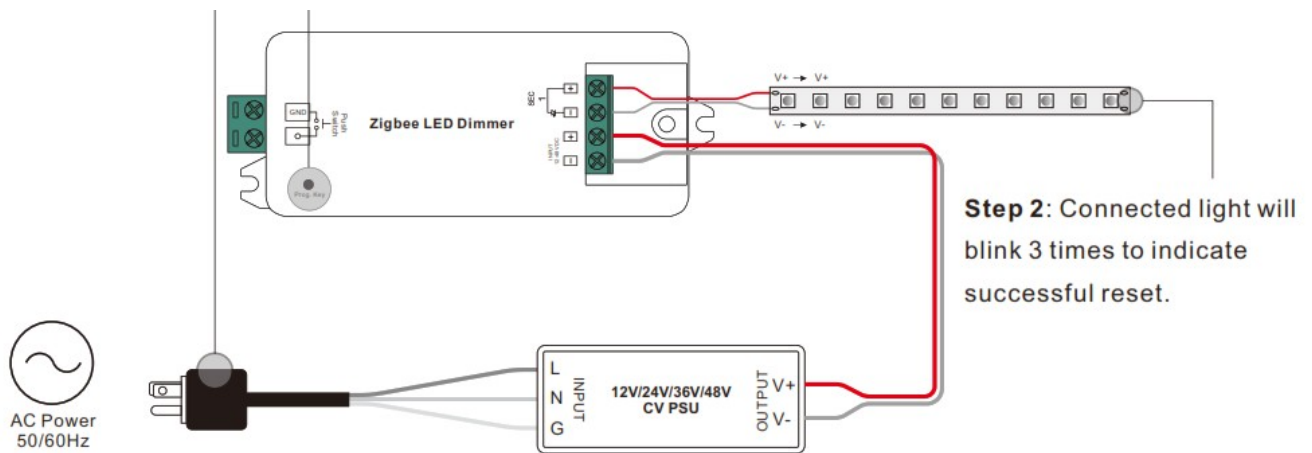
Note: All configuration parameters will be reset after the device is reset or removed from the network.

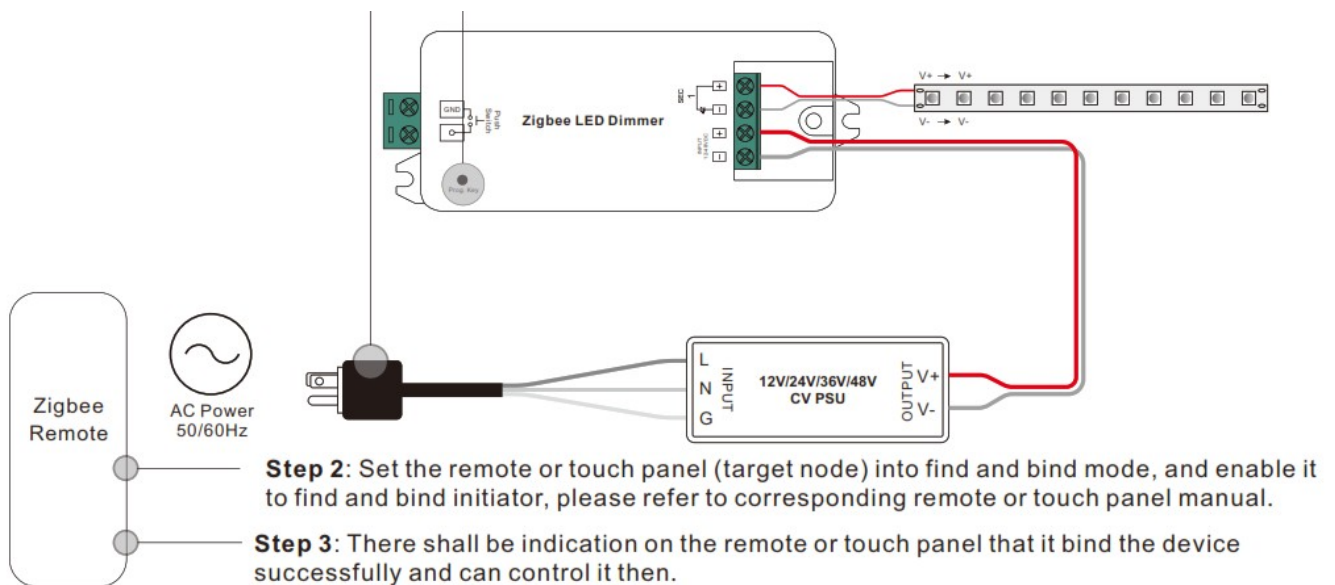7. **Factory Reset through a Zigbee Remote (Touch Reset)**

Step 1: Re-power on the device to start TouchLink Commissioning, 180 seconds timeout, repeat the operation.

Step 2: Bring the remote or touch panel within 10cm of the lighting device.

Step 4: There shall be indication on the remote and connected light flashes 3 times for successful reset.

Step 3: Set the remote or touch panel into Touch Reset procedure to reset the device, please refer to corresponding remote or touch panel manual to learn how.

Note: Make sure the device already added to a network, the remote added to the same one or not added to any network.
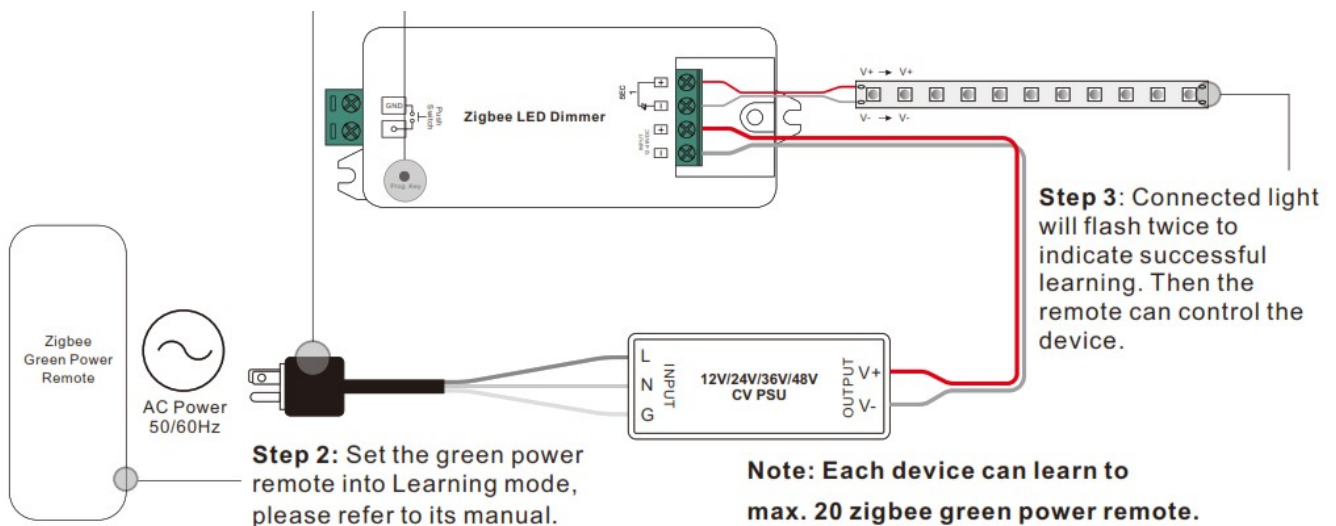
8. **Find and Bind Mode**

Step 1: Short press "Prog." button 3 times (Or re-power on the device (initiator node) 3 times) to start Find and Bind mode (connected light flashes slowly) to find and bind target node, 180 seconds timeout, repeat the operation.
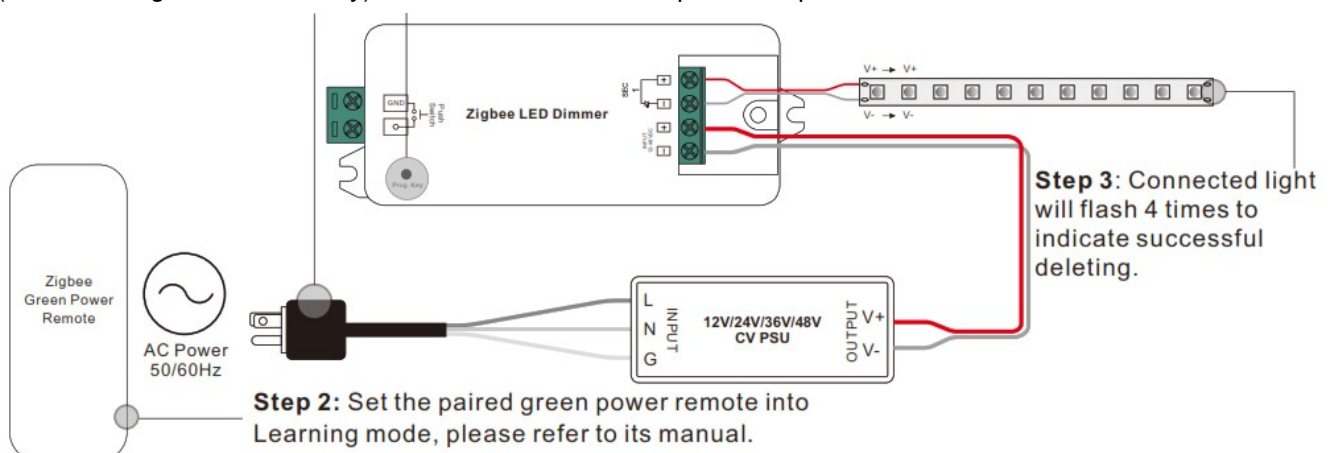
Step 2: Set the remote or touch panel (target node) into find and bind mode, and enable it to find and bind initiator, please refer to corresponding remote or touch panel manual.

Step 3: There shall be indication on the remote or touch panel that it bind the device successfully and can control it then.

9. **Learning to a Zigbee Green Power Remote**

Step 1: Short press "Prog." button 4 times (Or re-power on the device 4 times) to start Learning mode (connected light flashes twice), 180 seconds timeout, repeat the operation.


Step 3: Connected light will flash twice to indicate successful learning. Then the remote can control the device.

Step 2: Set the green power remote into Learning mode, please refer to its manual.

Note: Each device can learn to max. 20 zigbee green power remote.

10. **Delete Learning to a Zigbee Green Power Remote**

Step 1: Short press "Prog." button 3 times (Or re-power on the device 3 times) to start delete Learning mode (connected light flashes slowly), 180 seconds timeout, repeat the operation.

Step 3: Connected light will flash 4 times to indicate successful deleting.

Step 2: Set the paired green power remote into Learning mode, please refer to its manual.

11. **Setup a Zigbee Network & Add Other Devices to the Network (No Coordinator Required)**

Step 1: Short press "Prog." button 4 times (Or re-power on the device 4 times) to enable the device to setup a zigbee network (connected light flashes twice) to discover and add other devices, 180 seconds timeout, repeat the operation.
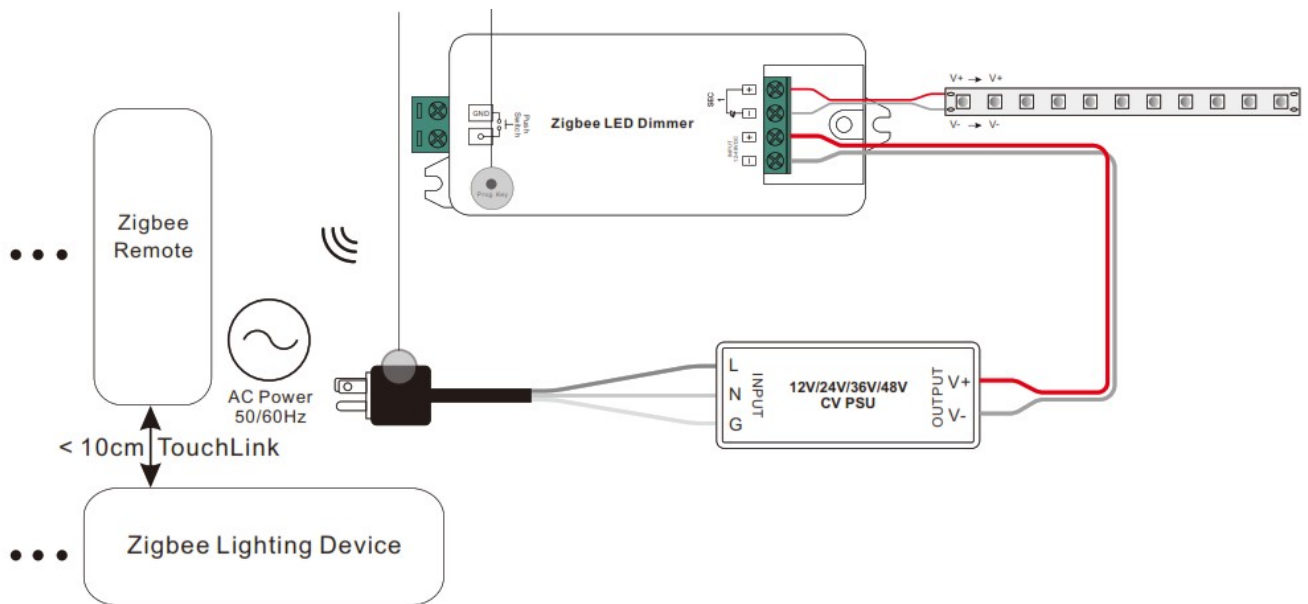
Step 2: Set another device or remote or touch panel into network pairing mode and pair to the network, refer to their manuals.

Step 3: Pair more devices and remotes to the network as you would like, refer to their manuals.

Step 4: Bind the added devices and remotes through Touchlink so that the devices can be controlled by the remotes, refer to their manuals.

Note:

1) Each added device can link and be controlled by max. 30 added remotes.

2) Each added remote can link and control max. 30 added devices.

12. ZigBee Clusters the device supports are as follows:

Input Clusters

• 0x0000: Basic

• 0x0003: Identify

• 0x0004: Groups

• 0x0005: Scenes

• 0x0006: On/off

• 0x0008: Level Control

• 0x0b05: Diagnostics

Output Clusters

• 0x0019: OTA

13. OTA

The device supports firmware updating through OTA, and will acquire new firmware from zigbee controller or hub every 10 minutes automatically.
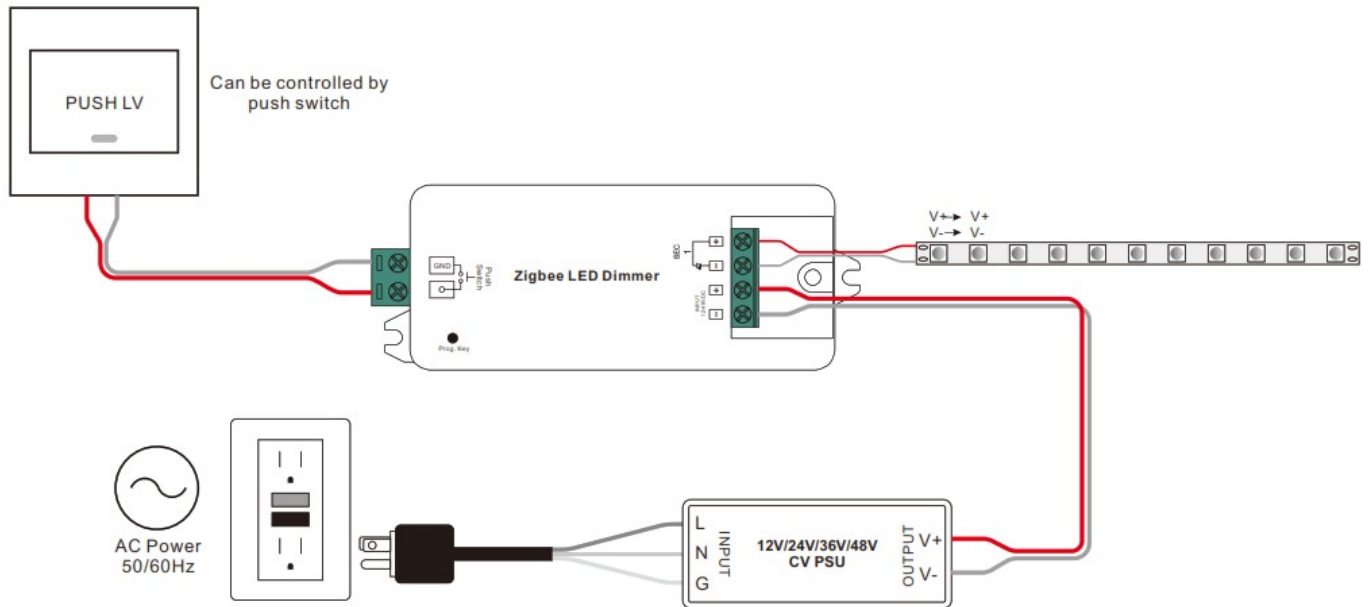
14. Controlled by a push switch:

Once connected with a push switch, click the push switch to switch ON/OFF, press and hold down it to increase/decrease light intensity.

Product Dimension
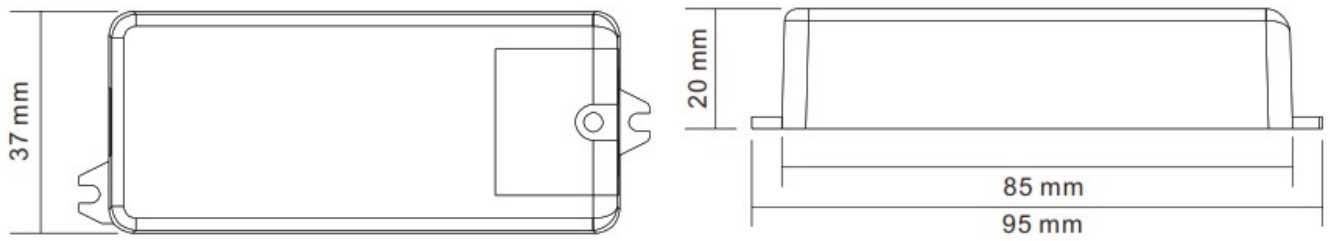
Wiring Diagram

Documents / Resources

Zigbee SR-ZG9101CS LED Controller [pdf] Instructions
SR-ZG9101CS LED Controller, SR-ZG9101CS, LED Controller, Controller

References

- **User Manual**