







## FS Fast Connectors SC UPC/APC 90-100mm User Guide


[Home](#) » [FS](#) » FS Fast Connectors SC UPC/APC 90-100mm User Guide 

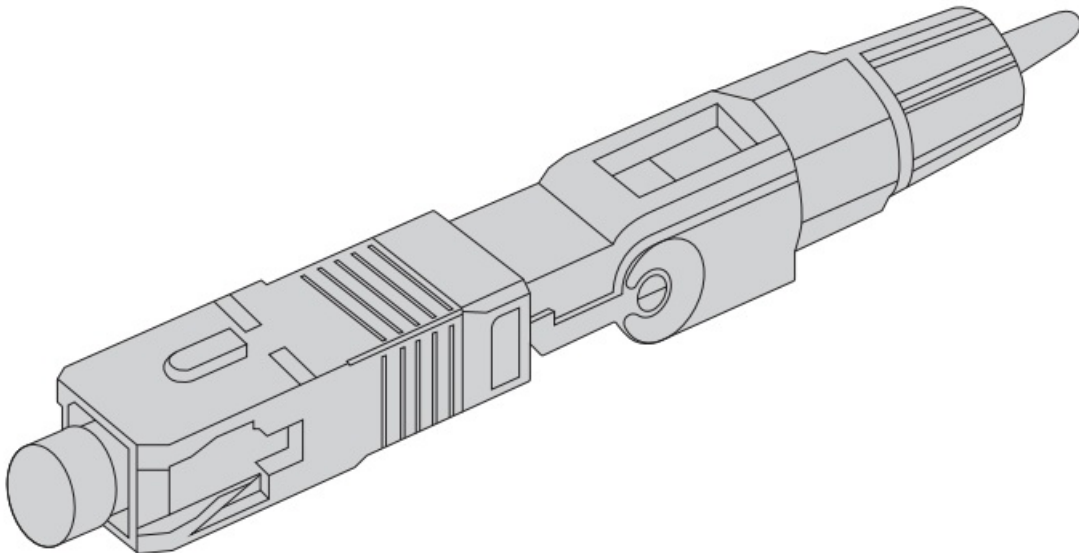


**SC UPC/APC FIELD ASSEMBLY CONNECTORS**  
**Quick Start Guide**  
**V2.0**

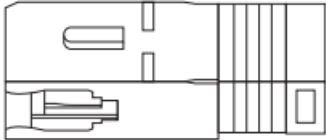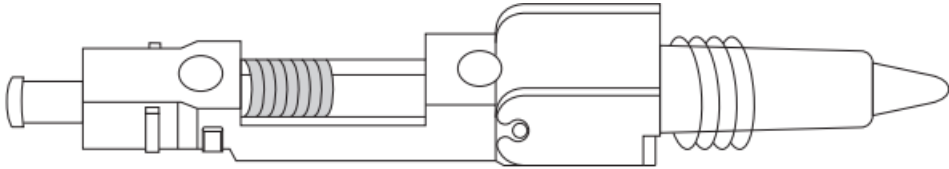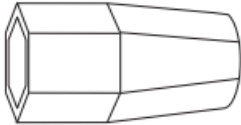	SC housing
	Fast connector
	Screw cap


**Optional (Not Included)**

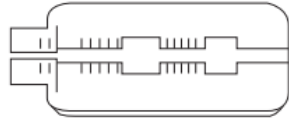


x1

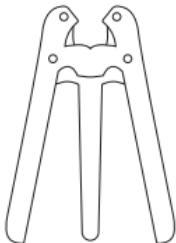


x1



x1

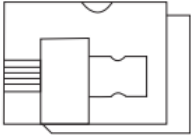


x1

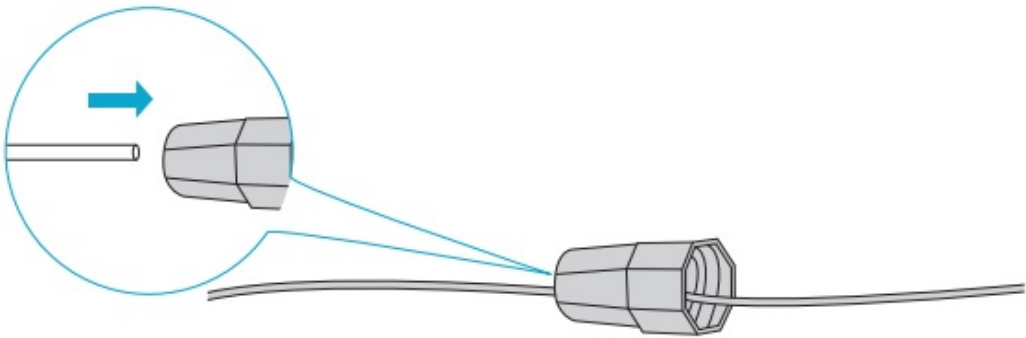

**Over 30mm**


**25 mm**

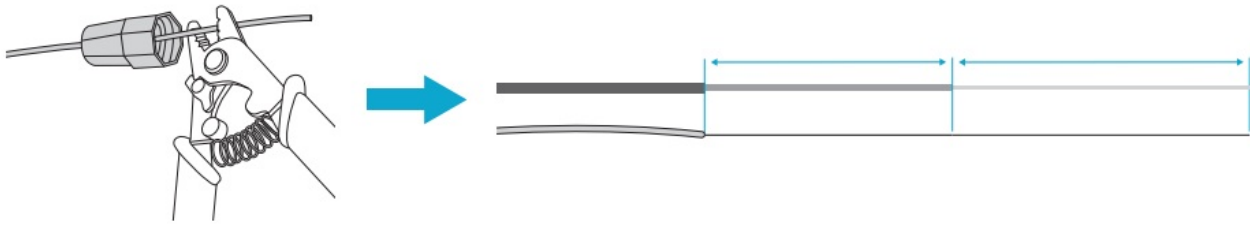


**Tight Buffer ( $\phi 900\mu\text{m}$ ) ( $\phi 250\mu\text{m}$ ) ( $\phi 125\mu\text{m}$ )**

**NOTE:**


1. Strip off the  $900\mu\text{m}$  tight buffer to  $250\mu\text{m}$  and  $125\mu\text{m}$  as shown above.
2. Clean the fiber after stripping.

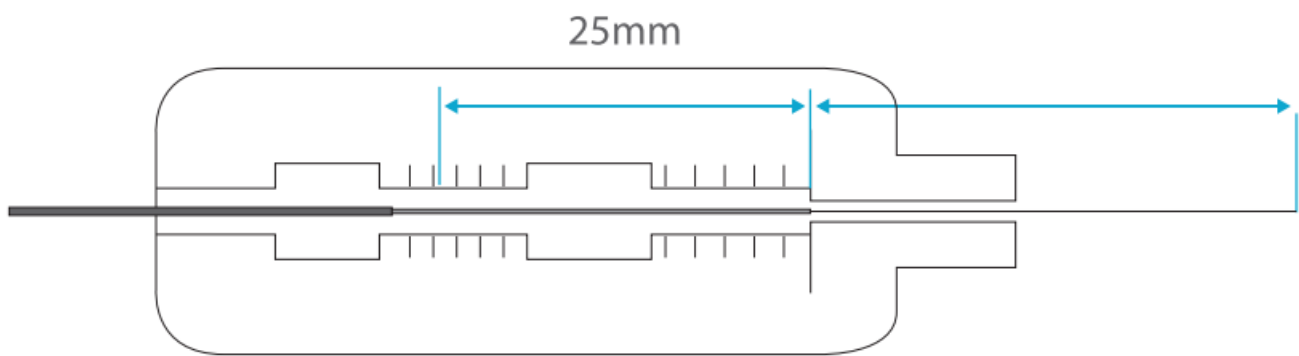


**Length Fixed Instrument**

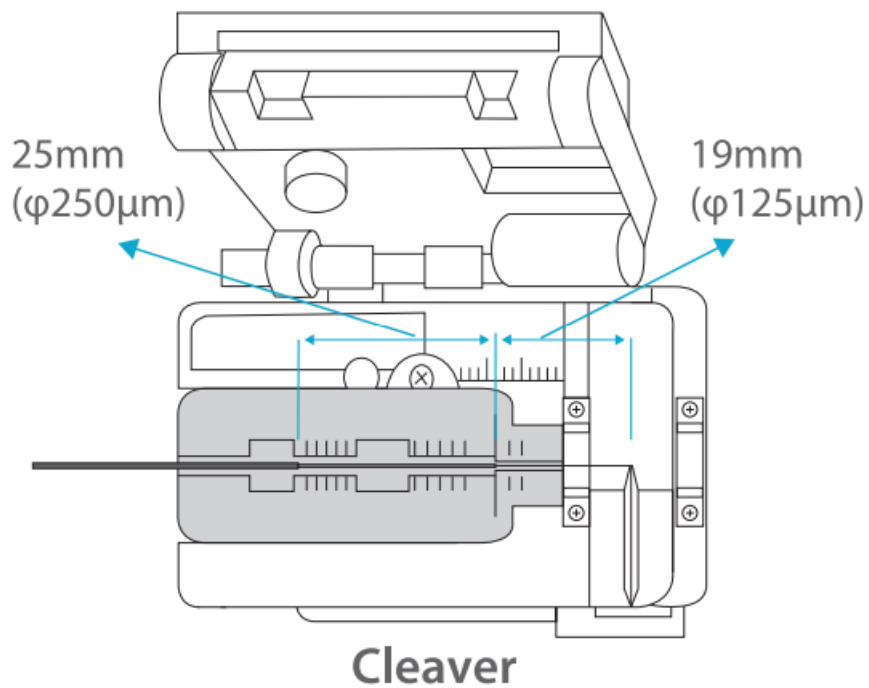

**NOTE:** Cut the bare fiber of  $125\mu\text{m}$  to be 19mm with a cleaver and check the length.

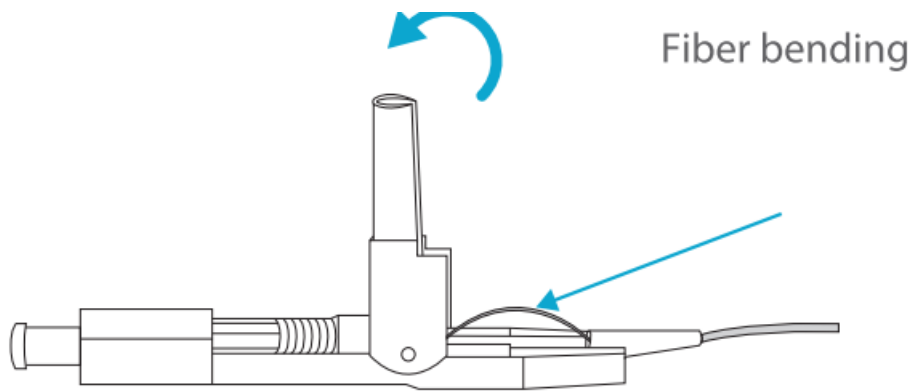


**NOTE: Do not break the fiber**

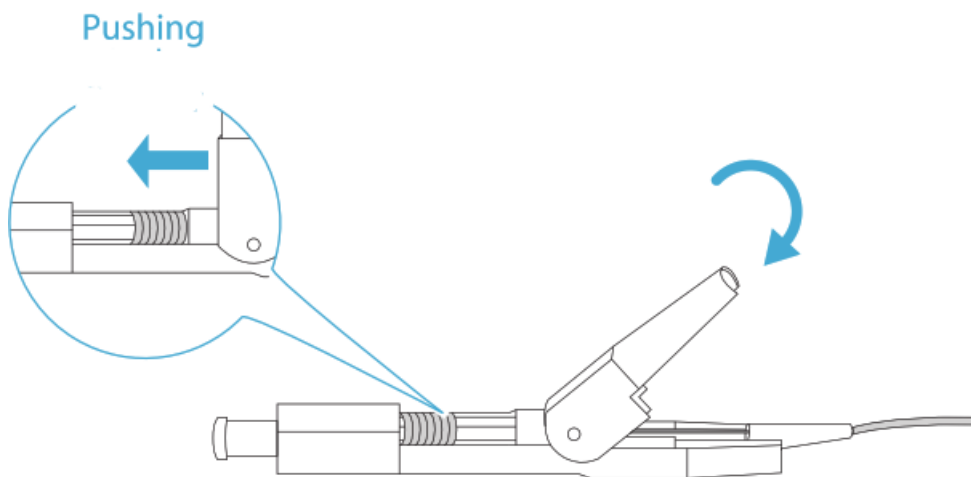

**NOTE:**

1. Push the yellow cover towards the top to lock the fiber
2. If you need to reassemble the fiber, pull the yellow cover in reverse with procedure 7. Then pull out the fiber and reassemble.

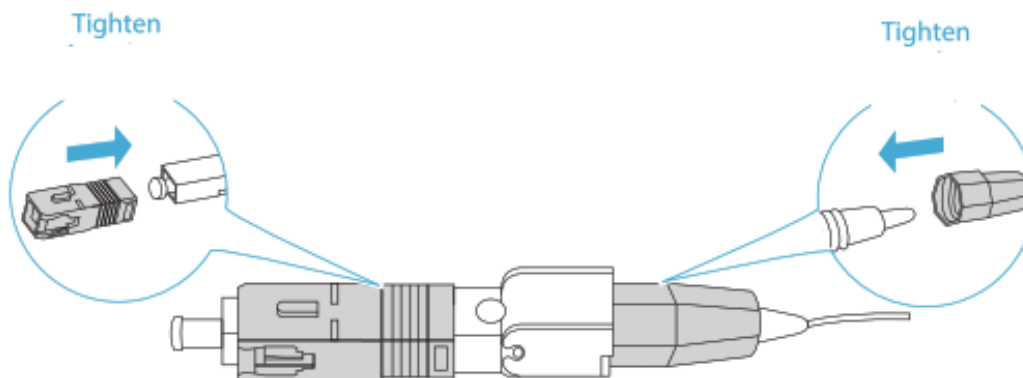

**NOTE:** Tighten the housing and the screw cap, then the fiber cannot be reassembled.



Contents

[1 Documents /](#)

[Resources](#)

[2 Related Posts](#)

Documents / Resources

  <small>SC UPC/APC FIELD ASSEMBLY CONNECTORS SC UPC/APC FIELD ASSEMBLY CONNECTORS FOR THE FIBER OPTIC CONNECTORS &amp; ASSEMBLY GUIDE FOR SC UPC/APC Quick Start Guide  Quick Start Guide Quick Start Guide</small>	<p><a href="#">FS Fast Connectors SC UPC/APC 90-100mm</a> [pdf] User Guide</p> <p>FS, Fast, Connectors, SC, 90-100mm, UPC, APC</p>
---	--

Manuals+.