

PZ C-3030 Running Boards



## PZ C-3030 Running Boards Installation Guide


[Home](#) » [PZ](#) » PZ C-3030 Running Boards Installation Guide 

### Contents

- [1 PZ C-3030 Running Boards](#)
- [2 Tools Required](#)
- [3 Step 1](#)
- [4 Step 2](#)
- [5 Step 3](#)
- [6 Step 4](#)
- [7 Part List](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



**PZ C-3030 Running Boards**

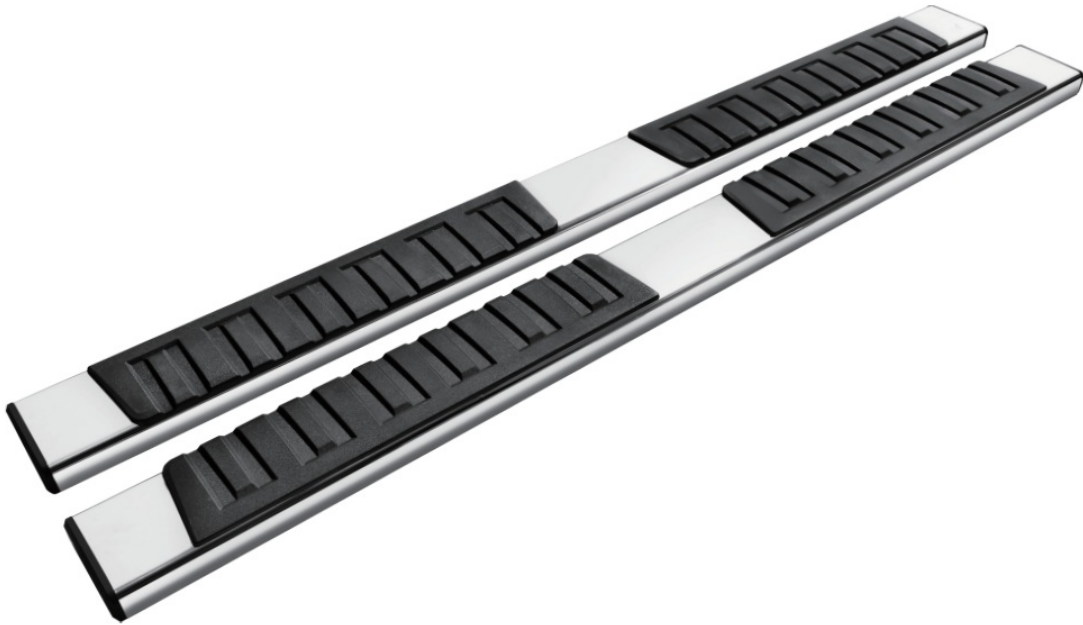

## Tools Required


- 13mm Socket
- Ratchet
- Torque Wrench

## Notes

- Read this instruction carefully before starting installation.
- Proper tools will improve the quality of installation and reduce the time required.
- If missing parts or any damage found, please take a picture, and contact us.

## Step 1

1. Locate three mounting positions on each side.
2. Carefully clean the factory paint on the studs before installation. Do not use power tools.

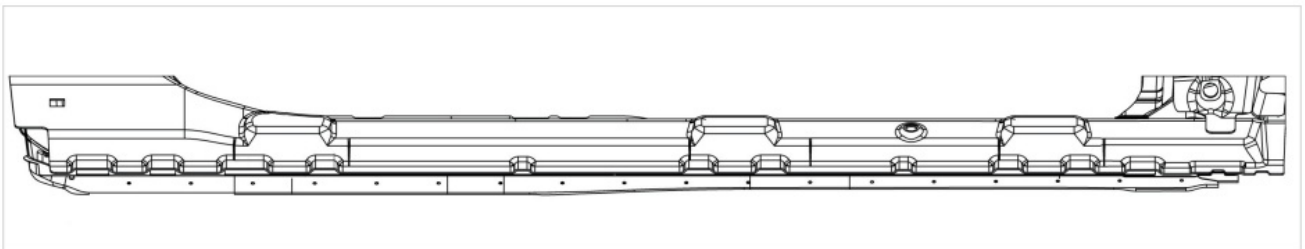


Driver Left Side

→ Front


## Step 2

1. Attach the bracket to the rocker panel, feed factory studs through the holes on the bracket.
2. Secure with (3) M8 flat washers, (3) M8 lock washers, (3) M8 hex nuts.
3. Repeat to install all brackets. Do not fully tighten.

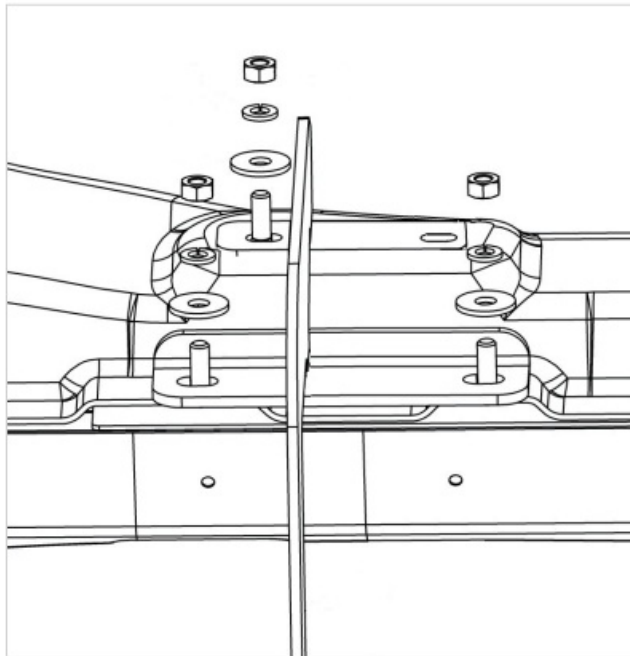


### Step 3

1. Remove (6) M8 hex bolts and (6) M8 flat washers from the back of the step bar.
2. Slide mounting tracks to proper positions.
3. With assistance, lift and attach the step bar to brackets. Secure the step bar on brackets with (6) M8 hex bolts and (6) M8 flat washers.
4. Repeat to install the other side step bar. Do not fully tighten.

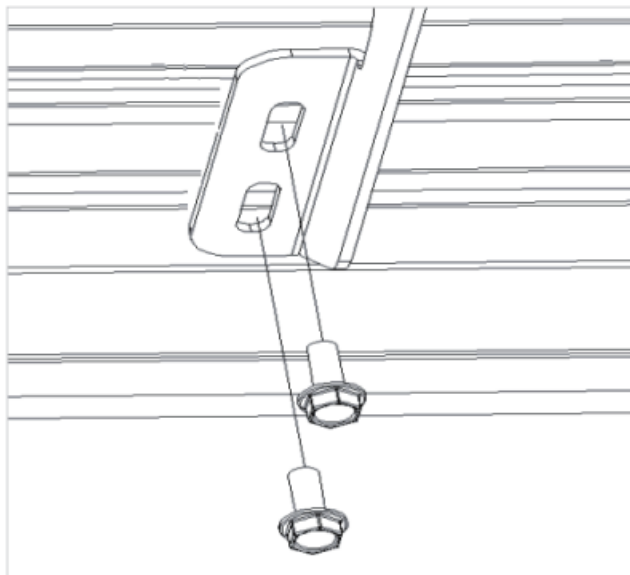

### Step 4

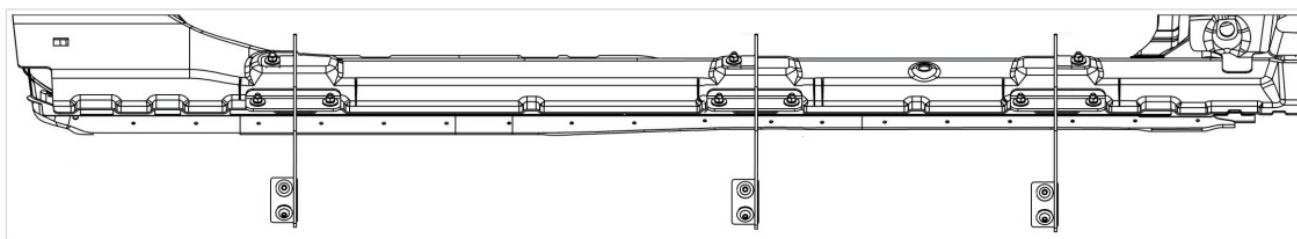



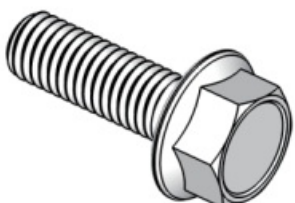

1. Tighten M8 hex nuts on vehicle with 15 ft. lbs. torque.
2. Adjust the step bar to level and tighten M8 hex bolts with 15 ft. lbs. torque.
3. After the step bar installed, periodic check to ensure all mounting hardware remains secure and tight.




Driver Left Side

→ Front
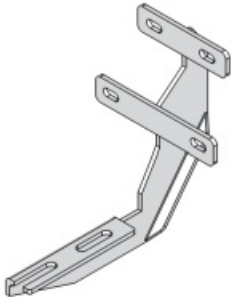
## Part List

			
Bracket	× 6	M8 Flat Washer	× 18
			
M8 Lock Washer	× 18	M8 Hexagon Nut	× 18
			
M8 Hexagon Bolt (on step bar)	× 12	M8 Flat Washer (on step bar)	× 12

<div><div>Installation &amp; CARE</div><div>C-3030</div><div><p>Read the manual and fully follow safety warnings. Otherwise, you may be injured or damaged property may occur. Please read the manual before using the product and keep it handy for future reference.</p><p>- 1 -</p></div></div>	<p><a href="#">PZ C-3030 Running Boards</a> [pdf] Installation Guide</p> <p>C-3030 Running Boards, C-3030, Running Boards, Boards</p>
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.