

AAMP P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express Instruction Manual

Home » AAMP » AAMP P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express Instruction Manual

Contents

- 1 AAMP P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express
- **2 WHAT'S INCLUDED**
- **3 TOOLS REQUIRED**
- 4 Installations
- **5 Contact Information**
- 6 Documents / Resources
- **7 Related Posts**



AAMP P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express



WHAT'S INCLUDED

• Vehicle Specific Wire Harness (P-BUA-EXPRESS)

COMPATIBLE ACCESSORIES

• 97dB Backup Alarm (BUA-97C)

TOOLS REQUIRED



- 1. 10mm Nut-setter
- 2. Impact Drill

- 3. Panel Removal Tool
- 4. Pry Bar
- 5. Fish Tape

Installations


• STEP 1:

Remove the body grommet that is located beneath the driver-side rear corner of the vehicle with a panel removal tool



• STEP 2:

Use a pry bar to push aside the composite material (A.) that is blocking the cavity (B.) behind the grommet

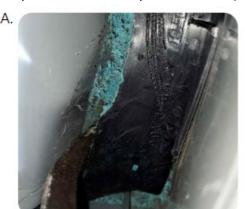



• STEP 3:

Locate the OEM tail lamp connector in the rear corner on the driver's side of the vehicle. Unplug the OEM connector and install the P-BUA-EXPRESS harness between the OEM connectors.



• STEP 4:

Use fish tape to route the 2-pin connector of the harness down the C-Pillar and through the grommet cavity opening



• STEP 5:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle **Note:** (2) 10mm TEK screws are provided with the compatible backup alarm



• STEP 6:

Plug the backup alarm connector into the mating connector on the P-BUA-EXPRESS harness and re-install the grommet.



• STEP 7:

Test the backup alarm.

Contact Information

Phone – 866-931-8021 (option 3) E-Mail – <u>support@aampglobal.com</u>.

AAMP Commercial is a Power Brand of AAMP Global <u>aampcommercial.com</u>.

Documents / Resources



AAMP P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express [pdf] Instruction Manual

P-BUA-EXPRESS, Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express, P-BUA-EXPRESS Wiring Harness for Backup Alarm 2014 to 2022 Chevrolet Express

Manuals+,