Home » ACI » ACI 2022 Splash Guard Mud Flaps Toyota Tundra Offset Mud Flaps Instruction Manual

ACI 2022 Splash Guard Mud Flaps Toyota Tundra Offset Mud **Flaps Instruction Manual**





Contents

- 1 2022-ON TOYOTA TUNDRA INSTALLATION **INSTRUCTIONS**
 - 1.1 PREPARATION
 - 1.1.1 MUD FLAP COMPONENTS
 - 1.1.2 TOOLS NEEDED
 - 1.2 PARTS & FASTENER MOUNTING DIAGRAM
 - 1.3 1: PREPARING FOR INSTALLATION
 - 1.4 2: INSTALLING MUD FLAPS TO FRONT
 - 1.5 3: INSTALLING MUD FLAPS TO REAR
 - **1.6 SAFETY AND MAINTENANCE**
 - 1.7 MANUFACTURER'S LIMITED WARRANTY
- 2 Documents / Resources
 - 2.1 References
- **3 Related Posts**

2022-ON TOYOTA TUNDRA INSTALLATION INSTRUCTIONS

Thank you for purchasing this set of two ROCKSTARTM Splash Guard Mud Flaps. Agri-Cover, Inc. proudly manufactured these mud flaps using superior quality materials and workmanship. With proper care, your mud flaps will provide years of service and enjoyment.

NOTICE TO INSTALLER: Even if familiar with product, read instructions prior to installation as improvements may be made without notice. Always handle components with care. If you have questions or problems, call customer service. When done, these instructions must be given to the consumer.

NOTICE TO CONSUMER: Before using this product, read safety and maintenance section of these instructions. Save these instructions for future reference.

FOR YOUR RECORDS

DATE PURCHASED:	
WHERE PURCHASED:	



PREPARATION

Unpack set of two mud flaps with components. Clean vehicle wheel wells. For additional assistance, go to **rockstarmudflaps.com** for install video.

MUD FLAP COMPONENTS

- (2) Mud flaps
- (2) #10 x 1-1/4" Self-drilling hex screws (Rear only)
- (2) #10 Flat washers (Rear only)
- (10) #14 x 1-1/4" Truss head screws
- (2) 1/4" x 1-3/4" Hex bolts (Rear only)
- (2) 1/4" Lock washers (Rear only)
- (2) 1/4" Flat washers (Rear only)
- (2) 1/4" Serrated flange nuts (Rear only)

TOOLS NEEDED

- Power drill/ratchet
- 8 mm, 10 mm and 7/16" socket
- Phillips screwdriver
- Cutting tool
- Level
- · Protective eyewear

NOTE: Hardware components and appearance may vary.



CAUTION: Over tightening hardware may damage components.


CAUTION: Ensure all mounting hole sides are free of wiring, mechanical parts and are structurally sound.



CAUTION: Always exercise caution when using a cutting tool.

PARTS & FASTENER MOUNTING DIAGRAM

NOTE: Mud flaps may be purchased with or without pre-installed trim plates (not pictured). Trim plates are also available for purchase as an accessory.

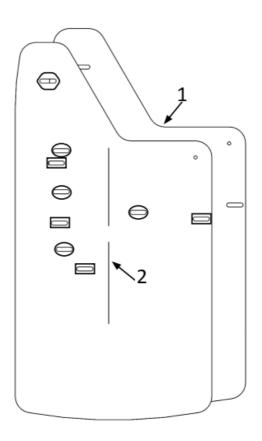

- 1. Mud flaps
- 2. Score line (for rear mud flaps only)
- ☐ Front mud flap installation
- O Rear mud flap installation
- O Front and rear mud flap installation

#10 x 1-1/4" Self-drilling hex screws

#14 x 1-1/4" Truss head screws

1/4" x 1-3/4" Hex bolts

1: PREPARING FOR INSTALLATION


- A. Park on level ground with firm surface.
- B. Check free space behind front tires when fully turned. Ensure enough space and clearance to accommodate 5/16" thick mud flaps.



NOTE: If trim plates are pre-installed, face them toward tailgate during installation.

C. To install mud flaps, perform one of the following:

- See Step 2 for front wheel well installation
- See Step 3 for rear wheel well installation

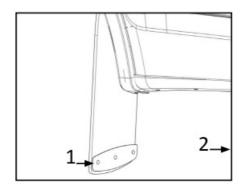


- 1. Trim Plate
- 2. Tailgate

2: INSTALLING MUD FLAPS TO FRONT

NOTE: Front mud flap installation uses 5 holes per mud flap, see PARTS DIAGRAM (page 3) for locations.


A. Use 10 mm socket to remove (5) lower factory screws indicated in adjacent image.

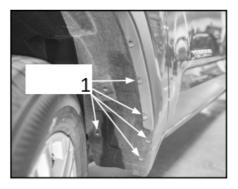

1. Lower factory screws

B. Install mud flap with (5) truss head screws through inner, 1st, 3rd, 5th, and 7th slotted holes into newly free holes in wheel well. Leave screws loose for now.

- C. Level mud flap while adjusting placement to obtain best fit then tighten screws to hold in place.
- D. Repeat for remaining front mud flap.

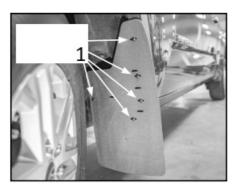


1. Inner, 1st, 3rd, 5th and 7th slotted hole


3: INSTALLING MUD FLAPS TO REAR

NOTE: Rear mud flap installation uses 5 mounting holes per mud flap, see PARTS DIAGRAM for locations.

A. Using adjacent image as a guide, cut mud flap on score line.

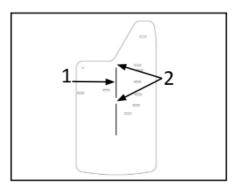


- 1. Score line
- 2. Cut here
- B. Using adjacent image as a guide, remove plastic insert with cutting tool and (3) lower factory screws with 10 mm socket.

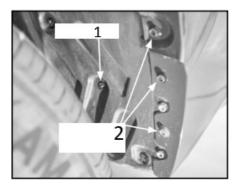


- 1. Plastic insert
- 2. Lower factory screws


C. Position mud flap with the inner half behind wheel well.

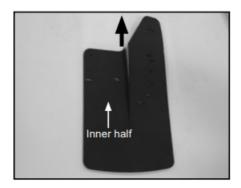

- D. Install mud flap with (3) truss head screws through 2nd, 4th and 6th slotted holes into newly free holes in wheel well. Leave screws loose for now.
- E. Install $1/4" \times 1-3/4"$ hex bolt with lock washer and flat washer in plastic insert hole and mud flap, secure with serrated flange nut. Leave bolt loose for now.
- F. Level mud flap while adjusting placement to obtain best fit, then tighten screws and bolt to hold in place.
- G. Install self-drilling screw and flat washer in top slotted hole of mud flap.
- H. Repeat for remaining rear mud flap.

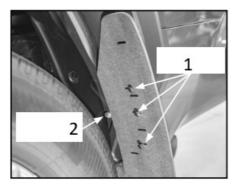

- 1. 2nd, 4th and 6th slotted holes
- 2. Plastic insert hole

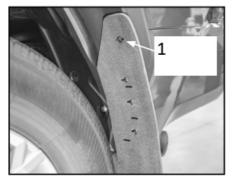

1. Self-drilling screw with flat washer

SAFETY AND MAINTENANCE

The operator can perform most of inspection and maintenance. It may be necessary to review the installation instructions.

- Periodically check all screws, bolts, washers and nuts, retighten if needed.
- If mud flap has been damaged, replace with new one.

NOTE: Inspection and/or maintenance should be performed anytime a malfunction is observed or suspected. If you need assistance inspecting and/or servicing your mud flaps, call customer service at 888-568-3709. Always use original equipment replacement parts for your mud flaps.

MANUFACTURER'S LIMITED WARRANTY

Agri-Cover, Inc. extends the following (1) year Limited Warranty for the ROCKSTAR™ Splash Guard Mud Flaps:

Agri-Cover, Inc. warrants a period of one (1) year from the date of manufacture that its ROCKSTAR™ Splash Guard Mud Flaps are free from defects in workmanship, under normal use for the truck model it was intended for. This Limited Warranty does not cover any damage due to accident, abuse, misuse, alteration, neglect, improper installation, or ordinary wear and tear.

Agri-Cover, Inc.'s sole obligation under this Limited Warranty is limited to the repair or replacement at its option, of defective parts only. No labor or service allowance is given or implied. IN NO EVENT SHALL AGRI-COVER, INC. BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES. AGRI-COVER, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE LIMITED WARRANTY DESCRIPTION CONTAINED HEREIN.

For warranty, have serial number ready and fill out the warranty claim form at agricover.com/warrantyclaim or call Customer Service Department at 888-568-3709 to determine if only a replacement part is needed or if the mud flaps needs to be returned for inspection and repair. Goods to be returned must have a pre-authorized RA # (Return Authorization Number) – obtained by calling the number above. Mark the number on the package and ship it freight prepaid to address below. Agri-Cover, Inc. will pay freight to return goods to sender.

This Limited Warranty gives you specific legal rights and you may have other rights, which vary, from state to state.

For replacement parts shop at <u>rockstarmudflaps.com</u> or call Customer Service at 888-568-3709.



Agri-Cover, Inc. Customer Service Dept 3000 Hwy 281 SE Jamestown, ND 58401

Phone: 888-568-3709

Hours: 8:00 am - 5:00 pm CST Monday through Friday, except Holidays

© 2022 AGRI-COVER, INC. ALL RIGHTS RESERVED.

Product subject to change without notice. Patents: <u>agricover.com/patents</u>.

031422 4007098

Documents / Resources



ACI 2022 Splash Guard Mud Flaps Toyota Tundra Offset Mud Flaps [pdf] Instruction Manual 2022 Splash Guard Mud Flaps Toyota Tundra Offset Mud Flaps, 2022, Splash Guard Mud Flaps Toyota Tundra Offset Mud Flaps, Tundra Offset Mud Flaps, Tundra Offset Mud Flaps, Offset Mud Flaps, Mud Flaps, Flaps

References

- ACI Truck Bed Covers | Pickup Truck Bed Cover & Tarp | Agri-Cover Lineup
- ACI Agri-Cover Patents | Access, Ag, Trailseal & SnowSport
- ACI Agricover.com | Warranty Claim
- Mud Flaps Lineup | Best Fit Towing Protection, Hitch Mounted, Full Width, Behind Wheel

Manuals+,