

Ajax Online B07YL4L498 Smart WIFI Roller Installation Guide

Home » Ajax Online » Ajax Online B07YL4L498 Smart WIFI Roller Installation Guide 🖺



Contents

- 1 Ajax Online B07YL4L498 Smart WIFI
- 2 Smart WIFI Roller Blind Installation
- **3 IMPORTANT STEP**
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**



Ajax Online B07YL4L498 Smart WIFI Roller



Smart WIFI Roller Blind Installation

Tools Required: Pencil, Philips Screwdriver Drill & Drill bit

1. Hook the template onto the chain. Now align the template against the wall, whilst ensuring there is enough tension against the chain and sponge.



2. Now use a pencil to mark the holes for the screws. If you're installing the motor on the left of the the window use the "L" marking and "R" marking to install on the right




3. Now drill into the markings to create holes for the screws Now screw the bracket onto the wall.



4. Insert the correct wheel in the motor. Now hook the chain around the wheel.



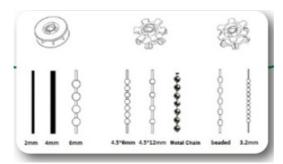

5. Now clip the cover onto the motor and then slide the motor into the bracket, whilst making sure the chain has enough tension. Make sure the chain isn't too tight.



6. To change your motor direction, press & hold the "UP" button for 6 seconds until the LED flashes to confirm.



IMPORTANT STEP

1. Upper & Lower Blind Settings Draw the blind to your desired upper height with the "UP" arrow button. Press & hold down the "STOP" button for 6-8 seconds. The LED will flash to confirm. Now lower the blind to your desired bottom height with the "DOWN" arrow button & then press the "STOP" button.



2. To restore to factory settings, press & hold the UP and DOWN arrow for 5-8 sec. until the LED flashes. To release the motor off the bracket, push the button underneath the motor



Documents / Resources



Ajax Online B07YL4L498 Smart WIFI Roller [pdf] Installation Guide B07YL4L498, Smart WIFI Roller, B07YL4L498 Smart WIFI Roller

References

• Smart Home Automation - Ajax Online - Make your Home Smarter

Manuals+, home privacy