

**AJAX
7517
Supercast
Round
Double
Ended Bath**



AJAX 7517 Supercast Round Double Ended Bath Installation Guide

[Home](#) » [ajax](#) » AJAX 7517 Supercast Round Double Ended Bath Installation Guide 

Contents

- [1 AJAX 7517 Supercast Round Double Ended Bath](#)
- [2 Specifications](#)
- [3 FAQs](#)
- [4 OVERVIEW](#)
- [5 Panel fitting instructions](#)
- [6 Tools required – not supplied](#)
- [7 Panel fitting instructions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

AJAX

AJAX 7517 Supercast Round Double Ended Bath




Specifications

- **Manufacturer:** UK-made
- **Year:** 2018
- **Guarantee:** 2 years


FAQs

- **Q: What should I do if I need to cut the panels due to water pipes?**
 - **A:** If cutting is necessary, ensure to follow the recommended guidelines. Trim at the wall side only and make sure both panels are set vertically with the end panel behind the front panel at the corner joint.
- **Q: How should I secure the panel to the wall?**
 - **A:** Use a piece of timber and rebated blocks set at equal distances apart to secure the panel. You can then use small mirror screws, Velcro, or magnetic strips for a neat and secure fit.

OVERVIEW

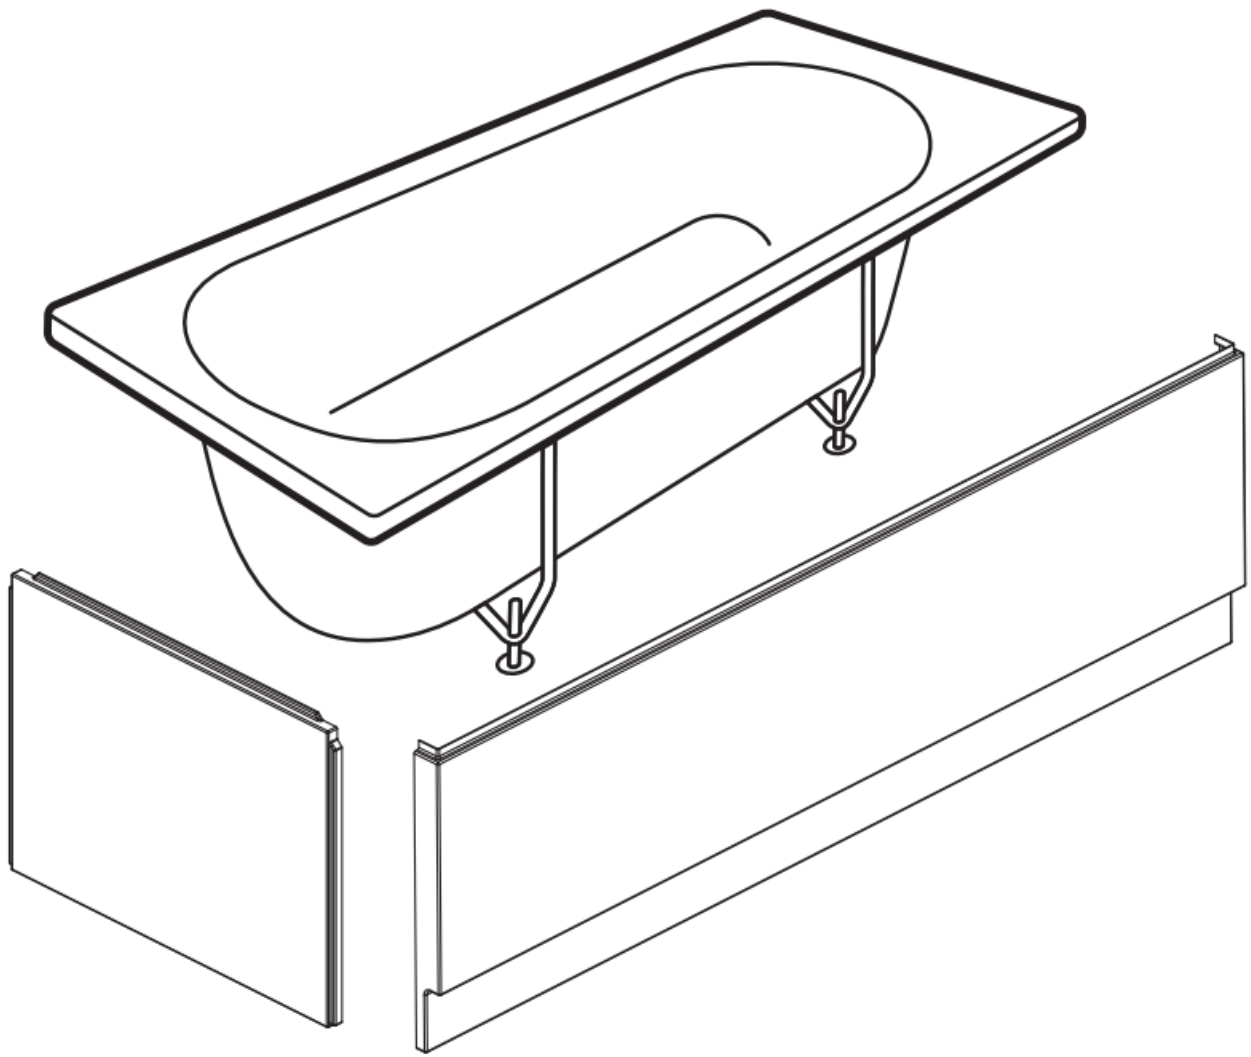

Panel fitting instructions

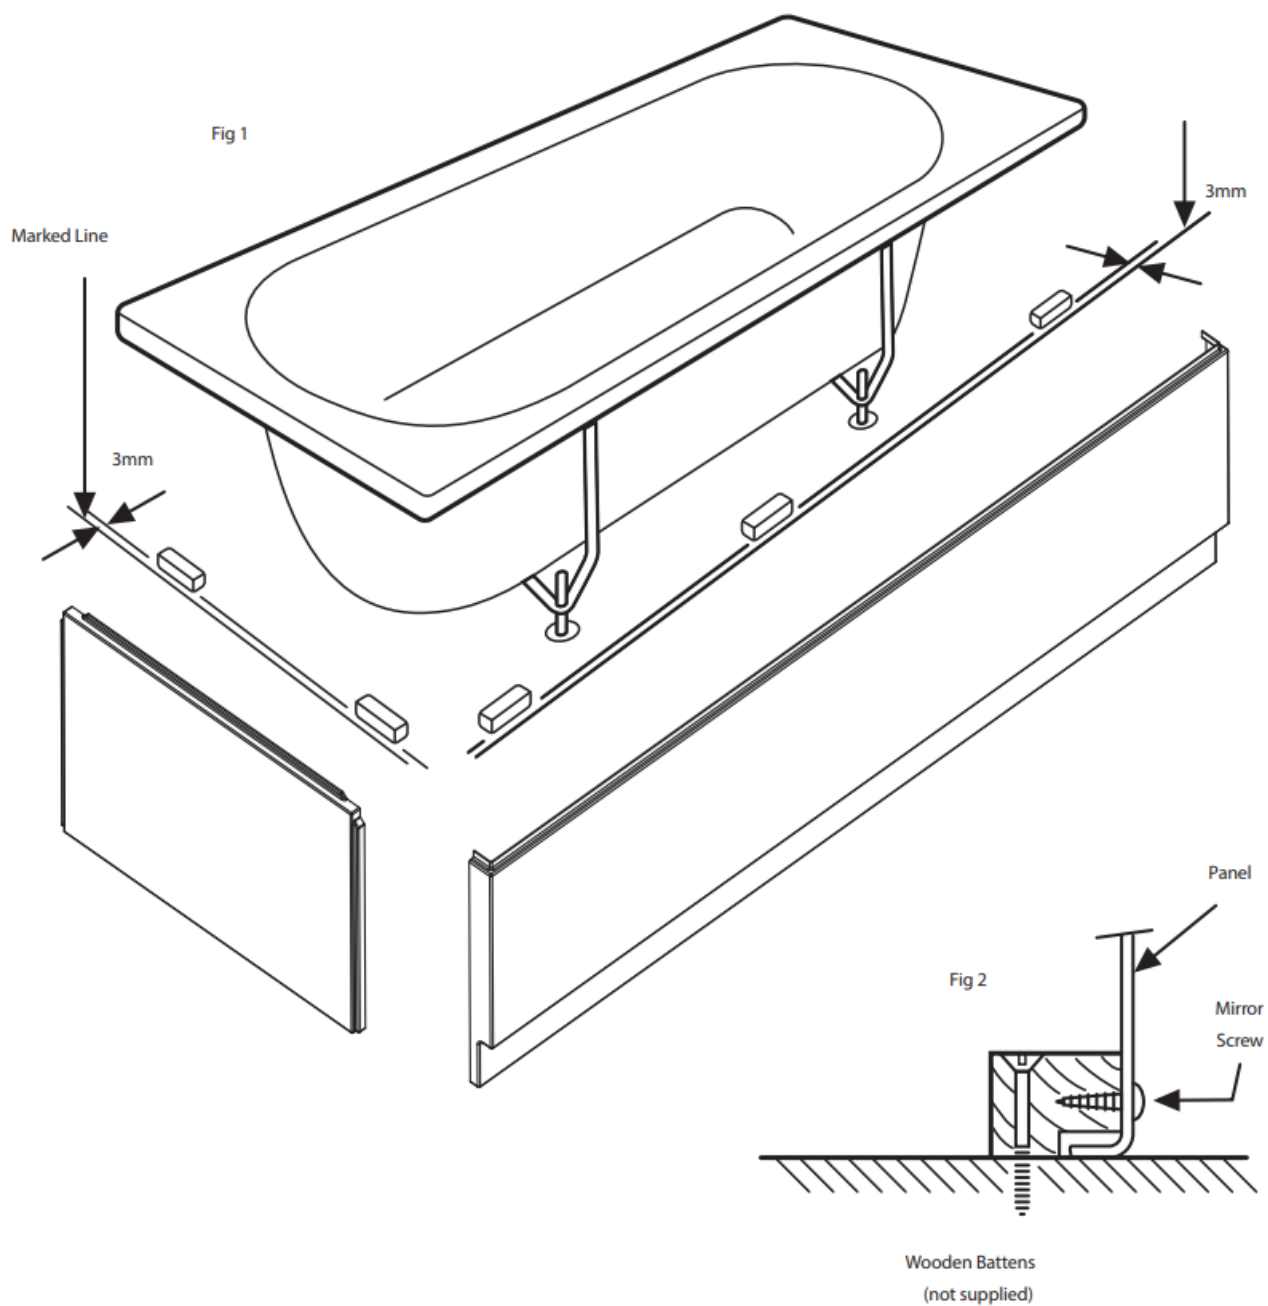

Before you start

- Before fixing panel remove All protective covering and examine carefully. The polythene film must be removed in full and the panel checked for any visible damage.
- Unpack and check the product is complete and undamaged.
- Have the correct tools available.

Fig. A




Disclaimer

- Before fitting your panel, carefully remove all the packaging and film from the panel and examine the bath for damage and suitability of colour match.

- Check the panel fit and match prior to installation.
- Any refixing costs or claims for wrong colour match, and/or any other faults will not be accepted after fixing.

No claims for the above will be accepted once the panel is fitted


Tools required – not supplied

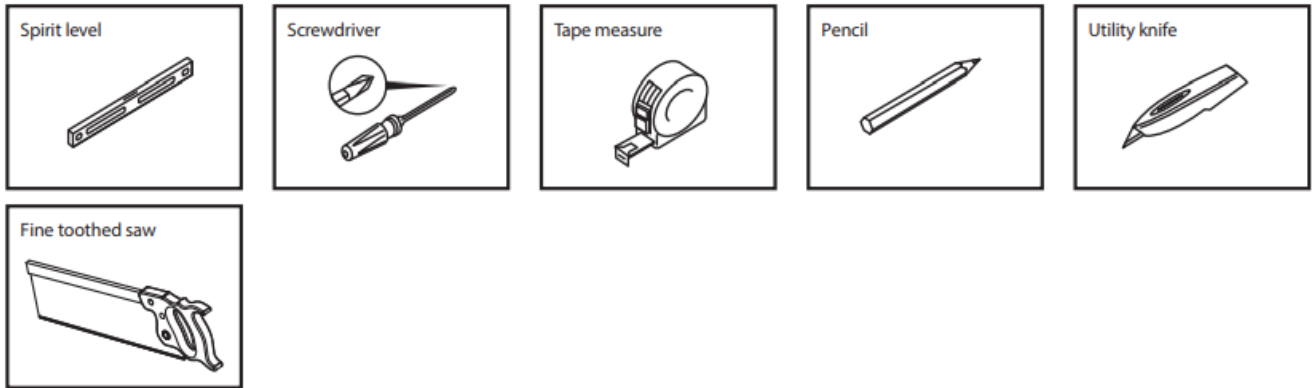


You will also require a piece of timber and some wooden rebated blocks

Trimming the universal end panel

- To create a 700 or 750 finish, trim the end panel to suit at the wall side using a small fine toothed saw or sharp knife.
- It is recommended that sizes are checked prior to cutting and fitting to prevent mistakes from occurring.
- Please note image shown opposite is for illustrative purposes only.

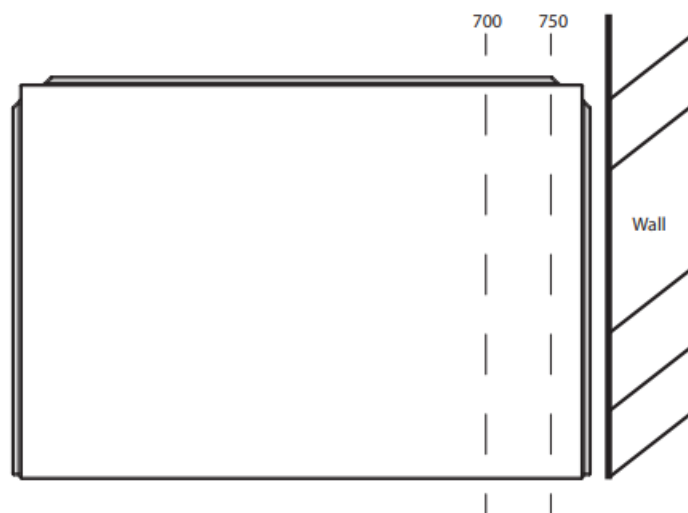

Panel fitting instructions

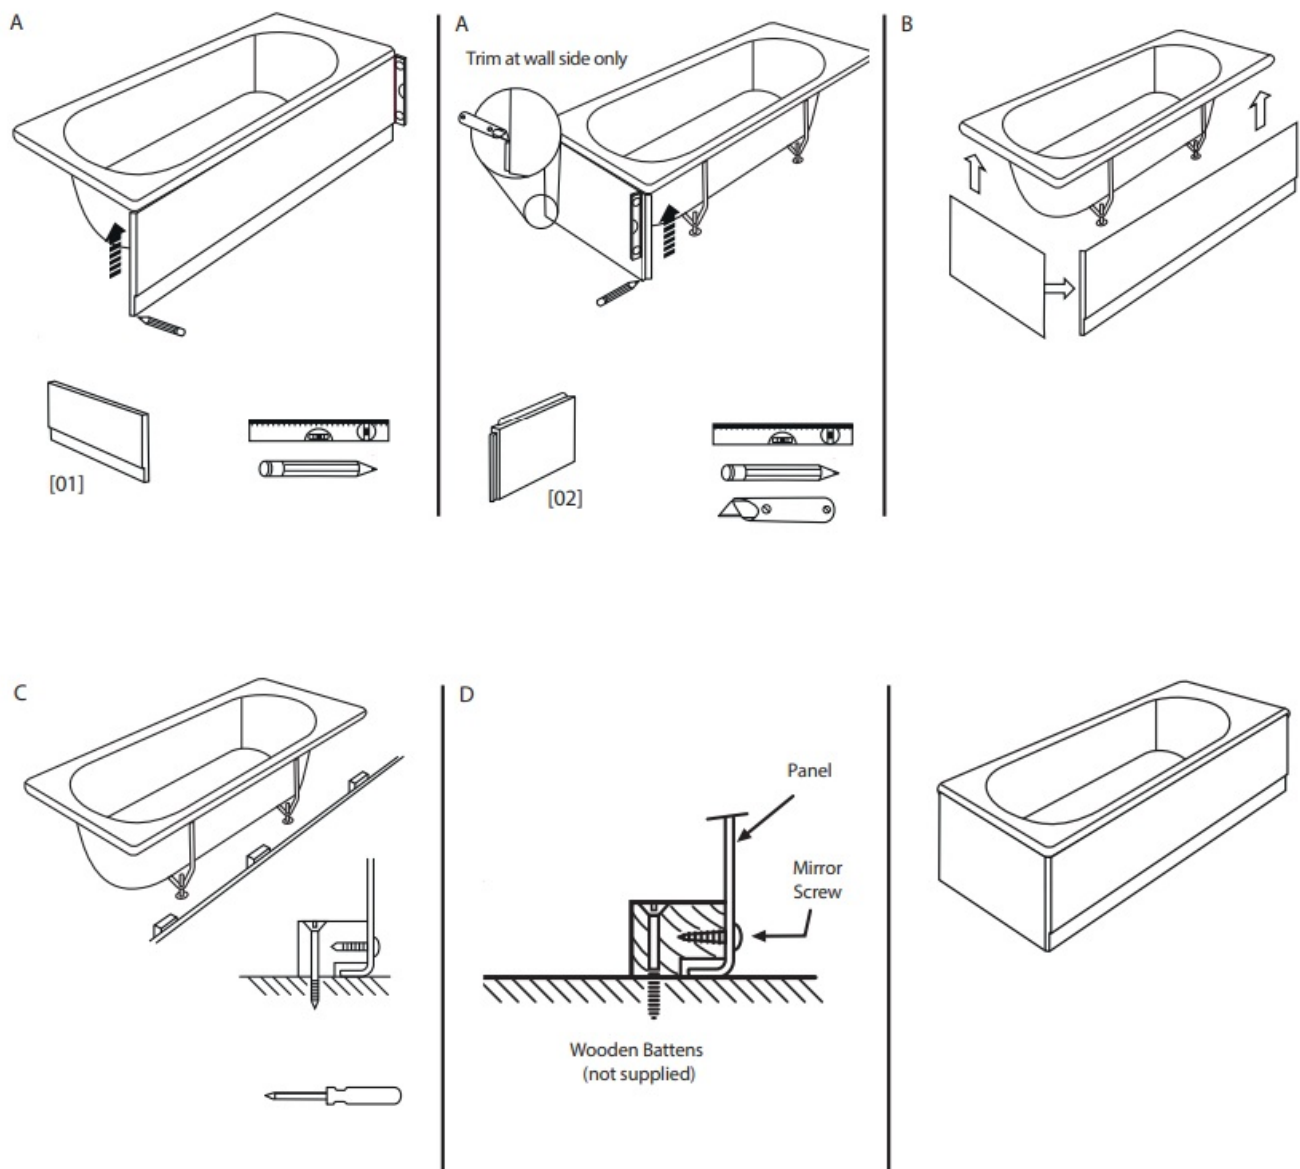


Should the cutting of panels be necessary (due to water pipes or skirting boards) a small fine toothed saw or sharp knife is recommended.

- **A.** Fit both panels in position, locate top flanges of the panels between bath frame and rim of bath.
- **B.** Ensure that both panels are set vertical and that the end panel is located behind the front panel at corner joint.
- **C.** To secure the panel to the wall use a piece of timber secured to the wall vertically. For the floor, we recommend some rebated blocks set equal distances apart.
- **D.** Small mirror screws can be used to secure the panel against the timber. Alternatively, Velcro or Magnetic strips will secure neatly.

Illustrations and specifications are for reference only.

Documents / Resources

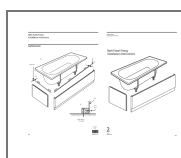

[AJAX 7517 Supercast Round Double Ended Bath](#) [pdf] Installation Guide
7517, 7517 Supercast Round Double Ended Bath, Supercast Round Double Ended Bath, Round Double Ended Bath, Double Ended Bath, Ended Bath, Bath

References

- [User Manual](#)

Manuals+, **Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.