

ALPHACOOL Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate Instruction Manual

Home » ALPHACOOL » ALPHACOOL Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate Instruction


Manual

Contents


- 1 ALPHACOOL Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate
- 2 Accessories
- 3 Ceck compatibility and prepare graphics card
- 4 Place thermal pads on cooling block
- 5 Apply thermal grease
- **6 Install PCB**
- 7 Place thermal pads on PCB backside
- 8 Mount PCI bracket and backplate
- 9 Connect ARGB lighting
- 10 Screw in screw plugs with the tool
- 11 Documents / Resources
- **12 Related Posts**



ALPHACOOL Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate

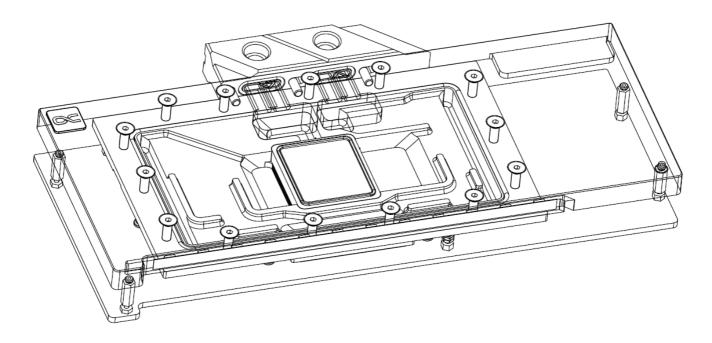

Accessories

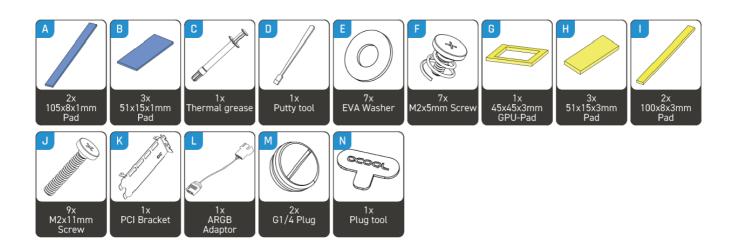

Ceck compatibility and prepare graphics card


Ceck compatibility

Before starting the cooler assembly, compare your card with the pictures in our configurator. To do so, visit https://www.hwconfig.com and search for your graphics card or cooler model. For a definitiv identification, you can also compare the PCB number. The cooler was designed for a special PCB layout. Occasionally, graphics card manufacturers may revise the design of their card slightly, causing the cooler not to fit on later models. During assembly, please make sure taller parts have enough space around them and that the cooler does not damage your graphics card. Alphacool International GmbH is not liable for assembly errors occurring due to negligence, such as selecting an incompatible cooler.


Prepare graphics card

Put the hardware on an antistatic mat. Begin dismantling the original cooler. Depending on the structure of the cooler, remove the screws at the back of the card and carefully unhook the fan connector first. If the original cooler uses thermal glue, extreme care should be taken as you can easily damage parts. Pick up all the items carefully. Next, clean the hardware of thermal paste or pad residues with a solvent (e.g. isopropanol alcohol).


Place thermal pads on cooling block

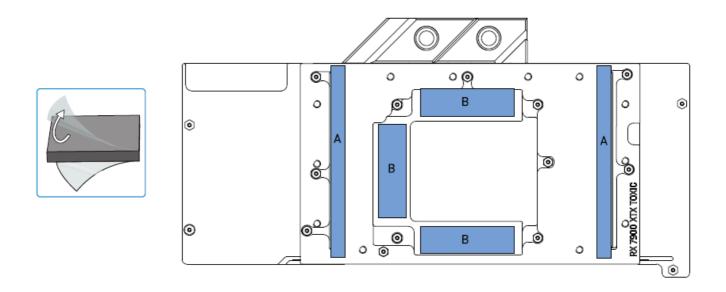


Apply thermal grease

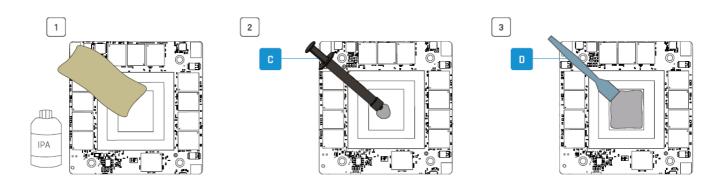


Install PCB

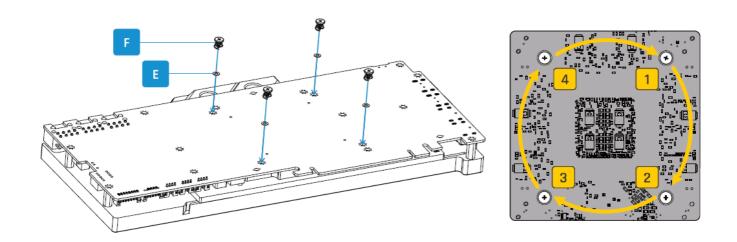


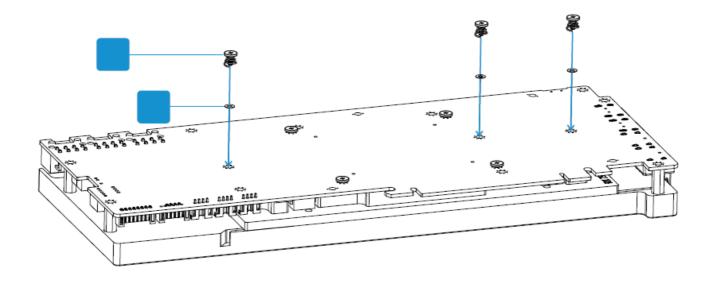


Place thermal pads on PCB backside

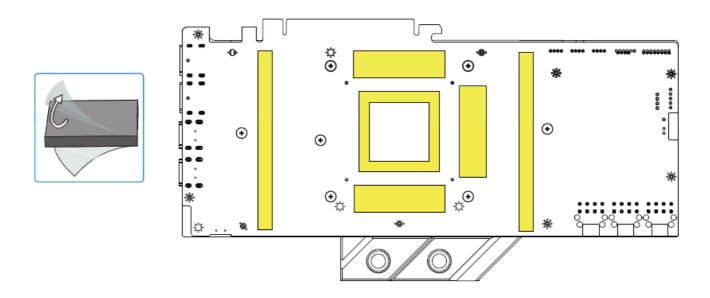


Mount PCI bracket and backplate

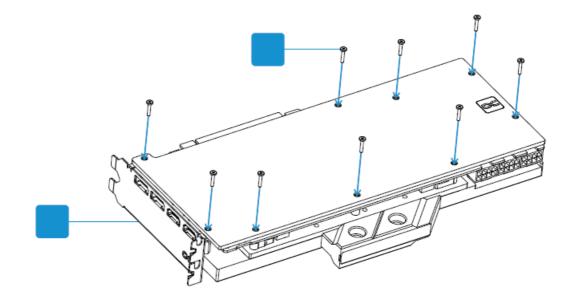

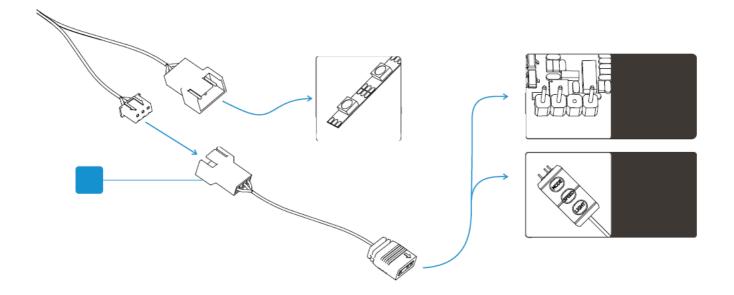

Screw in screw plugs with the tool

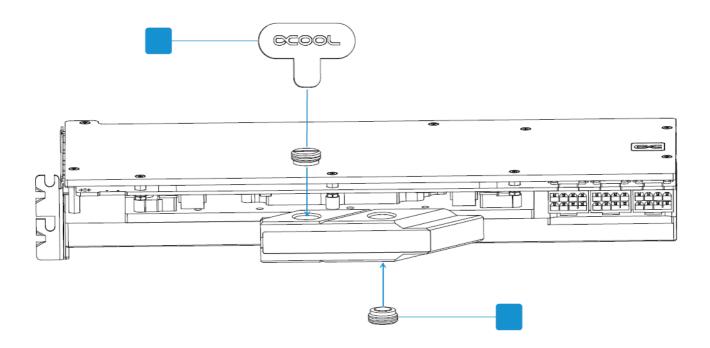

Alphacool International GmbH Marienberger Str. 1 D-38122 Braunschweig Germany

Support: +49 (0) 531 28874-0 Fax: +49 (0) 531 28874 – 22 E-Mail: <u>info@alphacool.com</u> <u>https://www.alphacool.com</u>

Documents / Resources



ALPHACOOL Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate [pdf] Instruction Manual

Eisblock Aurora Acryl RX 7900XTX-XT Toxic with Backplate, Aurora Acryl RX 7900XTX-XT Toxic with Backplate, RX 7900XTX-XT Toxic with Backplate, Backplate

