

**APR**  
**TL100180**  
**TSI Intake**  
**Adapter**



## APR TL100180 TSI Intake Adapter Installation Guide

[Home](#) » [APR](#) » APR TL100180 TSI Intake Adapter Installation Guide 

### Contents

- [1 APR TL100180 TSI Intake Adapter](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Information](#)
- [6 Installation Instructions](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

**APR**

### APR TL100180 TSI Intake Adapter



### Product Specifications

- **Model:** TL100180
- **Part Number:** CI100020-E
- **Product Name:** APR TSI Intake Adapter

## Product Usage Instructions

1. Securely screw the vacuum fitting into the side of the APR TSI inlet adapter.
2. Attach the vacuum line to the vacuum fitting on the inlet adapter. Mount the inlet adapter to the back of either CI100035 or CI100039 with the silicone coupler and hose clamps supplied with the intake. Be sure to connect the vacuum line to the car when mounting the intake assembly.
3. Once the APR intake is installed, clean a visible location under the hood and affix the supplied sticker to aid inspection of the vehicle under the California Smog Check program.

## FAQ


- **Q:** Can I install this product without prior mechanical skills?
  - **A:** These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you are unsure, it is recommended to seek assistance from a professional or contact your APR representative for guidance.
- **Q:** Is it necessary to keep all fasteners during disassembly?
  - **A:** It is recommended to keep all fasteners during disassembly so they can be reused during reinstallation. Fasteners that are not reused are noted in the instructions provided.
- **Q:** What should I do if I have questions during the installation process?
  - **A:** If you have any questions about the installation, feel free to contact your APR representative for assistance and guidance.

## Information


### Notes:

- These instructions were written for mounting CI100035 or CI100039 to a TSI car, which does not have a Mass Air Flow (MAF) sensor from the factory.
- When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommended that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.
- These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.

## Installation Instructions

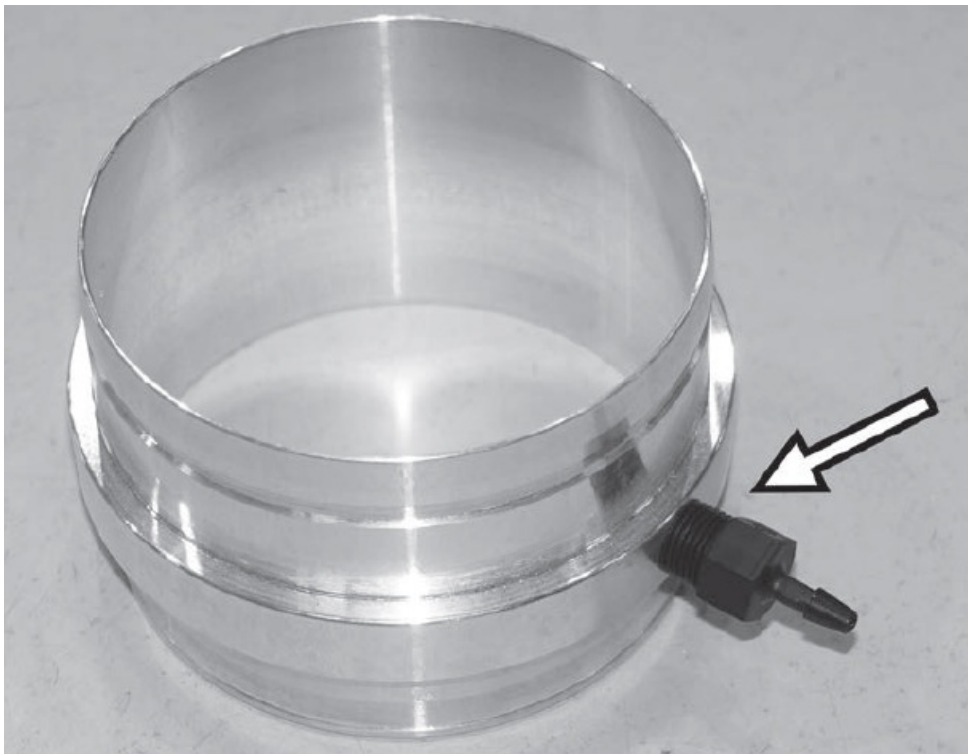

1. Securely screw the vacuum fitting into the side of the APR TSI inlet adapter.

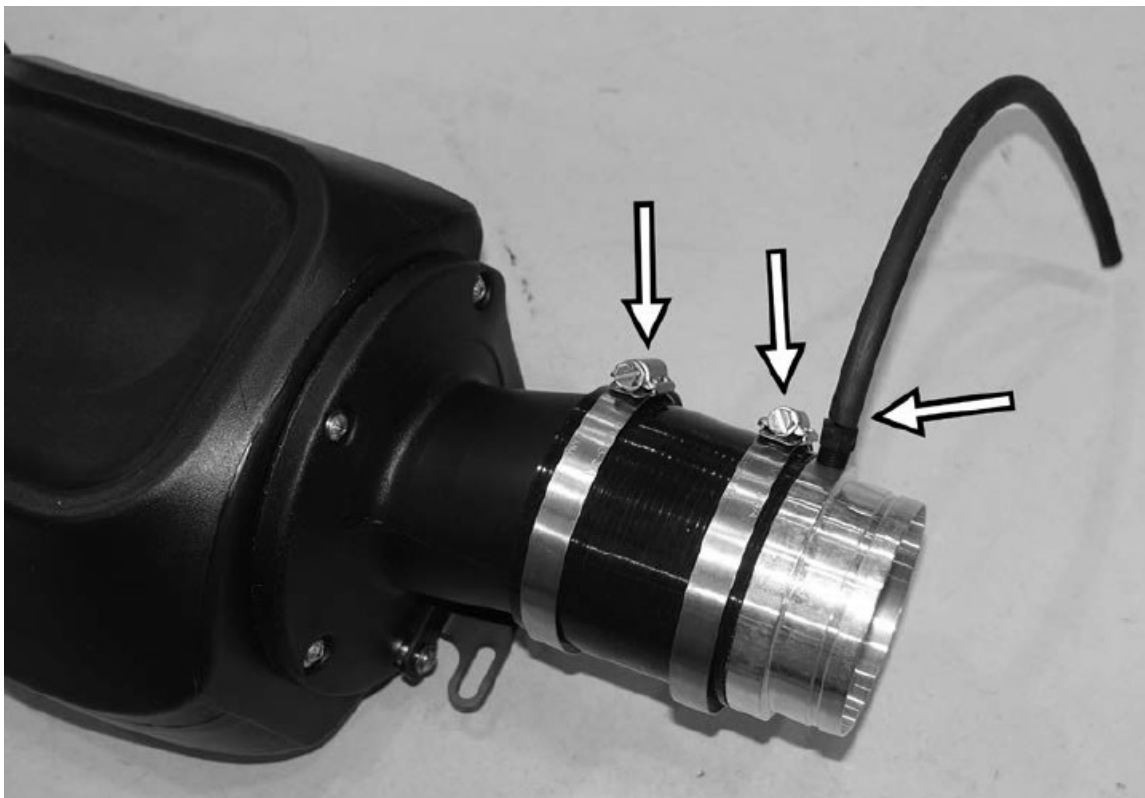


2. Attach the vacuum line to the vacuum fitting on the inlet adapter. Mount the inlet adapter to the back of either CI100035 or CI100039 with the silicone coupler and hose clamps supplied with the intake. Be sure to connect the vacuum line to the the car when mounting the intake assembly.



3. Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.

[GOAPR.COM](http://GOAPR.COM)

## Documents / Resources

	<a href="#">APR TL100180 TSI Intake Adapter</a> [pdf] Installation Guide TL100180, TL100180 TSI Intake Adapter, TSI Intake Adapter, Intake Adapter, Adapter
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.