

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Scosche](#) /

› [Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter Instruction Manual](#)

## Scosche UAA3

# Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter Instruction Manual

Model: UAA3 | Brand: Scosche

## INTRODUCTION

The Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter is designed to facilitate the seamless integration of an aftermarket car stereo into a wide range of domestic and import vehicles. This adapter ensures clear and reliable radio signal reception by providing the necessary connections between your new stereo and the vehicle's existing antenna system.

Key features include:

- Effortless Connectivity: Ensures seamless integration of your aftermarket car stereo for superior radio reception.
- Comprehensive Compatibility: Supports a wide range of vehicles, enhancing your audio experience without compatibility concerns.
- Superior Signal Quality: Connects your car stereo directly to the factory harness, eliminating static and enhancing audio performance.
- No-Hassle Installation: Plug-and-play design simplifies the upgrade process.
- Durability & Reliability: Crafted with factory-quality materials for long-lasting performance.

## PRODUCT OVERVIEW

The UAA3 adapter features multiple connectors to ensure compatibility with various vehicle antenna types. It converts the vehicle's factory antenna connection to a standard male DIN connector compatible with most aftermarket radios.

# UAA3SD Universal Antenna Adapter

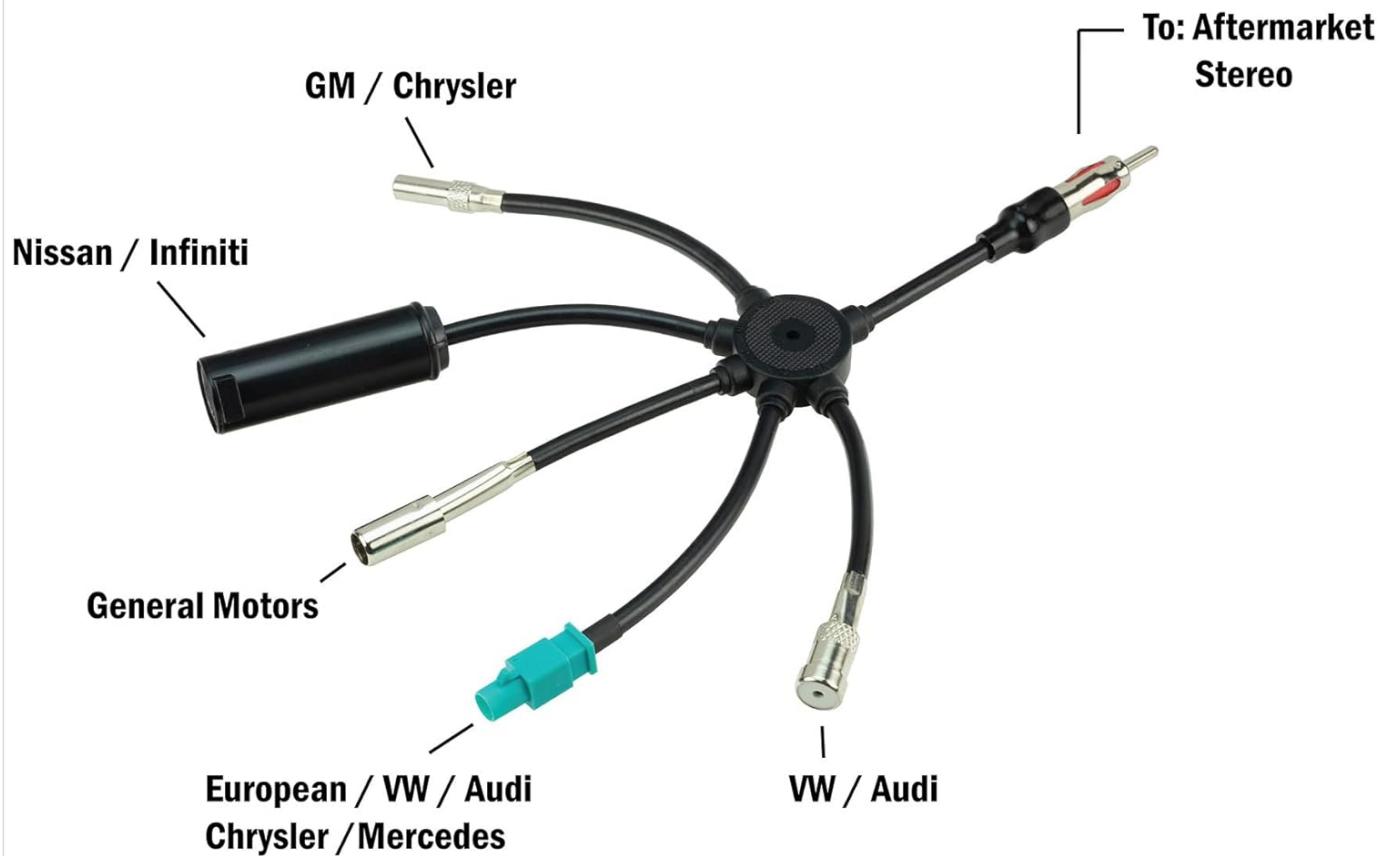


Image: Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter showing various labeled connectors for different vehicle brands (Nissan, GM, Chrysler, Ford, VW/Audi) and a standard male connector for the aftermarket stereo.

## COMPATIBILITY GUIDE

Before installation, verify your vehicle's compatibility using the detailed fit guide provided. This ensures proper connection and optimal performance.

FIT GUIDE - MDAB			
MAKE MODEL	YEAR	MAKE MODEL	YEAR
AUDI		BUICK (Continued)	
4000 Quattro	1980-87	Electra	2008-16
5000 Quattro	1980-83	Envoy	2015-17
88/90/90C/Quattro	1988-94	LeSabre	1992-04
A4/S4	2002-04	Lucerne	2006-11
A6/S6/Avant	2000-05	Regal	1988-95
A8	2002-03	Rendezvous	2002-07
Allroad	2002-05	Riviera	1986-99
Cabriolet	1994-98	Roadmaster	1991-96
UR/Quattro	1992-94	Skyhawk	1992-98
BMW		Terraza	2005-07
1-Series	2008-13	CADILLAC	
3-Series	1984-98	Brougham	1987-92
5-Series	2002-11	CTS	2003-14
7-Series	1989-03	DTS	2005-11
8-Series	1991-97	ELR	2013-15
X3	2003-13	Escalade	1999-06
Z3	1996-02	Escalade ESV	1999-14
Z4	2003	Escalade EXT	1999-14
BUICK		Fleetwood	1988-92
Century	1988-05		
Electra	1988-90		

Fit Guide Page 1: Covers Audi, BMW, Buick, Cadillac.

MAKE\MODEL	YEAR	MAKE\MODEL	YEAR
<b>CADILLAC</b> (Continued)		<b>CHEVROLET</b> (Continued)	
STS	2005-12	Sierra 1500 3500	1988-17
Serville	1992-04	SSR	2004-05
SRX	2004-09	Suburban	1989-17
		Tahoe	1995-17
		Traverse	2009-04
<b>CHEVROLET</b>		Uplander	2005-08
Altro	1985-05		
Avalanche	2001-13	Venture	1988-95
Aveo	2007-11		
Beretta	1988-96		
Blaize/Fallazie	1989-94		
Blazer/S-10	1992-05		
Camaro	1999-02	<b>CHRYSLER</b>	2011-17
Caprice Classic	1991-46	300	2005-17
Deville	1988-93	Aspen	2007-09
Cobalt	2005-10	Crossfire	2004-08
Colorado	2004-17	Pacifica	2003-08
Corsica	1988-46	PT Cruiser	2002-10
Corvette	1988-00	Sebring	2002-10
Cougar/Qualy	1998-00	Town & Country	2007-17
Espanor	2005-09		
Executive Van	1996-17		
HHR	2006-11	<b>DODGE</b>	
Impala/Impala SS	1994-12	Magnum	2007-14
Lumina/APV	1996-01	Caliber	2007-12
Malibu	2001-17	Caravan	2002-17
Malibu Classic	2004-04	Challenger	2008-17
Monte Carlo	1995-07	Charger	2006-17
S-10 Pickup	1992-04	Dakota	2006-17
Prism	2000-03		

MODEL # Page 2 of 6

Fit Guide Page 2: Covers Cadillac (continued), Chevrolet, Chrysler, Dodge.

MAKE   MODEL	YEAR	MAKE   MODEL	YEAR
<b>DODGE (Continued)</b>			
Durango	2002-17	Avalis	2007-16
Grand Caravan	2002-17	Caravan	2014-17
Intrepid	2002-04	Crewcab/Dually	1989-00
Journey	2009-17	Envoy	1998-09
Magnum	2003-08	Excalibur	1998-00
Neon	2002-05	\$15 Jimmy	1992-01
RAM Pickup	2002-12	\$15 Pickup	1992-93
Sprinter	2004-06	Safari	1992-05
Stratus	2002-06	Sedona	1996-07
Viper	2003-05	1500-3500	1987-17
		Soroma	1994-04
		Suburban	1989-91
		Tahoe/Yukon XL	1992-17
<b>FORD</b>			
C-Max	2003-17		
Crown Victoria	1995-07		
Expedition/E-Series Van	2009-12		
Edge	2007-17	<b>Harley-Davidson</b>	
Escape	2008-12	Roadside	2015-16
Expedition	2007-12	Street Glide	1992-17
Explorer	2006-17	Street Glide Classic	1992-17
Explorer Sport Trac	2007-11	Street Glide Ultra	1992-17
F-Series Pickup	2007-17		
Fiesta	2011-16	<b>Hummer</b>	
Five Hundred	2005-07	H2	2003-09
Focus	2000-14	h3	2003-09
Flex	2009-17		
Fusion	2006-17	<b>INFINITI</b>	
Mustang	2007-17	G20	1991-02
Taurus	2008-12	G35	2003-06
Trans Connect	2009-17	Q40	1999-03
		Q50	2010-16

MODEL # Page 3 of 6

Fit Guide Page 3: Covers Dodge (continued), Ford, GMC, Harley-Davidson, Hummer, Infiniti.

MAKE\MODEL	YEAR	MAKE\MODEL	YEAR
<b>INFINITI (Continued)</b>			
Q45	1990-00	QX	1997-03
QX4	1997-03		
<b>ISUZU</b>			
Ascender	2004-06		
Hombre	1996-00		
280/350/350	2006-08		
<b>JEEP</b>			
Commander	2006-10		
Compass	2007-17		
Grand Cherokee	2002-13		
Liberty	2002-12		
Wrangler	2007-17		
Wrangler	2003-17		
<b>LINCOLN</b>			
Mark LT	2006-08		
MKZ	2007-15		
MKZ	2007-11		
Navigator	2007-14		
<b>MAZDA</b>			
Tribute	2008-11		
<b>MERCEDES</b>			
190-Series	1984-93		
300-Series	1984-93		
C-Class	2005-11		
<b>MERCEDES (Continued)</b>			
CLK			2005-09
E Class			2003-13
R Class			2006-11
S Class			1985-99
SL Class			1989-99
SLK			2005-12
Sprinter			2005-11
			2010-17
<b>MERCURY</b>			
Cougar			1999-00
Mariner			2008-11
Mist			2007-11
Mountaineer			2004-10
Sable			2008-09
<b>MINI</b>			
Couper			2002-15
<b>NISSAN</b>			
200SX			1995-99
240SX			1991-98
300ZX			1989-96
350Z			2003-08
Altima			1993-04
Armada			2004-07
Frontier			1990-91
Maxima			1990-93
Pathfinder			1995-04
Quest			1998-04

MODEL # Page 4 of 6

Fit Guide Page 4: Covers Infiniti (continued), Isuzu, Jeep, Lincoln, Mazda, Mercedes.

MAKE / MODEL	YEAR	MAKE / MODEL	YEAR
<b>Nissan (Continued)</b>		<b>Pontiac (Continued)</b>	
Hardbody	1986-97	62	2005-09
Maxima	1989-06	65	2005-09
Murano	2003-07	GTO	2004-06
Pathfinder	1994-07	Montana	1995-98
Quest	2000-04	Sunbird	1989-94
Sentra	1995-05	Sunfire	1995-05
Stanza	1987-92	Trans Sport	1990-99
Titan	2004-07	Vibe	2002-08
Xterra	2000-04		
<b>Oldsmobile</b>		<b>Porsche</b>	
88 Royale	1987-89	911	1986-98
Achieva	1992-98	911 GT	2002-12
Alero	1998-04	998	1978-88
Ascona	1985-00	928	1978-93
Bravada	1991-04	948	1978-98
Cutlass	1988-99	968	1978-98
Eighty-Eight	1988-99	Booster	2005-12
Iniqa	1998-02	Cayenne	2003-15
Ninety-Eight	1988-96	Panamera	2010-18
Regency	1994-98		
Silhouette	1990-04	<b>RAM</b>	
Touring Sedan	1989-93	Ram Pickup	
		2013-17	
<b>Pontiac</b>		<b>SATURN</b>	
Bonneville	1992-99	Astra	2008-09
Firebird	1990-99	Outlook	2007-09
Grand AM	1988-05	Relay	2005-07
Grand Prix	1988-07		

MODEL # Page 5 of 6

Fit Guide Page 5: Covers Nissan (continued), Oldsmobile, Pontiac, Porsche, Ram.

MAKE	MODEL	YEAR	MAKE	MODEL	YEAR
SATURN	(Continued)	1991-99	VOLKSWAGEN	(Continued)	1990-97
SC	1991-99		Passat	2002-05	
SL	1991-99		Notchback	1982-88	
SV	2006-09		Rabbit	1973-84	
Vue			Rabbit Cabriolet	1975-94	
SMART		2008-12	Sirocco	1982-89	
Fortwo			Vanagon	1980-92	
SUZUKI		2000-02			
Grand Vlara		2001-09			
XL7					
TOYOTA		2002-04			
Matrix					
VOLKSWAGEN		2002-11			
Beetle		1995-03			
Cabrio		1990-94			
Diabolo		1998-00			
Eurovan		1985-98			
Golf		1985-98			
Golf GTI		2002-05			
Golf		2002-05			
Golf GTI		1988-98			
Jetta		1980-98			
Jetta GL		2002-05			
Jetta		2002-05			
Jetta GLI					

MODEL # Page 6 of 6

Fit Guide Page 6: Covers Saturn, Smart, Suzuki, Toyota, Volkswagen.

## SETUP AND INSTALLATION

This section outlines the general steps for installing the Scosche UAA3 antenna adapter. Always refer to your vehicle's specific service manual and your aftermarket stereo's installation guide for detailed instructions.

- Safety First:** Before beginning any installation, disconnect the negative battery terminal of your vehicle to prevent electrical shorts or damage.
- Remove Factory Stereo:** Carefully remove your vehicle's factory stereo. This typically involves removing trim panels using a panel removal tool, unscrewing the stereo, and then unplugging all harnesses from the back of the unit.
- Prepare Aftermarket Stereo:** If your aftermarket stereo requires a dash kit, install the new stereo into the dash kit using the screws provided with the stereo.
- Identify Antenna Connection:** Locate the factory antenna cable in your vehicle's dashboard.
- Connect UAA3 Adapter to Vehicle:** Select the appropriate connector from the UAA3 adapter that matches your vehicle's factory antenna cable. Connect this end to the vehicle's antenna cable.



Image: A hand connecting one of the UAA3 adapter's vehicle-specific connectors to the car's factory antenna harness.

- Connect to Aftermarket Stereo:** Connect the standard male DIN connector of the UAA3 adapter to the antenna input on your aftermarket stereo.



Image: A hand connecting the standard male DIN connector of the UAA3 adapter to the antenna input on an aftermarket car stereo.

7. **Reassemble:** Carefully slide the aftermarket stereo and dash kit assembly back into the dashboard opening. Secure it with screws and reattach any trim panels.
8. **Reconnect Battery:** Reconnect the negative battery terminal.
9. **Test Functionality:** Turn on your new stereo and test the AM/FM radio reception to ensure proper installation.

## Installation Video Guide

Your browser does not support the video tag.

Video: Official Scosche guide demonstrating the installation process for the UAA3 Multi-Vehicle All-In-One Antenna Adapter, including steps for removing the factory radio and connecting the new adapter.

## OPERATING INSTRUCTIONS

Once the Scosche UAA3 antenna adapter is correctly installed, its operation is integrated with your aftermarket car stereo. The adapter functions passively to ensure optimal signal transfer from your vehicle's antenna to the new radio.

- **Radio Functionality:** Access AM/FM radio functions directly through your aftermarket car stereo's interface.
- **Signal Reception:** The adapter is designed to maintain the best possible signal quality from your vehicle's existing antenna.
- **No User Controls:** The UAA3 adapter does not have any user-adjustable controls. Its function is entirely automatic upon proper connection.

## MAINTENANCE

The Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter requires minimal maintenance. Follow these guidelines to ensure its longevity and continued performance:

- **Secure Connections:** Periodically check that all connections to the adapter, vehicle antenna, and aftermarket stereo are secure and free from corrosion.
- **Avoid Physical Damage:** Ensure the adapter and its cables are not pinched, cut, or exposed to excessive heat or moisture within the dashboard.
- **Cleaning:** If accessible, gently wipe any dust or debris from the adapter's exterior using a dry, soft cloth. Do not use liquid cleaners directly on the adapter.

## TROUBLESHOOTING

If you experience issues with your radio reception after installing the UAA3 adapter, consider the following troubleshooting

steps:

- **No Radio Signal:**

- Verify all connections are firmly seated. Ensure the correct adapter end is connected to the vehicle's antenna and the standard DIN plug is connected to the aftermarket stereo.
- Check the aftermarket stereo's settings to ensure the radio function is enabled and tuned to a valid station.
- Confirm the vehicle's factory antenna is functional and not damaged.

- **Poor Signal Quality/Static:**

- Ensure the adapter cables are not running parallel to power cables or other sources of electrical interference.
- Check for any loose or corroded connections.
- Confirm that the correct adapter was used for your specific vehicle model and year, referring to the compatibility guide.

- **Intermittent Signal:**

- Inspect the adapter and cables for any signs of damage or wear.
- Ensure the adapter is not being stressed or pulled by other components within the dashboard.

If issues persist, contact Scosche customer support for further assistance.


## SPECIFICATIONS

Feature	Detail
Model Number	UAA3
Brand	Scosche
Item Weight	2.39 ounces
Product Dimensions	1.75 x 3 x 5.5 inches
Antenna Type	Satellite, Radio
Number of Channels	2
Impedance	50 Ohms
UPC	033991036215

## WARRANTY AND SUPPORT


The Scosche UAA3 Multi-Vehicle All-in-One Antenna Adapter is backed by Scosche's Limited Lifetime Warranty, ensuring peace of mind regarding product quality and durability.

For technical assistance or warranty claims, please contact Scosche customer support. Details can typically be found on the official Scosche website or product packaging.

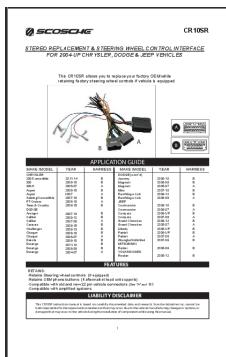


### [Scosche CR10SR Stereo Replacement & Steering Wheel Control Interface Installation Guide](#)

Installation guide for the Scosche CR10SR interface, enabling replacement of factory stereos in Chrysler, Dodge, Jeep, Mitsubishi, and Volkswagen vehicles while retaining steering wheel controls.

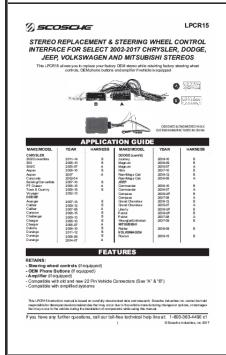


### [Scosche LPCR15: Steering Wheel Control Interface for Chrysler, Dodge, Jeep, VW, Mitsubishi](#)

Detailed guide for the Scosche LPCR15 interface, enabling replacement of factory stereos while retaining steering wheel controls, OEM phone buttons, and factory amplifiers for select 2002-2017 Chrysler, Dodge, Jeep, Volkswagen, and Mitsubishi vehicles. Includes application guide, wiring diagrams, and installation notes.

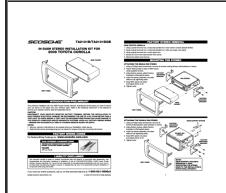

### [Scosche TA2101B/TA2101DGB Installation Kit for 2009 Toyota Corolla - Car Stereo Dash Mount Guide](#)

Comprehensive guide for installing an aftermarket car stereo in a 2009 Toyota Corolla using the Scosche TA2101B/TA2101DGB installation kit. Includes step-by-step instructions and wiring information.

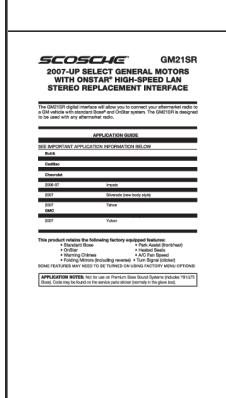


### [Scosche GM21SR Stereo Replacement Interface for GM Vehicles with OnStar](#)

Installation and operation guide for the Scosche GM21SR digital interface, enabling aftermarket stereo integration in select 2007-up General Motors vehicles equipped with OnStar and Bose systems.



### [Scosche CR4000SW: Factory Stereo Replacement Interface for Chrysler, Dodge, Jeep Vehicles](#)

Upgrade your 2004-up Chrysler, Dodge, or Jeep vehicle's audio system with the Scosche CR4000SW factory stereo replacement interface. This guide details installation, compatibility, and steering wheel control integration for a seamless aftermarket stereo setup.

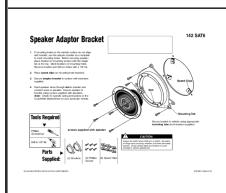

### [Scosche 142 SAT6 Speaker Adaptor Bracket Installation Guide](#)

Installation instructions for the Scosche 142 SAT6 Speaker Adaptor Bracket, detailing tools required, parts supplied, and mounting procedures for vehicle audio systems.