

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Puig](#) /

› [Puig 1665N Black Racing Screen Motorcycle Windshield Instruction Manual](#)

Puig 1665N

Puig 1665N Black Racing Screen Instruction Manual

Model: 1665N | Brand: Puig

INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your Puig 1665N Black Racing Screen. Designed for motorcycles, this high-impact acrylic screen offers enhanced aerodynamics and rider protection. Please read this manual thoroughly before installation and retain it for future reference.

SAFETY INFORMATION

Always prioritize safety. Improper installation or maintenance can lead to serious injury or damage.

- Ensure the motorcycle is stable and turned off before beginning any work.
- Wear appropriate personal protective equipment, such as gloves and eye protection.
- If you are unsure about any step, consult a qualified motorcycle mechanic.
- Do not overtighten fasteners, as this can damage the screen or mounting points.
- Regularly inspect the screen and mounting hardware for signs of wear or looseness.

PACKAGE CONTENTS

Verify that all components are present before starting installation.

- 1x Puig 1665N Black Racing Screen
- Mounting Hardware Kit (screws, washers, spacers - *assumed components*)

SETUP AND INSTALLATION

This section outlines the general procedure for installing the Puig 1665N Racing Screen. Specific steps may vary slightly depending on your motorcycle model.

1. Prepare the Motorcycle:

Park the motorcycle on a level surface using its center stand or a paddock stand for stability. Ensure the engine is off and cool.

2. Remove Existing Windshield (if applicable):

Carefully remove the bolts securing the original windshield. Retain any original hardware that may be

reused.

3. Position the New Screen:

Align the Puig 1665N Racing Screen with the mounting holes on your motorcycle's fairing.



This image shows the Puig 1665N Black Racing Screen mounted on a black Suzuki motorcycle, illustrating its integrated appearance.

4. Secure the Screen:

Insert the provided mounting screws (or original screws if reused) through the screen and into the fairing. Hand-tighten all screws initially.



This image provides a side profile of the Puig 1665N Black Racing Screen, highlighting its aerodynamic curve.

5. Final Tightening:

Once all screws are in place and aligned, progressively tighten them using appropriate tools. Do not overtighten. Ensure the screen is securely fastened but not stressed.



This image displays a front view of the Puig 1665N Black Racing Screen, showcasing its distinct shape and dark tint.

6. Post-Installation Check:

Gently attempt to move the screen to confirm it is firmly attached. Check for any gaps or misalignments.

OPERATING CONSIDERATIONS

The Puig 1665N Racing Screen is designed to improve aerodynamics and rider comfort.

- The "race bubble" design helps to diminish air effect on the rider's helmet, especially at higher speeds.
- Be aware that the dark tint of the screen may reduce visibility through it, particularly in low-light conditions. Always look over the screen, not through it, when riding.

MAINTENANCE

Proper care will extend the life and maintain the appearance of your racing screen.

- **Cleaning:**

Use only mild soap and water with a soft, non-abrasive cloth. Avoid harsh chemicals, ammonia-based cleaners, or abrasive materials, as these can scratch or damage the acrylic. Rinse thoroughly and dry with a clean, soft cloth.

- **Inspection:**

Periodically check all mounting hardware for tightness. Inspect the screen for cracks, deep scratches, or signs of fatigue. Replace the screen if significant damage is present.

TROUBLESHOOTING

- **Excessive Vibration:**

Ensure all mounting screws are securely tightened. Check for any loose fairing components.

- **Loose Fit:**

Re-check all mounting points and ensure the correct hardware is used. Verify that the screen is properly seated.

- **Scratches or Damage:**

Minor scratches may sometimes be polished out with specialized acrylic polish. For significant damage, replacement is recommended.

SPECIFICATIONS

- **Model:** 1665N
- **Brand:** Puig
- **Material:** High-impact Acrylic (3mm thickness)
- **Color:** Black
- **Dimensions:** Approximately 18 x 16 x 6 inches
- **Item Weight:** Approximately 1 pound
- **Country of Origin:** Spain

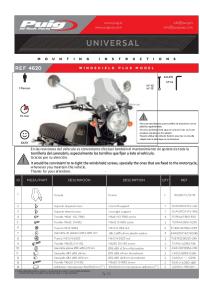
WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Puig website or contact your authorized Puig dealer. Retain your proof of purchase for warranty claims.

CONTACT INFORMATION

For further assistance, please visit the official Puig website or contact their customer service department.
www.puig.tv

Related Documents - 1665N

	<p>Puig Motorcycle Windshield Mounting Instructions - Universal & Kawasaki Z900RS</p> <p>Detailed mounting instructions and parts lists for Puig Universal Windshield Plus (REF 4620) and Puig Kit for Kawasaki Z900RS '18- (REF 10931). Includes step-by-step guides and component information for safe installation.</p>
	<p>Puig Touring Screen Installation Guide for BMW F750GS '18-'21 (REF 3768)</p> <p>Step-by-step mounting instructions and parts list for the Puig Touring Screen (REF 3768) designed for the BMW F750GS motorcycle models from 2018 to 2021. Includes details on disassembly, assembly, and required components.</p>
	<p>Puig Z-Racing and R-Racer Screen Installation for Kawasaki Ninja 650 '20-</p> <p>Detailed mounting instructions for Puig Z-Racing and R-Racer screens for the Kawasaki Ninja 650 motorcycle (2020 onwards). Includes part numbers and assembly steps.</p>



[Puig Mounting Instructions: BMW R1300GS Touring Plus Screen with Radar/ACC](#)

Step-by-step guide for installing the Puig Touring Plus Screen with Radar/ACC on BMW R1300GS and R1300GS Adventure (2023-). Includes parts list, assembly steps, and torque specifications.



[Puig Touring Screen Mounting Instructions for Kawasaki Versys 1000/650 \(2015+\)](#)

Detailed mounting instructions and parts list for the Puig Touring Screen (REF 9421) designed for Kawasaki Versys 1000 and Versys 650 motorcycles (2015 onwards). Includes step-by-step guidance and compatibility notes.



[Puig Z-Racing Screen Mounting Instructions for BMW R1300GS '24-](#)

Detailed mounting instructions and parts list for installing the Puig Z-Racing Screen on a BMW R1300GS motorcycle (2024 model). Includes step-by-step guidance and component identification.