

[Manuals.plus](#) /

› [WENKO](#) /

› WENKO Universal Corner Shower Rod 19215100 Instruction Manual

WENKO 19215100

WENKO Universal Corner Shower Rod

Model: 19215100

INTRODUCTION

The WENKO Universal Corner Shower Rod is designed to provide a versatile and practical solution for hanging shower curtains in various bathroom configurations. This rod can be assembled into L-shape or U-shape configurations, making it suitable for shower corners, three-sided shower areas, or bathtubs. It features a durable aluminum construction with a chrome finish and is designed for secure wall mounting with included screws and dowels.

SAFETY INSTRUCTIONS

- Read all instructions carefully before installation and use.
- Ensure the wall material is suitable for drilling and can support the weight of the rod and a wet shower curtain. If unsure, consult a professional.
- Use appropriate tools for installation.
- Do not hang heavy objects from the shower rod. It is designed to support a shower curtain only.
- Periodically check all fixings to ensure they remain secure.
- Keep small parts (screws, dowels) out of reach of children.

PACKAGE CONTENTS

Before beginning installation, verify that all components are present:

- Straight rod sections (various lengths)
- Curved corner sections
- Wall mounting brackets
- Screws
- Dowels



Image: All components included in the package for the WENKO Universal Corner Shower Rod.

SETUP AND INSTALLATION

The WENKO Universal Corner Shower Rod offers flexible installation options to suit various bathroom layouts. The rod sections simply interlock and are then securely fixed to the wall using the provided screws and dowels.

Available Configurations:

- **L-Shape for Shower Corners (two open sides):** 80 x 80 cm or 90 x 90 cm
- **U-Shape for Shower Areas (three open sides):** 80 x 90 x 80 cm or 90 x 80 x 90 cm
- **L-Shape for Bathtub Corners (two open sides):** 70 x 165 cm



Image: Overview of the three possible shower rod configurations.

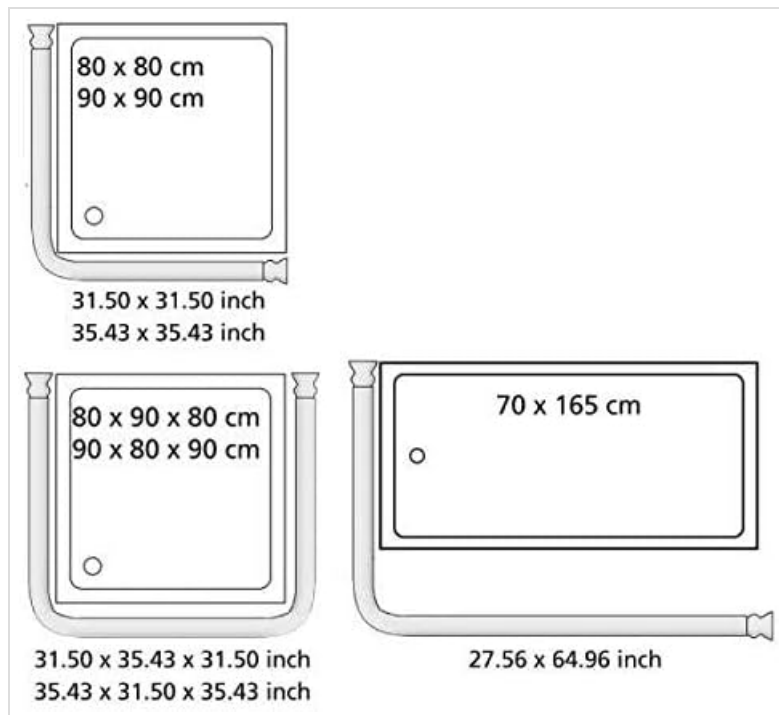


Image: Detailed dimensions for various shower rod configurations.

Installation Steps:

- Plan Your Configuration:** Decide which shape (L or U) and dimensions best suit your shower or bathtub area. Refer to the diagrams for guidance.
- Measure and Mark:** Hold the assembled rod sections in place against the wall to determine the exact positions for the wall mounting brackets. Use a pencil to mark the drill points. Ensure the rod is level.
- Drill Holes:** Using an appropriate drill bit for your wall type, drill holes at the marked positions.
- Insert Dowels:** Insert the provided dowels into the drilled holes. Ensure they fit snugly.
- Assemble Rod Sections:** Connect the straight and curved rod sections by simply interlocking them. The rod has a diameter

of 20 mm. If necessary, rod sections can be shortened individually by sawing to achieve custom lengths.

- Attach Wall Mounts:** Position the wall mounting brackets over the dowels.
- Secure the Rod:** Place the assembled rod into the wall mounting brackets and secure them firmly with the provided screws. Ensure all connections are tight and stable.



Image: Example of the shower rod installed with screws and dowels, featuring its chromed aluminum construction.

USAGE

Once installed, the WENKO Universal Corner Shower Rod is ready for use. Simply hang your standard shower curtain onto the rod. The 20 mm diameter is compatible with most commercially available shower curtain rings.

MAINTENANCE

To ensure the longevity and appearance of your shower rod:

- Clean regularly with a soft, damp cloth.
- Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the chrome finish.
- Periodically check the wall mounting screws and dowels to ensure they remain tight and secure. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rod feels unstable or wobbly.	Screws are loose; wall material is not strong enough; incorrect installation.	Ensure all screws are tightened. Verify wall material suitability. Re-install following instructions carefully.

Problem	Possible Cause	Solution
Difficulty assembling rod sections.	Sections are not aligned correctly.	Ensure sections are properly aligned before pushing them together to interlock.
Rod sags in the middle.	Excessive weight on the rod; insufficient support.	Ensure only a shower curtain is hung. Consider adding a ceiling support rod (available separately from WENKO) for longer spans or heavier curtains.

SPECIFICATIONS

- **Model Number:** 19215100
- **Material:** Rod: Aluminum; Wall Mounts: Plastic
- **Color:** Chrome/White
- **Rod Diameter:** 20 mm (0.79 inches)
- **Approximate Unpacked Weight:** 389 g
- **Fixation Type:** Wall mounting (screws and dowels included)
- **Possible Dimensions (L x W):**
 - L-Shape: 80 x 80 cm (31.50 x 31.50 inches) or 90 x 90 cm (35.43 x 35.43 inches)
 - U-Shape: 80 x 90 x 80 cm (31.50 x 35.43 x 31.50 inches) or 90 x 80 x 90 cm (35.43 x 31.50 x 35.43 inches)
 - Bathtub L-Shape: 70 x 165 cm (27.56 x 64.96 inches)
- **Country of Origin:** China

WARRANTY AND SUPPORT

This WENKO product comes with a **5-year manufacturer's warranty** from the date of purchase. The warranty covers all material and manufacturing defects that impair proper functioning. Damages resulting from incorrect use or natural wear and tear are excluded.

This warranty does not restrict any of your statutory warranty rights.

In case of a warranty claim, please return the item, accompanied by the sales receipt and properly packaged for transport, to the following address:

Wenko-Wenselaar GmbH & Co. KG
Abteilung « Retouren »
Im Hülsenfeld 17
40721 Hilden, Germany

For further support, you may contact: service@wenko.de