

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Scosche](#) /

› [SCOSCHE GM1504 General Motors Stereo Install Dash Kit User Manual](#)

Scosche GM1504

SCOSCHE GM1504 General Motors Stereo Install Dash Kit

Brand: Scosche | Model: GM1504

1. INTRODUCTION

This dash kit facilitates the installation of an aftermarket stereo into your vehicle, replacing the factory unit. The GM1504 is constructed from high-quality automotive-grade ABS plastic, designed to integrate with the texture of your factory dash. Installation is designed to be straightforward, requiring no specialized tools, and includes step-by-step instructions.

Key Features:

- Easy-to-follow, illustrated, step-by-step instructions are included with the product.
- Features a heavy-duty mounting panel, designed to avoid the need for dash modifications.
- Compatible with various stereo types, including DIN and removable face units.
- Manufactured from high-quality automotive-grade ABS plastic with a factory-style texture.
- Installation typically does not require special tools.

2. PACKAGE CONTENTS

The Scosche GM1504 dash kit includes all necessary plastic mounting brackets and hardware for a secure installation of your aftermarket stereo.



An overhead view of all components included in the Scosche GM1504 dash kit, featuring various mounting brackets, the main dash frame, and a small bag of screws and nuts.

CAR STEREO DASH KIT - GM1504B

1982-2005 BUICK • CADILLAC • CHEVROLET • GMC • ISUZU • OLDSMOBILE
PONTIAC • SATURN (Check Fit Guide Image)

Scosche installation kits are designed to help you easily install an aftermarket stereo. Made from high quality ABS plastic and includes instructions.



MAKE YOUR INSTALL EASY

A DASH KIT **B** WIRE HARNESS/
INTERFACE **C** ANTENNA
ADAPTER

Parts for B and C sold separately



EASY TO
INSTALL



FACTORY
QUALITY

A diagram illustrating the key features of the Scosche GM1504B dash kit, highlighting its automotive-grade ABS plastic construction, factory-matched texture, and indicating that wire harnesses/interfaces and antenna adapters are sold separately.

3. VEHICLE COMPATIBILITY

The GM1504 dash kit is designed for a wide range of General Motors vehicles manufactured between 1982 and 2005. Please refer to the detailed fitment guide below to confirm compatibility with your specific vehicle make, model, and year.

FIT GUIDE - GM1504B

1982-2005 BUICK • CADILLAC • CHEVROLET • GMC • ISUZU • OLDSMOBILE • PONTIAC • SATURN

MAKE MODEL	YEAR	MAKE MODEL	YEAR
BUICK		CHEVROLET <i>CONTINUED</i>	
CENTURY	1982-96	BLAZER S-10	1982-01
ELECTRA	1984-90	C/K PICKUP	1995-98
LE SABRE	1986-94	CAMARO	1982-96
PARK AVENUE	1984-94	CAMARO with Bose	1993-96
REGAL	1984-87	CAMARO LS	1997-02
RIVIERA	1984-95	CAMARO Z-28	1997-02
ROADMASTER	1991-94	CAPRICE CLASSIC	1991-96
SKYHAWK	1982-89	CAVALIER STD	1982-85
SKYLARK	1983-95	CAVALIER RS	1986-99
		CAVALIER Z24	1986-99
CADILLAC		CELEBRITY	1982-90
T-TYPE	1984-87	CITATION	1985
CIMARRON	1982-88	CORSICA	1991-96
DEVILLE	1985-91	CORVETTE	1984-89
ELDORADO	1984-91	CORVETTE C5	1997-04
ESCALADE	1999-02	CREWCAB DUALY PICKUP	1989-99
ESCALADE EXT	2002	EL CAMINO	1986-87
FLEETWOOD	1985-92	EXPRESS VAN	1988-00
SEVILLE	1984-91	IMPALA SS	1994-96
		LUMINA APV Minivan	1990-96
CHEVROLET		LUMINA Sedan	1990-01
ASTRO	1985-05	LUMINA Z-34	1990-94
AVALANCHE	2001-02	MALIBU	1997-00
BERETTA	1991-96	MONTE CARLO	1986-99
BLAZER FULLSIZE	1989-91	NOVA	1985-88

Page 1 of 2

Page 1 of the vehicle compatibility guide for the Scosche GM1504B dash kit, listing various Buick, Cadillac, Chevrolet, GMC, Isuzu, Oldsmobile, Pontiac, and Saturn models from 1982-2005.

MAKE MODEL	YEAR	MAKE MODEL	YEAR
CHEVROLET <i>CONTINUED</i>		OLDSMOBILE <i>CONTINUED</i>	
S-10 PICKUP	1982-02	CUTLASS CALAIS with Bose	1985-87
SILVERADO 1500-3500	1999-02	CUTLASS CIERA	1982-96
SUBURBAN	1989-02	CUTLASS SUPREME	1984-94
TAHOE	1995-02	DELTA 88	1985-88
VENTURE	1997-99	EIGHTY-EIGHT	1989-93
		FIRENZA	1982-88
GMC		NINETY-EIGHT	1984-93
ENVOY	1998-01	OMEGA	1983-84
JIMMY	1989-91	SILHOUETTE	1990-99
JIMMY S-15	1982-01	TORONADO	1982-89
CREWCAB DUALY PICKUP	1989-00	TOURING SEDAN	1989-93
PICKUP S-15	1982-93		
SAFARI	1985-05	PONTIAC	
SAVANA	1988-00	6000	1982-91
SIERRA 1500-3500	1995-02	BONNEVILLE	1987-99
SONOMA	1998-01	FIERO	1984-88
SUBURBAN	1989-99	FIREBIRD	1982-03
YUKON	1995-02	GRAND AM	1985-00
YUKON DENALI	1999	GRAND PRIX	1992-99
YUKON XL	2000-02	J-2000/2200	1982-83
		MONTANA	1997-99
ISUZU		PARISIENNE	1985-86
HOMBRE	1998-00	SUNBIRD	1984-88
		SUNFIRE	1995-99
OLDSMOBILE		TRANS SPORT	1990-99
88 ROYALE	1987-91		
ACHIEVA	1992-95	SATURN	
BRAVADA	1991-01	SC/SL/SW	1991-94
CUTLASS CALAIS Non-Bose	1985-91	SC2/SL2/SW2	1991-94

Page 2 of 2

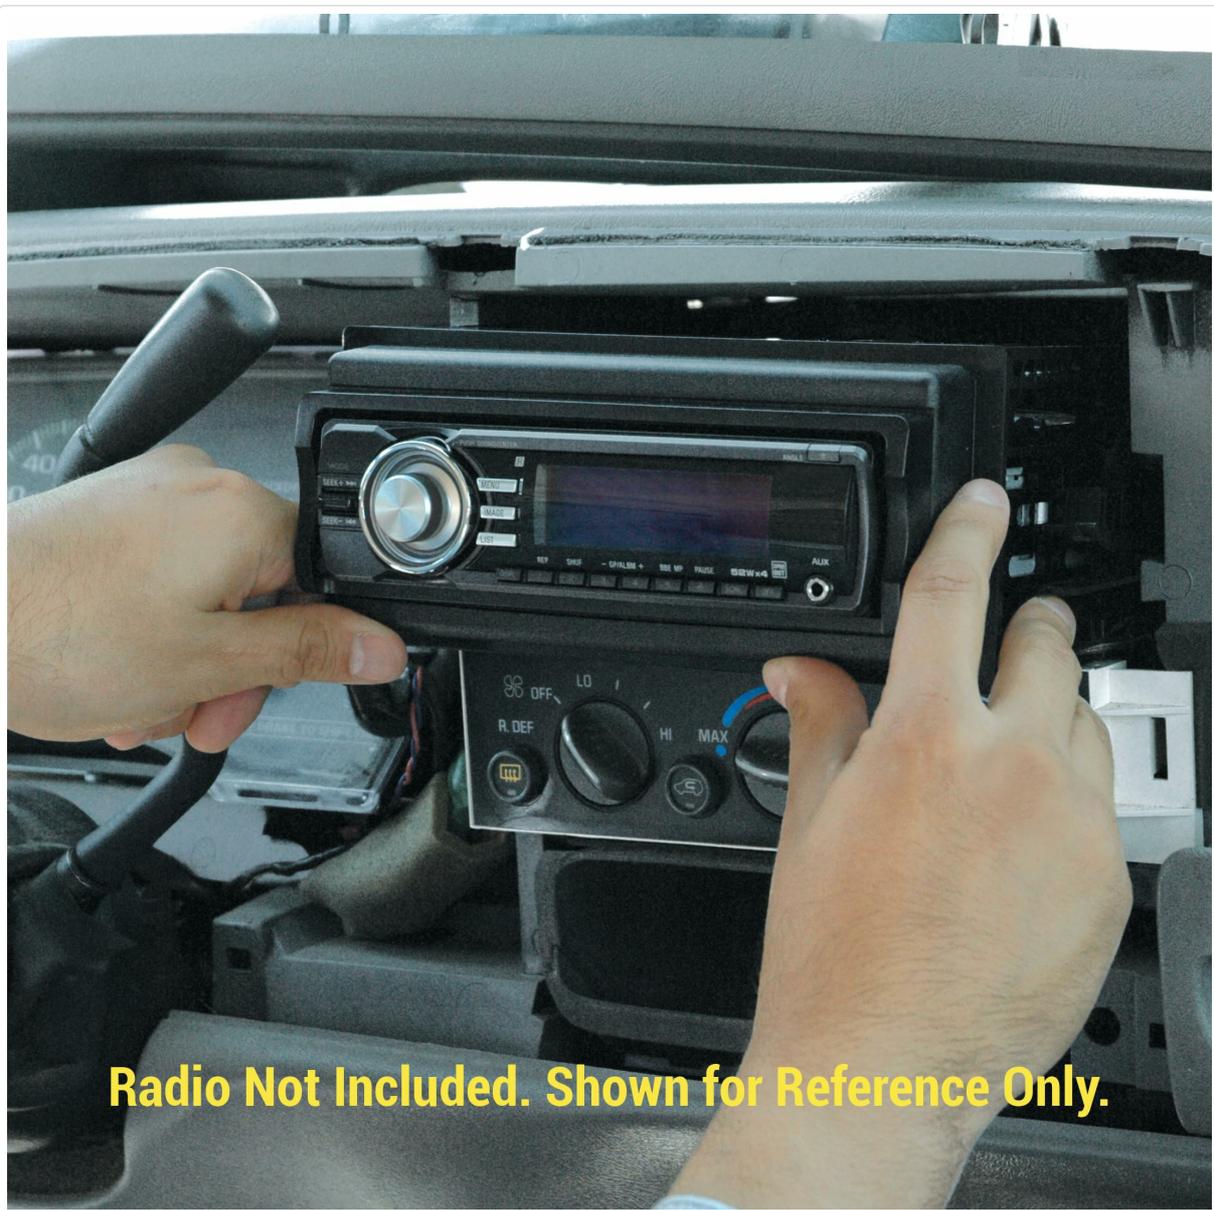
Page 2 of the vehicle compatibility guide for the Scosche GM1504B dash kit, continuing the list of compatible Chevrolet, GMC, Isuzu, Oldsmobile, Pontiac, and Saturn models.

4. INSTALLATION INSTRUCTIONS

The Scosche GM1504 dash kit is designed for a straightforward installation process. Detailed, illustrated, step-by-step instructions are included with your product. Always refer to these specific instructions for your vehicle model.

General Steps:

1. Carefully remove the factory radio and any surrounding dash trim according to your vehicle's service manual.
2. Assemble the appropriate mounting brackets from the kit to your aftermarket stereo, ensuring a secure fit.
3. Connect the necessary wiring harness (sold separately) and antenna adapter (sold separately) to your new stereo and vehicle's wiring.
4. Slide the assembled stereo and dash kit into the vehicle's dash opening until it clicks or secures into place.
5. Reinstall any removed dash trim.



A pair of hands installing a single DIN aftermarket car stereo into the vehicle's dashboard, with the Scosche GM1504 dash kit providing the mounting frame. The image notes 'Radio Not Included. Shown for Reference Only.'



Radio Not Included. Shown for Reference Only.

A single DIN aftermarket car stereo fully installed in a vehicle's dashboard using the Scosche GM1504 dash kit, blending seamlessly with the surrounding dash components. The image notes 'Radio Not Included. Shown for Reference Only.'



Radio Not Included. Shown for Reference Only.

A modern floating screen aftermarket head unit installed in a vehicle's dashboard using the Scosche GM1504 dash kit, viewed from the front. The image notes 'Radio Not Included. Shown for Reference Only.'



A modern floating screen aftermarket head unit installed in a vehicle's dashboard using the Scosche GM1504 dash kit, viewed from a side angle to show its profile. The image notes 'Radio Not Included. Shown for Reference Only.'

5. SETUP

Before beginning installation, ensure you have all components of the GM1504 kit, your aftermarket stereo, and any necessary wiring harnesses or antenna adapters (sold separately). Disconnect the vehicle's battery to prevent electrical issues during installation. Review the included instructions thoroughly to identify the specific brackets and steps required for your vehicle and stereo type.

6. OPERATING

The Scosche GM1504 dash kit is a passive mounting solution and does not have operational functions itself. Its purpose is to securely house and integrate your aftermarket car stereo into the vehicle's dashboard, allowing the stereo to operate correctly within the factory dash opening.

7. MAINTENANCE

The GM1504 dash kit requires minimal maintenance. To clean the visible surfaces of the dash kit, use a

soft, damp cloth with a mild automotive interior cleaner. Avoid abrasive cleaners or solvents, as these may damage the plastic finish. Ensure the area around the stereo remains free of debris to prevent interference with stereo operation or ventilation.

8. TROUBLESHOOTING

If you encounter issues during or after installation, consider the following:

- **Fitment Issues:** Double-check the vehicle compatibility guide to ensure the kit is correct for your specific make, model, and year.
- **Loose Stereo:** Ensure all mounting brackets are securely attached to both the stereo and the dash kit, and that the kit is firmly seated in the dash opening.
- **Dash Gaps:** Verify that all factory dash trim pieces are correctly reinstalled and aligned. Some installations may require minor trimming of factory plastic, as detailed in the included instructions.
- **Electrical Problems:** If the stereo is not powering on or functioning correctly, re-check all wiring connections, including the wiring harness and antenna adapter. Ensure the vehicle's battery is properly reconnected.
- **Confusing Instructions:** If the included instructions are unclear for your specific setup, review them carefully, paying close attention to diagrams and vehicle-specific notes. Online resources or professional installation assistance may also be helpful.

9. SPECIFICATIONS

Attribute	Detail
Product Dimensions	23.62 x 14.22 x 9.65 cm
Item Model Number	GM1504
Manufacturer	SCOSCHE
ASIN	B002RFY9Q2
Weight	362.87 g
Date First Available	August 6, 2012

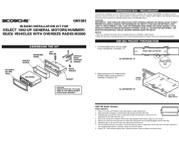
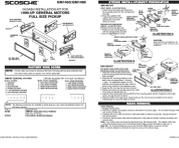
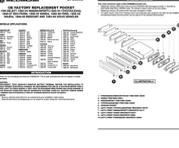
10. WARRANTY INFORMATION

For detailed warranty information regarding the Scosche GM1504 dash kit, please refer to the documentation included with your purchase or visit the official Scosche website. Warranty terms and conditions may vary.

11. CUSTOMER SUPPORT

If you require further assistance with the installation or have questions about the Scosche GM1504 dash kit, please contact Scosche customer support directly. Contact information can typically be found on the product packaging or the official Scosche website.

Related Documents - GM1504

 <p>The image shows the cover of the Scosche GM1504F In-Dash Installation Kit manual. It features the Scosche logo at the top left, followed by the product name 'GM1504F' and 'IN-DASH INSTALLATION KIT FOR 1982-2005 GENERAL MOTORS VEHICLES'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>Scosche GM1504F: In-Dash Installation Kit for 1982-2005 General Motors Vehicles</p> <p>Comprehensive installation guide for the Scosche GM1504F in-dash kit, designed for 1982-2005 General Motors vehicles. This manual provides detailed instructions for removing factory radios and mounting aftermarket car stereos across various GM brands including Buick, Cadillac, Chevrolet, GMC, Isuzu, Oldsmobile, and Pontiac.</p>
 <p>The image shows the cover of the Scosche GM1503/GM1503W In-Dash Installation Kit manual. It features the Scosche logo at the top left, followed by the product name 'GM1503/GM1503W' and 'IN-DASH INSTALLATION KIT FOR 1982-2002 GENERAL MOTORS VEHICLES - INSTALLATION INSTRUCTIONS'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>SCOSCHE GM1503/GM1503W In-Dash Installation Kit for 1982-2002 General Motors Vehicles</p> <p>Installation guide for SCOSCHE GM1503/GM1503W in-dash car stereo kits, covering radio removal and installation for 1982-2002 General Motors vehicles.</p>
 <p>The image shows the cover of the Scosche GM1500 Series In-Dash Installation Kit manual. It features the Scosche logo at the top left, followed by the product name 'GM1500 SERIES' and 'IN-DASH INSTALLATION KIT FOR 1982-2002 GENERAL MOTORS VEHICLES - INSTALLATION INSTRUCTIONS'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>Scosche GM1500 Series In-Dash Installation Kit for 1982-2002 General Motors Vehicles - Installation Instructions</p> <p>Comprehensive installation guide for the Scosche GM1500 Series In-Dash Installation Kit, covering a wide range of 1982-2002 General Motors vehicles. Includes detailed radio removal procedures for Buick, Cadillac, Chevrolet, GMC, Isuzu, Oldsmobile, and Pontiac models, along with factory wire codes.</p>
 <p>The image shows the cover of the Scosche GM1583 In-Dash Installation Kit manual. It features the Scosche logo at the top left, followed by the product name 'GM1583' and 'IN-DASH INSTALLATION KIT FOR GM, HUMMER, ISUZU VEHICLES - INSTALLATION GUIDE'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>Scosche GM1583 In-Dash Installation Kit for GM, Hummer, Isuzu Vehicles - Installation Guide</p> <p>Comprehensive installation guide for the Scosche GM1583 in-dash installation kit, designed for select 1992-UP General Motors, Hummer, and Isuzu vehicles. Includes detailed radio removal instructions for numerous models.</p>
 <p>The image shows the cover of the Scosche GM1485/GM1486 In-Dash Installation Kit manual. It features the Scosche logo at the top left, followed by the product name 'GM1485/GM1486' and 'IN-DASH INSTALLATION KIT FOR 1999-UP GENERAL MOTORS FULL SIZE PICKUP'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>Scosche GM1485/GM1486 In-Dash Installation Kit for 1999-Up General Motors Full Size Pickup</p> <p>Detailed installation instructions and wiring codes for the Scosche GM1485 and GM1486 in-dash stereo installation kits, designed for 1999 and newer General Motors full-size pickup trucks. Includes preparation steps, radio removal, and component identification.</p>
 <p>The image shows the cover of the Scosche UP9900B OE Factory Replacement Pocket manual. It features the Scosche logo at the top left, followed by the product name 'UP9900B' and 'OE FACTORY REPLACEMENT POCKET FOR CAR STEREO INSTALLATION'. Below this is a table of vehicle models and years covered by the kit. At the bottom, there is a small diagram of the car stereo unit and a 'TECH HELP' phone number.</p>	<p>Scosche UP9900B: OE Factory Replacement Pocket for Car Stereo Installation</p> <p>Install an aftermarket car stereo seamlessly with the Scosche UP9900B OE Factory Replacement Pocket. Compatible with select Nissan, Toyota, Lexus, Honda, Ford, Mazda, Mercury, and Volvo vehicles. Includes installation overview and parts identification.</p>