

ACC 501-Black 80/20 Loop

ACC Replacement Carpet Kit User Manual

Model: **501-Black 80/20 Loop**

Brand: **ACC**

1. INTRODUCTION

This manual provides essential information for the installation, maintenance, and care of your ACC Aftermarket Replacement Carpet Kit. This kit is specifically designed to replace the original flooring in compatible vehicles, offering a refreshed interior appearance and improved sound dampening.

The ACC carpet kit is manufactured using durable 80/20 Loop Carpet material and includes an OE-style welded heel pad for enhanced longevity in high-wear areas. A heavy jute pad is bonded to the underside of the carpet, contributing to comfort and noise reduction.

2. VEHICLE COMPATIBILITY

This ACC Replacement Carpet Kit is designed for the following vehicle specifications:

- **Vehicle Type:** Chevrolet Standard Cab Pickup Truck
- **Model Years:** 1967 to 1972
- **Drive Type:** 2 Wheel Drive (2WD)
- **Transmission:** Automatic

Ensure your vehicle matches these specifications for proper fitment. This kit is a custom-made product tailored to these specific vehicle characteristics.

3. PRODUCT FEATURES

Key features of your ACC Replacement Carpet Kit include:

- **Material:** High-quality 80/20 Loop Style Carpet.
- **Heel Pad:** OE-style welded heel pad for durability.
- **Sound Dampening:** Heavy Jute pad bonded to the underside for noise reduction and comfort.
- **Custom Fit:** Each kit is made to order for specific vehicle year, make, and model.
- **Color:** Available in Black (Model 501-Black).

4. INSTALLATION GUIDE

Installation of the ACC Replacement Carpet Kit requires careful attention to detail. While designed for a precise fit, some trimming may be necessary. It is recommended to perform this installation in a well-lit area with adequate space.

4.1. Preparation

1. **Remove Old Carpet:** Carefully remove the existing carpet from your vehicle. This may involve removing seats, console, and trim pieces. Document the removal process if unsure about reassembly.
2. **Clean Floorboard:** Thoroughly clean the vehicle's floorboard. Remove any dirt, debris, rust, or old adhesive. Ensure the surface is dry before proceeding.
3. **Inspect Floorboard:** Check for any rust or damage to the floorboard. Address any issues before installing the new carpet.

4.2. Carpet Placement and Trimming

The carpet kit is molded to fit the contours of your vehicle's floor. However, it may not come with pre-cut holes for all components (e.g., seat bolts, shifter, seatbelts). Trimming will likely be required.

1. **Initial Placement:** Carefully unroll the new carpet and place it into the vehicle's floorboard. Align it with the main contours and edges.
2. **Align and Adjust:** Work from the center outwards, pressing the carpet into place and aligning it with the vehicle's features. Ensure it sits flat and conforms to the floor.
3. **Marking for Cuts:** Identify areas where holes need to be cut for seat bolts, shifter, seatbelt anchors, and other components. Use a marker or chalk to outline these areas precisely. *Measure twice, cut once.*
4. **Careful Trimming:** Using a sharp utility knife or heavy-duty scissors, carefully cut out the marked areas. Start with small cuts and enlarge as needed to avoid over-cutting.
5. **Edge Trimming:** Trim any excess carpet around the edges where it meets door sills or interior trim panels. Ensure a neat, finished edge.

4.3. Securing the Carpet

Once the carpet is properly fitted and trimmed, it can be secured.

- **Reinstall Components:** Reinstall all seats, console, trim pieces, and other components that were removed. The weight of these components will help hold the carpet in place.
- **Adhesive (Optional):** For a more permanent installation, a spray adhesive designed for automotive use can be applied to the floorboard before laying the carpet. Follow the adhesive manufacturer's instructions carefully.



Image: Example of a black automotive carpet kit, showing its general shape and texture. This image represents the type of product being installed.

5. GENERAL USE AND CARE

Once installed, your new carpet requires minimal special operation. It is designed to withstand typical automotive use. The primary aspect of 'operation' involves maintaining its appearance and integrity.

- **Foot Traffic:** The carpet is designed for regular foot traffic. Consider using floor mats over high-wear areas for additional protection.
- **Spills:** Address spills immediately to prevent staining. Blot liquids with a clean cloth; do not rub.
- **Ventilation:** Ensure proper ventilation in the vehicle, especially after cleaning or if moisture is introduced, to prevent mildew.

6. MAINTENANCE AND CLEANING

Regular maintenance will extend the life and preserve the appearance of your ACC carpet kit.

6.1. Routine Cleaning

- **Vacuuming:** Regularly vacuum the carpet to remove loose dirt and debris. Use a vacuum cleaner with strong suction and appropriate attachments for automotive interiors.
- **Spot Cleaning:** For small spots or spills, use a mild automotive carpet cleaner. Apply the cleaner to a clean cloth, then blot the stain. Do not saturate the carpet.

6.2. Deep Cleaning

- **Carpet Extractor:** Periodically, a carpet extractor (steam cleaner) can be used for a deeper clean. Follow the instructions of the carpet extractor and cleaning solution. Ensure the carpet dries completely to prevent mildew.
- **Professional Cleaning:** For stubborn stains or extensive cleaning, consider professional automotive interior detailing services.

6.3. Important Considerations

- Avoid using harsh chemicals, bleach, or abrasive cleaners, as these can damage the carpet fibers and color.
- Ensure the carpet is completely dry after any wet cleaning to prevent odors or mold growth.

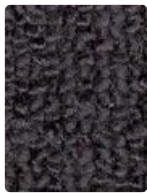


Image: A close-up view of the black 80/20 loop carpet texture, illustrating the material's appearance. This texture is designed for durability and ease of cleaning.

7. TROUBLESHOOTING

While the ACC carpet kit is designed for a precise fit, minor issues may arise during or after installation. Here are some common concerns and their resolutions:

Problem	Possible Cause	Solution
Carpet does not lay flat or has wrinkles.	Improper alignment during installation; carpet needs to settle.	Re-align the carpet, working from the center outwards. Ensure all components are reinstalled to help press the carpet down. Allow time for the carpet to conform to the floor contours, especially in warmer conditions.
Holes for bolts/shifter do not align.	Inaccurate marking or cutting during installation.	Carefully re-evaluate the alignment. If cuts are too small, enlarge them incrementally. If cuts are too large, consider using larger washers or trim rings to cover gaps, or consult with an automotive upholstery specialist.
Edges are not neat or fraying.	Improper trimming technique.	Use a very sharp utility knife or heavy-duty scissors for clean cuts. For minor fraying, a fabric adhesive or clear nail polish can be applied sparingly to the cut edge to prevent further fraying. Ensure edges are tucked under trim where possible.
Unpleasant odor after installation.	New product odor; moisture trapped underneath.	Ensure good ventilation in the vehicle. If moisture is suspected, remove the carpet temporarily to allow the floorboard and carpet backing to dry completely. Use automotive odor eliminators if necessary.

8. PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	ACC

Attribute	Detail
Model Number	501-Black 80/20 Loop
ASIN	B006E4KVNМ
Material Type	80/20 Loop Carpet
Color	Black
Vehicle Fitment	1967-1972 Chevrolet Standard Cab Pickup Truck, 2WD Automatic
Special Features	OE-style welded heel pad, heavy Jute pad backing for sound dampening.

9. WARRANTY AND SUPPORT

For specific warranty information regarding your ACC Replacement Carpet Kit, please refer to the documentation provided with your purchase or contact ACC customer support directly. Warranty terms typically cover manufacturing defects.

For technical assistance, installation queries, or product support, please contact the manufacturer or your authorized dealer. When contacting support, please have your product model number (501-Black 80/20 Loop) and purchase details readily available.

Manufacturer: ACC

Contact Information: Please visit the official ACC website or refer to your purchase invoice for the most current contact details.

© 2024 ACC. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question