

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Thule](#) /

› [Thule 754002 Rapid System Foot Pack User Manual](#)

## Thule 754002

# Thule 754002 Rapid System Foot Pack User Manual

Model: 754002

Brand: Thule

## PRODUCT OVERVIEW

The Thule Footpack 754 is an essential component of a Thule roof rack system, specifically designed for vehicles without pre-installed roof rails or fixed roof top fixation points. This system utilizes patented clamping technology to securely attach the roof rack to your vehicle's normal roof, providing a stable base for carrying various loads.

It is a kit-based roof rack system, meaning it requires additional components like Thule roof bars and a vehicle-specific fitting kit for complete installation. This foot pack is compatible with Thule WingBar, SlideBar, and SquareBar roof bars, offering versatility for different carrying needs. Each pack contains four feet, which are the primary attachment points to the vehicle's roof.

## PACKAGE CONTENTS

Before beginning installation, please verify that all components are present in your package:

- 4 x Thule Rapid System Foot Pack 754 feet
- 1 x Torque Key (for precise tightening)
- 4 x Covers (for securing the feet)
- Instruction Manual (this document)
- Locks (integrated with the foot pack)

*Note: Roof bars and vehicle-specific fitting kits are sold separately and are required for a complete roof rack system.*

## SETUP AND INSTALLATION

The Thule Rapid System Foot Pack 754 is designed for straightforward installation. Ensure your vehicle's roof is clean and dry before beginning. Refer to the specific fitting kit instructions for your vehicle model for precise measurements and

attachment points.

## Step 1: Prepare the Foot Packs

Unpack the four foot packs. Each foot pack contains a mechanism for attaching to the vehicle's roof and a slot for the roof bar. Ensure the locking cylinders are in place.



Image: A single Thule Rapid System Foot Pack 754, highlighting its design and lock mechanism.

## Step 2: Attach Roof Bars to Foot Packs

Slide the Thule roof bars (WingBar, SlideBar, or SquareBar, sold separately) into the designated slots on the foot packs. Ensure the bars are centered and evenly distributed between the foot packs. The foot packs are designed to securely hold the bars in place.



Image: Thule Foot Pack 754 with a black roof bar, demonstrating how the bar integrates with the foot pack.



Image: Thule Foot Pack 754 with a silver roof bar, showing an alternative bar type compatibility.

### Step 3: Position on Vehicle Roof

Carefully place the assembled roof rack system onto your vehicle's roof. Consult your vehicle-specific fitting kit instructions for the exact positioning and measurements for the front and rear bars. Proper positioning is crucial for safety and optimal performance.

### Step 4: Secure the Foot Packs

Using the provided torque key, tighten the clamping mechanism on each foot pack according to the instructions in your vehicle-specific fitting kit. The torque key ensures that the feet are tightened to the correct specification, preventing overtightening or undertightening. The patented clamping technology will securely hold the rack to the vehicle's normal roof.

### Step 5: Install Covers and Lock

Once all four foot packs are securely tightened, install the protective covers over the clamping mechanisms. Use the integrated locks to secure the covers, which helps prevent theft and tampering. Ensure all locks are engaged before driving.

## Vehicle Compatibility Reference

For detailed vehicle compatibility, refer to the official Thule fit guide or the compatibility chart provided with your specific fitting kit. An example of such a chart is shown below, illustrating how different vehicle models are matched with specific Thule components.

THULE®		スーリー ベースキャリア適合表						2013年11月現在
メーカー	車種名	タイプ	適合年式	車両型式	フット型番	バー型番	車種別取付キット型番	備考
トヨタ	プリウス (PHV含む)		2009年 5月	ZVW30	TH754	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1566	
	プリウスα	パノラマルーフ車可	2011年 5月	ZVW40	TH754	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1668	
	ノア・ヴォクシー		2007年 6月	ZRR7#	TH754	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1460	
			2001年 11月	2007年 6月	AZR6#	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1256	取付位置固定
	エスティマ (ハイブリッド含む)	ルーフレール無し車	2006年 1月	#R50W,55W	TH754	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1384	サンルーフ作動時キャリヤに干渉する場合があります
	アルファード・ヴェルファイア (ハイブリッド含む)		2008年 5月	ANH2#,GGH2#	TH754	スクエアバー TH763 エアロバー TH863 ウイングバー TH963	THKIT1491	
			2002年 5月	2008年 5月	ANH1#,MNH1#,ATH10	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1267	取付位置固定
日産	サクシード・プロボックス		2002年 7月	NCP5#,NLP5#	TH754	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1316	
	セレナ		2010年 11月	C26	TH754	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1650	
	エルグランド		2010年 8月	E52	TH754	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT1628	取付位置固定
	ジューケ	ルーフレールベース付き車	2010年 6月	F15	TH754	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT1619	
	エクストレイル		2007年 8月	T31	TH753	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT3059	取付位置固定 ハイパールーフレール車不可 オプションルーフラック車不可
	NV200バネット		2009年 5月	M20	TH753	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT3085	
	NV350キャラバン	ロング標準ルーフ	2012年 6月	E26	TH753	スクエアバー TH762 エアロバー TH862 ウイングバー TH962	THKIT3122	
ホンダ	フィット (ハイブリッド含む)	スカイルーフ車不可	2007年 10月	2013年 9月	GE#,GP#	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1465	
	ステップワゴン		2009年 10月	RK#	TH754	スクエアバー TH763 エアロバー TH863 ウイングバー TH963	THKIT1583	
スバル	レガシィツーリングワゴン	ルーフレール無し車	2009年 5月	BR9	TH753	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT3082	
	エクシーガ	ガラスルーフ付き車含む	2008年 6月	YA#	TH754	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1545	
マツダ	プレマシー	ルーフレール無し車	2010年 7月	CW#	TH753	スクエアバー TH760 エアロバー TH860 ウイングバー TH960	THKIT3080	
			2005年 2月	2010年 7月	CR#	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT3080	
	アテンザ	4ドアセダン	2008年 1月	2012年 11月	GH#	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT3069	取付位置固定
	CX-5	ルーフレール無し車	2012年 2月	KE#	TH753	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT3069	前/後バーの距離が広いため 装着できないルーフボックスや アクセサリーがあります
	三菱	デリカD:5		2007年 1月	CV5W	スクエアバー TH763 エアロバー TH863 ウイングバー TH963	THKIT1485	
BMW	3シリーズツーリング F31	ダイレクトルーフレール付き車	2012年	3A#	TH753	スクエアバー TH761 エアロバー TH861 ウイングバー TH961	THKIT4023	
	MINI クロスオーバー R60		2011年	ZA16,ZC16	TH753	スクエアバー TH760 エアロバー TH860 ウイングバー TH960	THKIT4020	
VW	ゴルフ6	3ドア・5ドア ハッチバック	2009年 - 2013年	1K#	TH754	スクエアバー TH769 エアロバー TH869 ウイングバー TH969	THKIT1323	プロテクションシート付属

Image: An example of a Thule vehicle compatibility chart, detailing suitable foot packs and bars for different car models. This chart is in Japanese, but similar guides are available in English.

## OPERATING INSTRUCTIONS

Once installed, the Thule Rapid System Foot Pack, in conjunction with appropriate roof bars and accessories, allows you to transport various items on your vehicle's roof. The maximum load capacity for this foot pack system is 75 kg (approximately 165.4 pounds). Always adhere to the lower of the two load limits: either the capacity of your Thule roof rack system or your vehicle manufacturer's recommended roof load capacity.

- **Load Distribution:** Distribute the load evenly across the roof bars.
- **Secure Fastening:** Always ensure that any cargo attached to the roof bars is securely fastened using appropriate Thule accessories (e.g., straps, cargo boxes, bike carriers).
- **Driving Adjustments:** Be aware that adding a roof rack and cargo will affect your vehicle's handling, braking, and fuel consumption. Drive cautiously, especially in crosswinds and when cornering.
- **Height Clearance:** Remember the increased height of your vehicle when entering garages, car washes, or low-clearance areas.

## MAINTENANCE

Regular maintenance will prolong the life and ensure the safe operation of your Thule Rapid System Foot Pack:

- **Regular Checks:** Periodically check all bolts and fasteners for tightness, especially after the first few drives and before long journeys.
- **Cleaning:** Clean the foot packs and roof bars regularly with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Lubrication:** Lightly lubricate the lock cylinders periodically with a non-greasy lubricant to ensure smooth operation.
- **Storage:** If removing the roof rack for extended periods, store it in a clean, dry place away from direct sunlight.

## TROUBLESHOOTING

Most issues with the Thule Rapid System Foot Pack can be resolved by re-checking the installation steps. If you encounter problems, consider the following:

- **Loose Fit:** If the foot packs feel loose, re-tighten them using the torque key to the specified setting. Ensure the correct fitting kit for your vehicle is used.
- **Excessive Noise:** Wind noise can occur if the roof bars are not correctly positioned or if accessories are not properly secured. Check all components for proper alignment and tightness.
- **Difficulty Locking:** Ensure the covers are correctly aligned before attempting to lock. If the lock cylinder is stiff, apply a small amount of lubricant.
- **Missing Parts:** If any parts were missing upon unboxing, contact your retailer or Thule customer support immediately.

For further assistance, please refer to the Thule website or contact their customer support.

## SPECIFICATIONS

Attribute	Value
Model Number	754002
Brand	Thule
Product Dimensions (L x W x H)	15.35 x 7.87 x 3.54 inches
Item Weight	5.37 pounds
Load Capacity	75 kg (165.4 Pounds)
Mounting Type	Clamp Mount, Roof Mount, Rails (for normal roofs)
Compatibility	Thule WingBar, SlideBar, SquareBar
Includes	4 feet, Torque Key, Covers, Locks

## WARRANTY AND SUPPORT

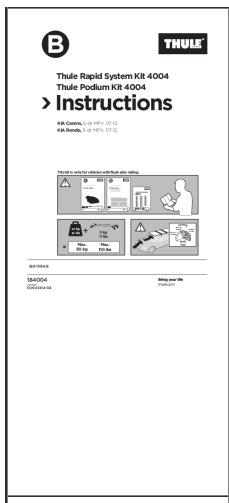
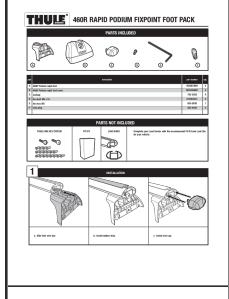
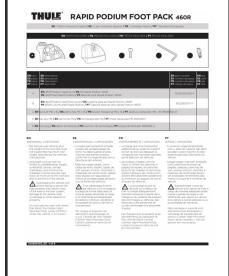
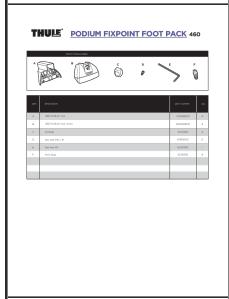
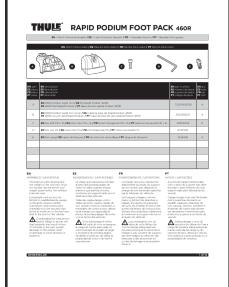
Thule products are tested rigorously and are subject to strict quality controls. Thule offers a limited warranty on its products. For specific warranty terms and conditions, please refer to the official Thule website or the warranty information provided with your purchase.

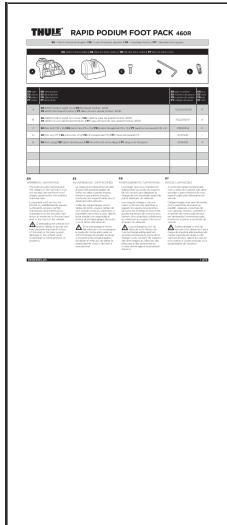
For technical support, spare parts, or any inquiries regarding your Thule Rapid System Foot Pack 754, please visit the official Thule website or contact Thule customer service directly. You can often find detailed FAQs, installation videos, and contact information on their support pages.

**Thule Official Website:** [www.thule.com](http://www.thule.com)

© 2023 Thule. All rights reserved. This manual is for informational purposes only.

## Related Documents - 754002

	<p><b>Thule Rapid System Kit 4004 &amp; Podium Kit 4004 Installation Instructions</b></p> <p>Step-by-step installation guide for Thule Rapid System Kit 4004 and Thule Podium Kit 4004 for KIA Carens (2007-2012) and KIA Rondo (2007-2012) with flush side railings.</p>
	<p><b>Thule 460R Rapid Podium Fixpoint Foot Pack: Installation and Guidelines</b></p> <p>Comprehensive guide for installing and using the Thule 460R Rapid Podium Fixpoint Foot Pack, including parts list, step-by-step instructions, operation, and warranty information.</p>
	<p><b>Thule 460R Rapid Podium Foot Pack: Product Overview and Safety Guide</b></p> <p>Detailed information on the Thule 460R Rapid Podium Foot Pack, including included parts, part numbers, quantities, and essential safety warnings for proper use and load security.</p>
	<p><b>Thule Podium Fixpoint Foot Pack 460 Installation Guide</b></p> <p>This document provides installation instructions, a parts list, and operation details for the Thule Podium Fixpoint Foot Pack 460. It covers parts included and not included, step-by-step assembly, foot operation, and lock installation.</p>
	<p><b>Thule Rapid Podium Foot Pack 460R: Installation and User Guide</b></p> <p>Comprehensive guide for installing and using the Thule Rapid Podium Foot Pack 460R roof rack system, including safety warnings, loading guidelines, and maintenance tips.</p>



### [Thule Rapid Podium Foot Pack 460R Installation Guide and Product Information](#)

Comprehensive guide for installing the Thule Rapid Podium Foot Pack 460R, including parts list, safety warnings, installation steps, and warranty information.