DreamLine DL-6152-01CL

DreamLine Prime Frameless Sliding Shower Enclosure, Base & QWALL-4 Kit User Manual

Model: DL-6152-01CL

Introduction

This manual provides essential instructions for the installation, operation, maintenance, and troubleshooting of your DreamLine Prime Frameless Sliding Shower Enclosure, Shower Base, and QWALL-4 Shower Backwall Kit. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The DreamLine Prime series offers a modern, frameless design for your bathroom, combining functionality with aesthetic appeal. This kit includes a sliding shower enclosure, a durable shower base, and a QWALL-4 backwall system for a complete shower solution.


MODEL INFORMATION


DLT-7033330

SLIMLINE SHOWER BASE

QUARTER ROUND

CORNER DRAIN

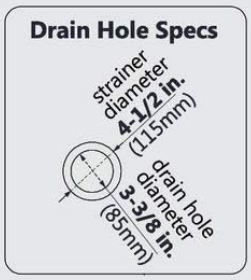

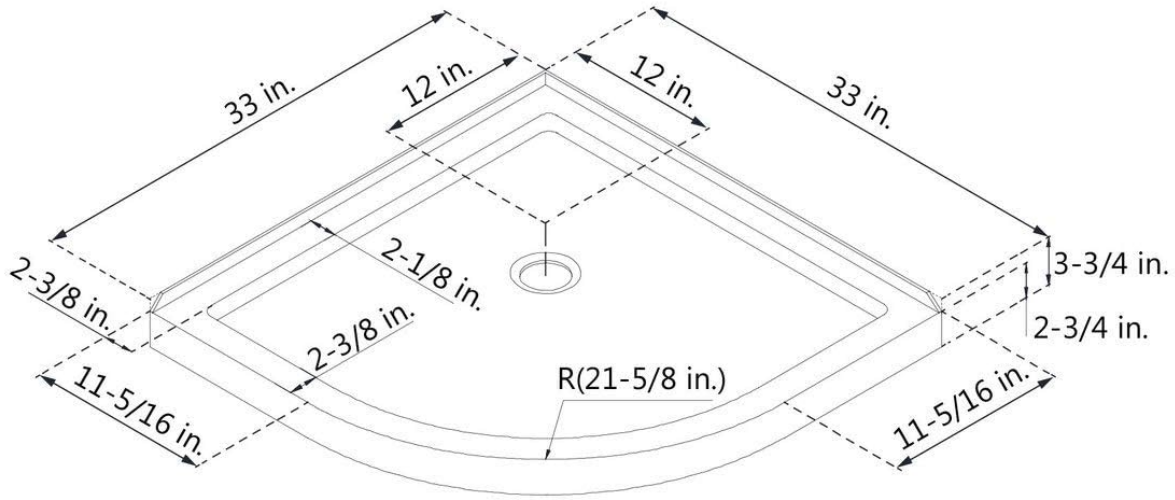

DreamLine reserves the right to update or modify the hardware or materials pictured without prior notice for the purpose of product improvement and customer satisfaction.

Image: DreamLine Prime Frameless Sliding Shower Enclosure, Base, and QWALL-4 Kit installed in a bathroom setting.

Safety Information

- Always wear safety glasses during installation.
- Handle glass panels with extreme care. Tempered glass can shatter if struck on the edge.
- Ensure the installation area is level and structurally sound.
- Use appropriate tools and follow all local plumbing and building codes.
- Two people are recommended for safe installation due to the weight and size of components.

Setup and Installation

Proper installation is crucial for the performance and longevity of your shower enclosure. Refer to the detailed installation guide included with your product for step-by-step instructions. The following is a general overview.

1. Prepare the Area

1. Ensure the shower area is clean, dry, and free of debris.
2. Verify that walls are plumb and the floor is level.
3. Confirm all necessary plumbing is in place for the shower base drain.

2. Install the Shower Base

The shower base provides a stable and waterproof foundation. It features integrated tile flanges and a slip-resistant surface.



Image: The DreamLine Prime quarter-round shower base.



Image: Diagram highlighting key features of the shower base, such as integrated tile flanges and slip-resistant surface.

1. Position the base and mark the drain location.
2. Apply mortar or a suitable adhesive to the subfloor.
3. Set the base, ensuring it is level and properly connected to the drain.
4. Allow adequate curing time before proceeding.

3. Install the QWALL-4 Backwall Kit

The QWALL-4 backwall panels are designed for easy installation and a watertight seal.

1. Measure and trim panels as needed to fit the shower area.
2. Apply adhesive to the back of the panels and firmly press them onto the wall.
3. Seal all seams and edges with silicone sealant to prevent water leakage.

4. Assemble the Shower Enclosure

Carefully assemble the frameless sliding door system according to the provided diagrams.



Image: Detail of the top rail and glass panel connection.



Image: Detail of the bottom rail and water seal.

1. Install wall profiles and tracks.
2. Mount the stationary glass panels.
3. Install the sliding door panel and rollers.
4. Attach the door handle.
5. Apply silicone sealant to all exterior joints where the enclosure meets the walls and base. Allow 24 hours for sealant to cure before use.



Image: Ergonomic handle for the sliding shower door.

Operating Instructions

The DreamLine Prime shower enclosure features a smooth-gliding sliding door for easy access.

- To open the door, gently slide the handle along the track.
- To close the door, slide it back until it meets the stationary panel or wall profile, ensuring a complete seal.
- Avoid forcing the door if it encounters resistance. Check for obstructions in the track.

Maintenance and Care

Regular cleaning and proper care will maintain the appearance and functionality of your DreamLine shower enclosure.

Glass Panels

- Clean glass panels regularly with a soft cloth and a non-abrasive glass cleaner.

- Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the glass surface or protective coatings.
- For best results, wipe down glass after each use to prevent water spot buildup. A squeegee can be used.

Hardware and Frame

- Clean metal components with a soft, damp cloth.
- Do not use abrasive cleaners or solvents on metal finishes.
- Periodically check screws and fasteners for tightness and re-tighten if necessary.

Shower Base and Backwall



Image: Detail of the slip-resistant surface texture on the shower base.

- Clean the acrylic shower base and QWALL-4 backwall with mild soap and water.
- Avoid abrasive cleaners, steel wool, or harsh chemicals that can scratch or dull the surface.
- For stubborn stains, consult the manufacturer's recommendations for acrylic surface cleaning.

Troubleshooting

This section addresses common issues you might encounter with your shower enclosure.

Problem	Possible Cause	Solution
Water leakage from enclosure	Improperly applied sealant, loose seals, gaps in installation.	Inspect all silicone seals and reapply where necessary. Check that all gaskets and sweeps are correctly positioned. Ensure screws are tight.
Sliding door sticks or is difficult to move	Debris in the track, misaligned rollers, worn rollers.	Clean the bottom track thoroughly. Check roller alignment and adjust if needed. Replace worn rollers if necessary.
Glass appears cloudy or stained	Hard water deposits, residue from improper cleaners.	Use a specialized hard water stain remover for glass. Always use non-abrasive glass cleaners. Regular cleaning prevents buildup.

Specifications

Key specifications for the DreamLine Prime Frameless Sliding Shower Enclosure, Base & QWALL-4 Kit (Model: DL-6152-01CL).

- **Model Number:** DL-6152-01CL
- **Product Dimensions:** 33"D x 33"W x 76.75"H
- **Door Style:** Frameless, Sliding
- **Material:** Tempered Glass (Enclosure), Fiberglass Reinforced Acrylic/ABS (Base), Acrylic (Backwall)
- **Color:** Clear Glass
- **Item Weight:** Approximately 150 pounds
- **Installation Type:** Screw-In (Enclosure), Mortar/Adhesive (Base/Backwall)
- **Shower Base Features:** Integrated Tile Flanges, Slip Resistant Surface Pattern, Opening for Standard 2" Compression Fitted Drain (drain not included)
- **UPC:** 849388004138

Warranty and Support

DreamLine products are manufactured with quality materials and craftsmanship. This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.
For technical assistance, replacement parts, or warranty claims, please contact DreamLine customer support. Contact information can typically be found on the DreamLine website or on the packaging materials.
DreamLine Customer Support: Visit DreamLine Support Website

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question