Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WeatherTech 465511

WeatherTech FloorLiner Instruction Manual

Custom Fit FloorLiners for Chevrolet Corvette - 1st Row (465511), Grey

1. Introduction

Thank you for choosing WeatherTech FloorLiners. These custom-fit floor protection solutions are designed to provide superior coverage and preserve the interior of your vehicle. This manual provides essential information for the proper installation, use, and maintenance of your new FloorLiners.
This product is specifically designed for select **2012-2013 Chevrolet Corvette Models**, covering the 1st Row (Driver & Passenger) in Grey color.

2. Product Features

WeatherTech FloorLiners are engineered with advanced features to ensure maximum protection and durability:

- **Laser Measured Fit:** Each FloorLiner is precisely laser-measured to ensure a perfect, custom fit for your vehicle's specific floor contours.
- **Patented HDTE Material:** Constructed from a High-Density Tri-Extruded (HDTE) material, providing a rigid core for strength, surface friction to the carpet, and a tactile feel.
- **Advanced Surface Channels:** Designed with channels that effectively carry fluids and debris to a lower reservoir, minimizing fluid movement while driving.
- **Comprehensive Coverage:** Offers protection in the front, back, and even up the sides of your vehicle's footwell.
- **Extreme Strength:** Premium rigid material resists cracking, warping, and is wear-resistant.
- **Proudly Made in the USA:** Designed, engineered, and manufactured with American-made tooling.

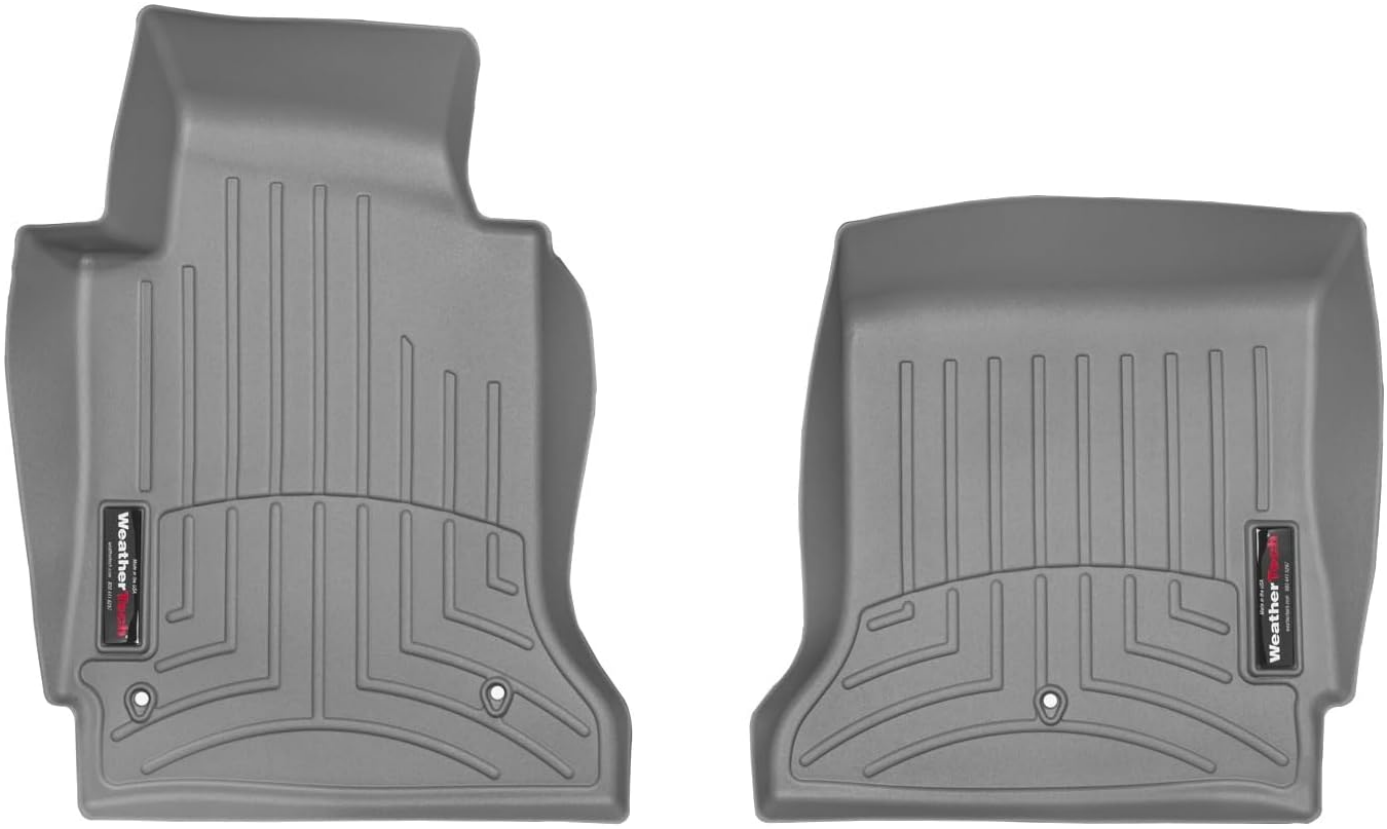


Image: A pair of grey WeatherTech Custom Fit FloorLiners, showcasing their precise contours and design.



Image: A grey WeatherTech FloorLiner perfectly installed in the driver's side footwell of a vehicle, demonstrating its custom fit.

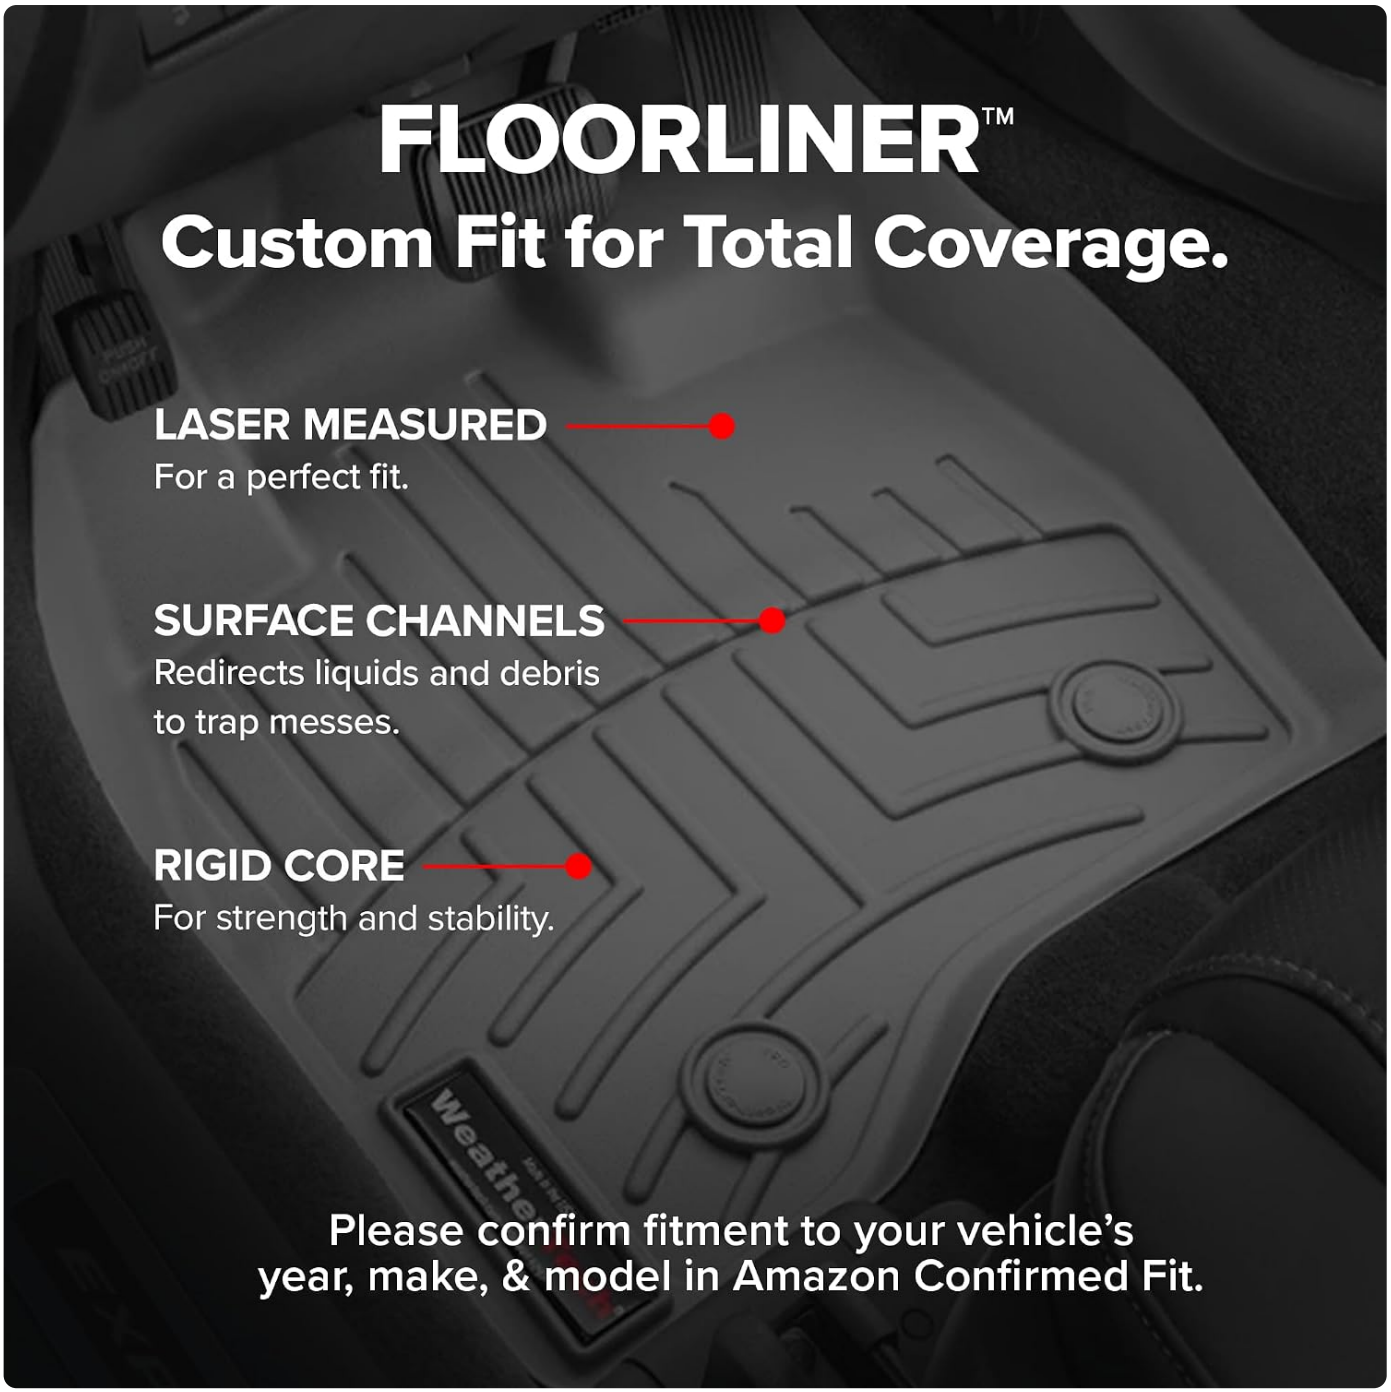


Image: An illustrative diagram pointing out key features of the FloorLiner: laser-measured precision, channels for liquid redirection, and a rigid core for stability.



Image: A close-up view of the FloorLiner's surface channels, showing how they contain liquids, alongside a detail of the retention system.



Image: A group of WeatherTech team members standing proudly, emphasizing the 'Proudly Made in the USA' commitment.



Image: Text highlighting the 'Extreme Strength' of the FloorLiner, noting its resistance to cracking, warping, and wear.



Image: A person hosing down a FloorLiner, demonstrating the ease of cleaning and maintenance.



Image: A view of feet on a FloorLiner, accompanied by text emphasizing its role in protecting your vehicle's investment and resale value.



Image: Text stating 'Protection Built To Last' and 'All Season Year-Round Floor Mats', highlighting the product's durability and versatility.

Official Product Video

Video: An official WeatherTech video demonstrating the features and benefits of WeatherTech Floor Liner Mats for various vehicles. This video provides a visual overview of the product's design, material, and protective capabilities.

3. Setup and Installation

Installing your WeatherTech FloorLiners is a straightforward process. Follow these steps for optimal fit and safety:

1. **Prepare the Vehicle:** Ensure the vehicle's floor is clean and free of any debris or existing floor mats before installation.
2. **Position the Liner:** Carefully slip the FloorLiner into place, ensuring it aligns with the vehicle's floor contours and

extends underneath the pedals.

3. **Secure with Retention Devices:** Secure the FloorLiner using your vehicle's existing retention devices (if applicable). If your vehicle does not have retention devices or if supplemental devices are provided by WeatherTech, ensure they are properly installed and engaged.
4. **Check Pedal Operation: Crucially, always verify that the FloorLiner does not interfere with the full operation of the accelerator, brake, and clutch pedals.** Depress each pedal fully to ensure there is no obstruction. If any interference is detected, re-adjust the FloorLiner immediately.

For a visual guide, please refer to the installation segment in the product video provided in the 'Product Features' section.

4. Operating Instructions

Once installed, your WeatherTech FloorLiners operate passively to protect your vehicle's interior. No specific operational steps are required beyond ensuring they remain properly seated and do not obstruct pedal movement.

- Regularly check that the FloorLiners are securely in place and have not shifted.
- The advanced surfacing is designed to contain spills and debris, keeping your vehicle's carpet clean.

5. Maintenance and Care

Maintaining your WeatherTech FloorLiners is simple and helps prolong their lifespan and appearance:

- **Regular Cleaning:** For routine cleaning, simply remove the FloorLiners from your vehicle. Shake out any loose dirt or debris.
- **Washing:** Wash the FloorLiners with mild soap and water. A soft brush can be used for stubborn dirt.
- **Drying:** Allow the FloorLiners to air dry completely before reinstalling them in your vehicle. Do not use harsh chemicals or abrasive cleaners, as these may damage the material.



Image: The ease of cleaning WeatherTech FloorLiners is demonstrated by a person rinsing one with water.

6. Troubleshooting

Most issues with WeatherTech FloorLiners can be resolved with simple checks:

- **Improper Fit:** If the FloorLiner does not seem to fit correctly, ensure it is the correct model for your vehicle's year, make, and model. Double-check that it is fully seated and not obstructed by any other items in the footwell.
- **Pedal Interference:** If the FloorLiner interferes with pedal operation, immediately remove it and re-install, ensuring it is positioned correctly and securely. Never drive with a FloorLiner that obstructs pedal movement.
- **Slipping:** Ensure the FloorLiner is properly secured with all retention devices. The HDTE material is designed to provide surface friction, but proper installation is key to preventing movement.

If you encounter persistent issues, please refer to the 'Warranty and Support' section for contact information.

7. Specifications

Attribute	Detail
Brand	WeatherTech
Model Number	465511
Color	Grey
Coverage Area	1st Row (Driver & Passenger)
Compatibility	Select 2012-2013 Chevrolet Corvette Models
Material	Patented High-Density Tri-Extruded (HDTE)
Country of Origin	USA

8. Warranty and Support

WeatherTech products are known for their quality and durability. For specific warranty information regarding your FloorLiners, please refer to the official WeatherTech website or the documentation included with your purchase.
For further assistance, technical support, or to explore other WeatherTech products, please visit the official WeatherTech store or contact their customer service:

- **WeatherTech Store:** Visit the WeatherTech Store on Amazon
- **General Inquiries:** Refer to the contact information available on the official WeatherTech website.

© 2024 WeatherTech. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00FAY8EX6

More documents and user manuals: **https://manuals.plus/**