

[Manuals.plus](#) /

> [Villeroy & Boch](#) /

> Villeroy & Boch Subway Compact Toilet Seat 9M6661 Instruction Manual

## Villeroy & Boch 9M6661

# Villeroy & Boch Subway Compact Toilet Seat 9M6661 Instruction Manual

## INTRODUCTION

---

This instruction manual provides essential information for the proper installation, usage, maintenance, and troubleshooting of your Villeroy & Boch Subway Compact Toilet Seat, model 9M6661. Please read this manual thoroughly before installation and retain it for future reference.

## SAFETY INFORMATION

---

- Always ensure the toilet bowl surface is clean and dry before installation.
- Do not overtighten mounting screws, as this may damage the toilet bowl or the seat.
- Avoid standing on the toilet seat, as it is not designed to support full body weight and may cause injury or damage.
- Keep small parts out of reach of children to prevent choking hazards.
- If any part is damaged or missing, do not proceed with installation. Contact customer support.

## PACKAGE CONTENTS

---

Verify that all components are present and undamaged before beginning installation:

- Villeroy & Boch Subway Compact Toilet Seat (Duroplast, White Alpin)
- Mounting Hardware (Stainless Steel Hinges, screws, washers, nuts)



*Image: The Villeroy & Boch Subway Compact Toilet Seat in White Alpin, showcasing its D-shaped design and smooth finish.*

## SETUP AND INSTALLATION


---

Follow these steps to properly install your toilet seat:

1. **Prepare the Toilet Bowl:** Ensure the toilet bowl is clean and dry. Remove any old toilet seat and clean the mounting holes thoroughly.
2. **Assemble Hinges:** Attach the stainless steel hinges to the toilet seat according to the provided hardware instructions. Ensure they are securely fastened but allow for slight adjustment.
3. **Position the Seat:** Place the toilet seat onto the toilet bowl, aligning the hinge posts with the mounting holes on the bowl.
4. **Secure the Seat:** From underneath the toilet bowl, insert the screws through the mounting holes and secure them with washers and nuts. Hand-tighten first to allow for final alignment.
5. **Align and Tighten:** Adjust the seat position to ensure it is centered and aligned with the toilet bowl. Once satisfied, fully tighten the nuts using an appropriate tool, being careful not to overtighten.
6. **Test Stability:** Gently test the seat for stability. It should not wobble or shift.



*Image: The Villeroy & Boch Subway Compact Toilet Seat shown installed on a wall-mounted toilet, demonstrating its integrated appearance.*

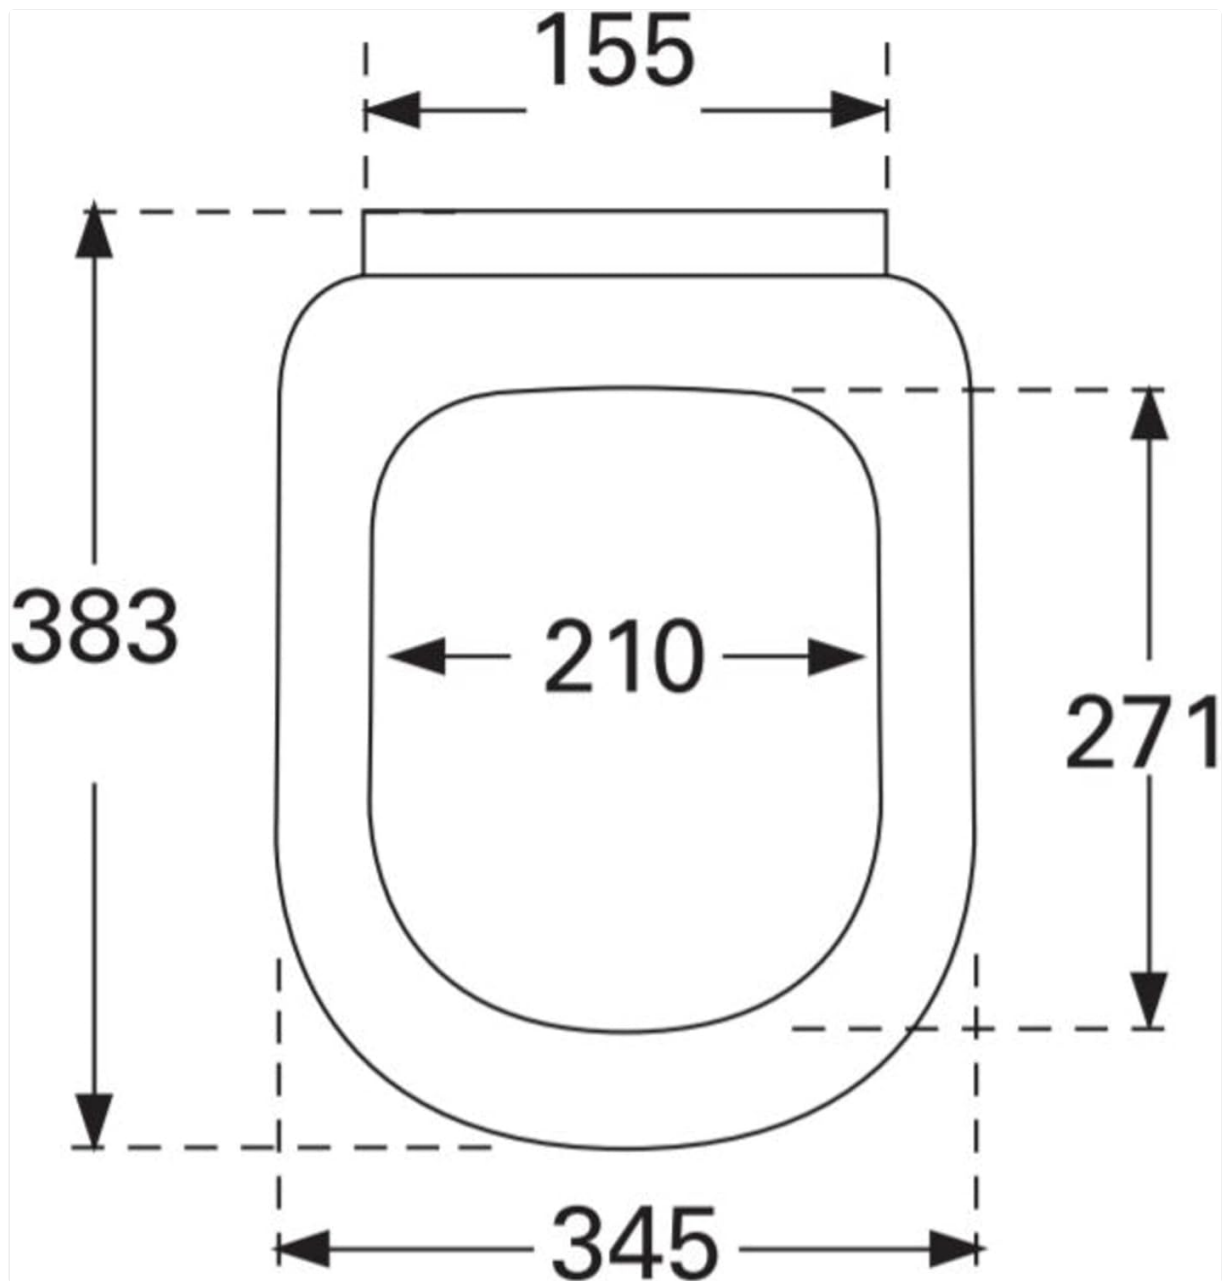

*Image: Technical diagram illustrating the key dimensions of the Villeroy & Boch Subway Compact Toilet Seat. Measurements include a total length of 383mm, width of 345mm, inner opening length of 271mm, inner opening width of 210mm, and hinge spacing of 155mm.*

## USAGE

---

The Villeroy & Boch Subway Compact Toilet Seat is designed for standard use. Lift the seat and lid gently when needed and lower them carefully. The Duroplast material provides a durable and comfortable surface.

## MAINTENANCE AND CLEANING

---

Proper care will ensure the longevity and appearance of your toilet seat:

- **Regular Cleaning:** Clean the toilet seat regularly with a mild soap solution and a soft cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, strong acids, or chlorine-based products, as these can damage the Duroplast surface and stainless steel hinges.
- **Rinse and Dry:** After cleaning, rinse the seat thoroughly with clean water and dry it with a soft cloth to prevent water spots.
- **Hinge Care:** Periodically check the hinge connections for tightness and clean around them to prevent dirt.

buildup.

## TROUBLESHOOTING

---

If you encounter any issues, refer to the following common solutions:

- **Seat is Loose:** Check the mounting screws and nuts underneath the toilet bowl. Tighten them securely, ensuring not to overtighten.
- **Seat Squeaks:** Apply a small amount of silicone-based lubricant to the hinge pins if they are accessible and dry. Ensure all parts are clean.
- **Difficulty Closing:** Ensure there is no obstruction preventing the seat from closing properly. Check hinges for damage or misalignment.

## SPECIFICATIONS

---

Feature	Detail
Brand	Villeroy & Boch
Model Number	9M6661 (Part Number: 9M666101)
Material	Duroplast
Hinges	Stainless Steel
Color	White Alpin
Shape	D-Shaped
Approximate Outer Length	383 mm
Approximate Outer Width	345 mm
Approximate Hinge Spacing	155 mm
Item Weight	5 Kilograms (11 pounds)
Manufacturer	Villeroy+Boch

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or visit the official Villeroy & Boch website. For technical support or inquiries, please contact Villeroy & Boch customer service directly.

You can find more information on the [Villeroy & Boch Store on Amazon](#).