Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Reese 65067

Reese Towpower Front Mount Receiver

Model: 65067

Brand: Reese

1. Introduction

The Reese Towpower 65067 Front Mount Receiver is engineered to provide a secure and versatile attachment point for a range of accessories on your vehicle. This receiver is custom-built to integrate seamlessly with specific manufacturer make and model year specifications, ensuring a precise fit. It is ideal for connecting spare tires, snowplows, winches, and cargo carriers, expanding the functionality of your vehicle.

Constructed from solid, all-welded steel, this hitch is designed for maximum strength and safety. It features a black powder coat finish to resist rust and corrosion, ensuring durability in various environmental conditions. All Draw-Tite front bumper winch mounts, including this model, are rigorously tested to exceed V-5 and SAE J684 standards for reliability and performance.



Figure 1.1: Reese Towpower 65067 Front Mount Receiver, showcasing its robust construction and 2-inch square receiver opening.

2. What's in the Box

Verify that all components are present before beginning installation. The package should contain the following:

- Draw-Tite 65067 Front Mount Receiver Hitch, 2 Inch Square Receiver
- All necessary mounting hardware (bolts, washers, nuts, fish wire)



Figure 2.1: Rear view of the Reese Towpower 65067 Front Mount Receiver, showing the mounting brackets.

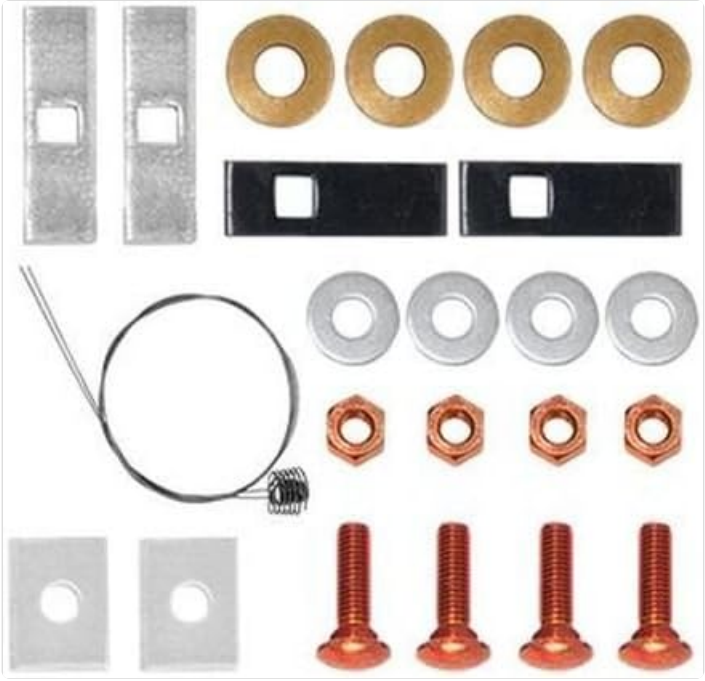


Figure 2.2: Included mounting hardware, including bolts, washers, and the fish wire for installation.

3. Safety Information

Always prioritize safety during installation and operation. Failure to follow safety guidelines can result in serious injury or property damage.

- **Read all instructions:** Before installation or use, thoroughly read and understand this manual and any supplementary materials.
- **Wear appropriate safety gear:** Always wear safety glasses, gloves, and other personal protective equipment as required.
- **Vehicle support:** Ensure the vehicle is securely supported on a level surface using jack stands before working underneath. Do not rely solely on a jack.
- **Weight limits:** Never exceed the stated tongue weight (TW) or line pull capacity of the receiver or your vehicle's towing capacity, whichever is lower.
- **Regular inspection:** Periodically inspect the hitch for signs of wear, damage, or corrosion. Ensure all fasteners are tight.
- **Professional installation:** If you are unsure about any step of the installation process, seek assistance from a qualified professional.

4. Setup and Installation

The Reese Towpower 65067 Front Mount Receiver is designed for a custom fit on specific vehicle models, such as the 2015-2023 Ford F-150. Installation typically involves bolting the hitch to the underside of the vehicle frame.

For detailed, step-by-step installation instructions, including specific vehicle requirements and torque specifications, please refer to the official User Manual PDF provided by the manufacturer. This document can be accessed via the following link: Reese Towpower 65067 User Manual (PDF).

Key Installation Considerations:

- **Custom Design:** The hitch is engineered for a precise fit, aligning with existing vehicle frame points.
- **Frame Mounting:** The receiver bolts directly to the vehicle's frame, ensuring a secure and stable connection.
- **Vehicle Specific:** Confirm compatibility with your vehicle's make, model, and year (e.g., 2015-2023 Ford F-150).

5. Operating Instructions

Once installed, the front mount receiver provides a 2-inch square receiver opening for various accessories.

- **Accessory Attachment:** Insert the shank of your desired accessory (e.g., cargo carrier, winch mount, snowplow) into the 2-inch receiver opening.
- **Secure Connection:** Align the pinholes and insert a hitch pin (not included) to secure the accessory. For added security, a hitch lock can be used.
- **Weight Capacity:** Adhere strictly to the maximum rated capacities: up to 500 lbs. tongue weight (TW) and up to 9,000 lbs. line pull. Do not exceed these limits to prevent damage to the hitch, vehicle, or potential injury.
- **Pre-Use Check:** Before each use, ensure the accessory is properly seated and secured, and all fasteners on the hitch are tight.

6. Maintenance

Regular maintenance will ensure the longevity and safe operation of your front mount receiver.

- **Inspect Fasteners:** Periodically check all bolts, nuts, and washers to ensure they remain tight. Re-torque to manufacturer specifications if necessary.
- **Check for Corrosion:** Inspect the hitch for any signs of rust or corrosion, especially in areas where the powder coat finish might be compromised. Touch up with rust-inhibiting paint if needed.
- **Clean Receiver Opening:** Keep the 2-inch square receiver opening free of dirt, debris, and rust to ensure smooth insertion and removal of accessories.
- **Inspect for Damage:** Look for any bends, cracks, or other structural damage to the hitch, especially after heavy use or impacts. Replace the hitch if any significant damage is found.

7. Troubleshooting

This section addresses common issues that may arise with the front mount receiver.

- **Hitch Does Not Fit:**
  - Verify that the hitch model (65067) is compatible with your specific vehicle's make, model, and year.
  - Ensure no obstructions (e.g., existing vehicle components, debris) are preventing proper alignment.

- Check for any manufacturing defects or shipping damage that might have bent the mounting points. Minor bends may sometimes be corrected with careful persuasion, but significant damage requires replacement.

- **Low Ground Clearance After Installation:**
  - Some vehicle configurations or aftermarket modifications may result in reduced ground clearance. This is often a characteristic of front-mounted hitches.
  - Exercise caution when driving over uneven terrain, speed bumps, or steep inclines to avoid scraping the hitch.

- **Difficulty Inserting/Removing Accessories:**
  - Ensure the receiver opening is clean and free of rust or debris.
  - Check the accessory shank for damage or excessive rust.

8. Specifications

Feature	Specification
Brand	Reese
Model Number	65067
Material	Alloy Steel
Finish Type	Powder Coated
Item Weight	37 Pounds
Product Dimensions	38.31 x 15.75 x 13.06 inches
Receiver Opening	2-inch Square
Maximum Tongue Weight (TW)	500 lbs.
Maximum Line Pull	9,000 lbs.
Vehicle Fit (Example)	2015-2023 Ford F-150
Standards Met	V-5 and SAE J684

9. Warranty and Support

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official Reese website. You can also visit the Reese brand store on Amazon for additional product information and support resources:

Visit the Reese Store on Amazon

For direct assistance, please contact Reese customer service through the channels provided on their official website.

© 2024 Reese Towpower. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00RD0JVBY

More documents and user manuals: **https://manuals.plus/**