

[Manuals.plus](#) /

> [Burco](#) /

> Side Mirror Replacement Glass for 2014-2016 Toyota Highlander User Manual

Burco 5594B

Burco Side Mirror Replacement Glass User Manual

Model: 5594B | For 2014-2016 Toyota Highlander

PRODUCT OVERVIEW

This Burco replacement mirror glass is designed to be a high-quality alternative to original equipment manufacturer (OEM) mirror assemblies. Manufactured in the USA using high-end CNC equipment, it meets or exceeds OEM specifications for performance, looks, and clarity. It includes blind spot icons lasered into the reflective coating and comes with Redi-Stick adhesive pads for easy installation.

Key Features:

- Measures 8 9/16 inches diagonally (longest dimension).
- Includes Redi-Stick adhesive pads for installation.
- Features blind spot icons lasered into the mirror's reflective coating.
- Made in the USA with superior quality glass.
- Designed for 2014-2016 Toyota Highlander models.

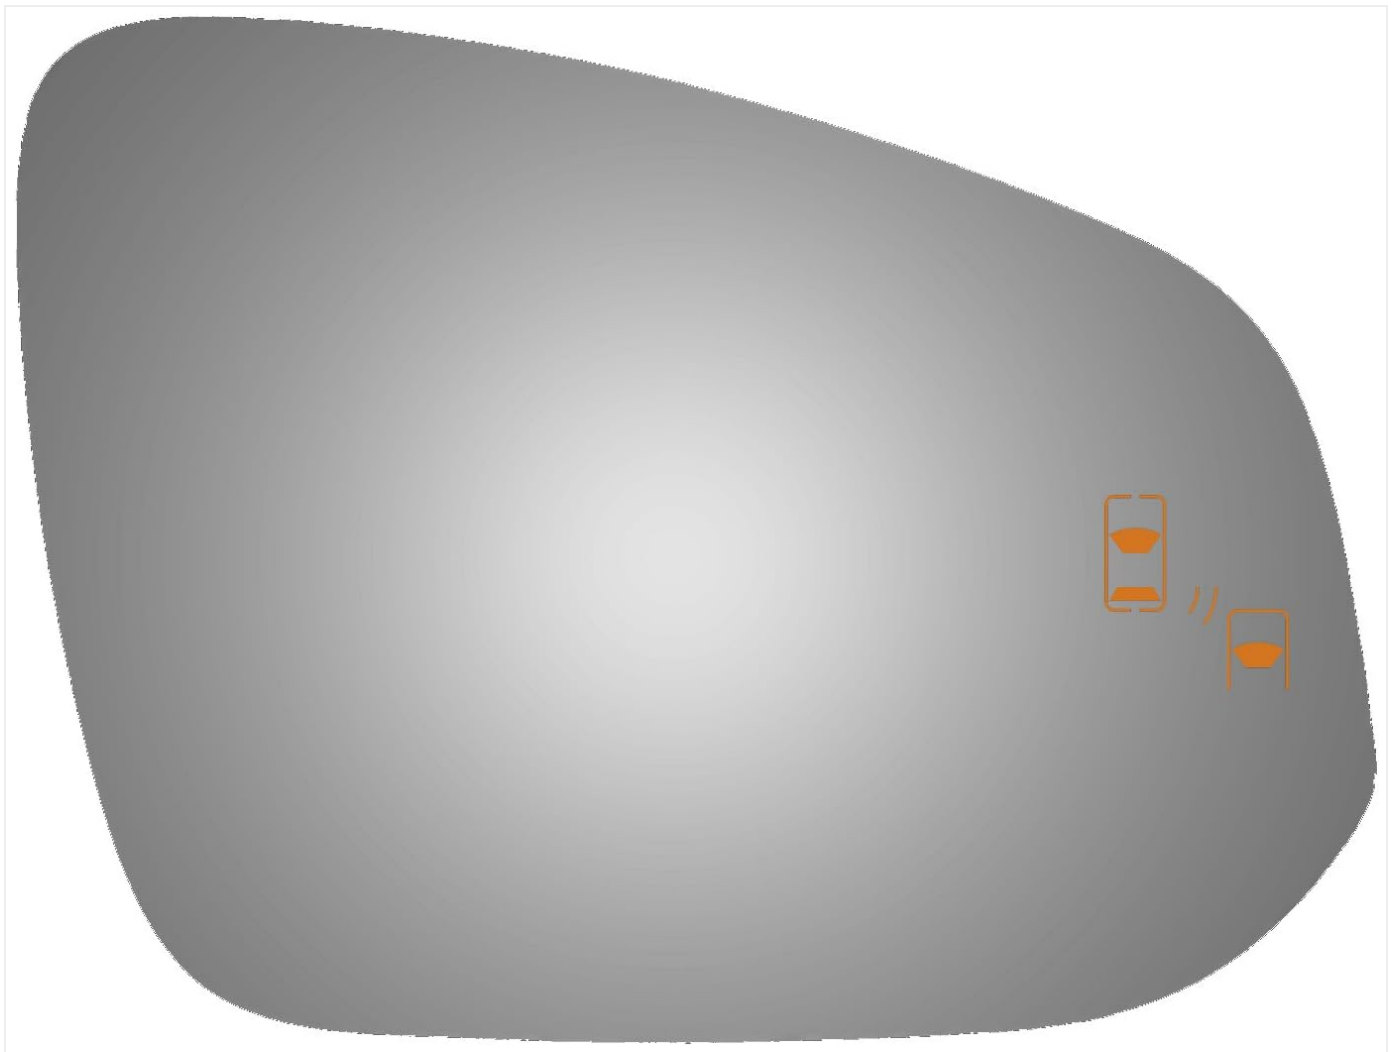


Image: The Burco Side Mirror Replacement Glass, showing its trapezoid shape and the integrated blind spot icons on the right side of the mirror surface.

INSTALLATION GUIDE (SETUP)

This section provides general instructions for replacing your vehicle's side mirror glass. Specific procedures may vary slightly depending on your vehicle's exact configuration. Always exercise caution when working with glass.

Tools and Materials (Not Included, unless specified):

- New Burco Replacement Mirror Glass (Included)
- Redi-Stick Adhesive Pads (Included)
- Heat gun or hairdryer (optional, for softening old adhesive)
- Pry tool or flathead screwdriver (for removing old glass)
- Clean cloth and glass cleaner
- Safety gloves and eye protection

Step-by-Step Installation:

1. **Prepare the Area:** Ensure your vehicle is parked on a level surface and the ignition is off. Put on safety gloves and eye protection.
2. **Remove Old Mirror Glass:**
 - Carefully inspect the old mirror glass. If it is shattered, use tape to hold the pieces together to prevent further breakage during removal.

- Gently pry the old mirror glass away from the mirror housing. Start from one edge and work your way around. A pry tool or flathead screwdriver can be used, but be cautious not to damage the mirror motor or housing. If the old adhesive is stubborn, a heat gun or hairdryer can be used on a low setting to soften it.
 - Disconnect any electrical connectors attached to the old mirror glass (e.g., for heating elements or blind spot monitoring if applicable).
3. **Clean the Mirror Housing:** Thoroughly clean the mirror housing surface where the new glass will attach. Remove all old adhesive, dirt, and debris. Use glass cleaner to ensure a clean, dry surface for optimal adhesion.
 4. **Apply Adhesive Pads:** Peel the backing from the Redi-Stick adhesive pads and apply them evenly to the back of the new Burco replacement mirror glass. Ensure the pads are placed where they will make full contact with the mirror housing.
 5. **Connect Electrical (if applicable):** If your vehicle's mirror has electrical connections (e.g., for heating or blind spot monitoring), connect them to the new mirror glass before mounting.
 6. **Install New Mirror Glass:** Align the new mirror glass with the mirror housing. Press firmly and evenly across the entire surface of the glass to ensure the adhesive pads create a strong bond. Hold pressure for a few moments.
 7. **Test Functionality:** If your mirror has power adjustments, test them to ensure the new glass moves correctly within the housing.

OPERATING YOUR NEW MIRROR

Once installed, your Burco replacement mirror glass functions identically to your original mirror. It provides a clear, wide-angle view of the area behind and to the side of your vehicle, crucial for safe driving and parking maneuvers.

Blind Spot Icons:

This mirror features integrated blind spot icons. These are visual indicators lasered directly into the mirror's reflective coating, designed to work with your vehicle's existing blind spot monitoring system (if equipped). When your vehicle detects an object in your blind spot, the corresponding icon on the mirror will illuminate, providing an additional visual alert.

Note: The blind spot icons are part of the mirror glass itself and will only function if your vehicle is equipped with a compatible blind spot monitoring system that utilizes these indicators.

MAINTENANCE

Proper care will ensure the longevity and clarity of your Burco replacement mirror glass.

Cleaning Instructions:

- Use a soft, clean cloth and a standard automotive glass cleaner.
- Spray the cleaner directly onto the cloth, not directly onto the mirror, to avoid overspray into the mirror housing.
- Wipe the mirror surface gently until clean and streak-free.
- Avoid abrasive cleaners, harsh chemicals, or rough cloths, as these can scratch the mirror surface or damage the reflective coating.

TROUBLESHOOTING

If you encounter issues with your new mirror glass, consider the following common solutions:

- **Mirror Not Sticking / Falling Off:**

- Ensure the mirror housing surface was thoroughly cleaned and dry before applying the adhesive pads. Any residue (old adhesive, dirt, grease) can prevent proper bonding.
- Verify that the adhesive pads were applied evenly and firm pressure was maintained during installation.
- Extreme temperatures during installation can affect adhesion. Install in moderate temperatures if possible.

- **Unclear or Distorted View:**

- Clean the mirror surface thoroughly using appropriate glass cleaner and a soft cloth.
- Ensure the mirror is securely seated in the housing and not loose.
- This mirror is convex, which provides a wider field of view but makes objects appear smaller and farther away than they actually are. This is normal for convex mirrors.

- **Blind Spot Icon Not Illuminating:**

- Confirm your vehicle is equipped with a functional blind spot monitoring system that uses mirror-integrated indicators.
- Check electrical connections to the mirror glass, if applicable.
- Consult your vehicle's owner's manual for troubleshooting the blind spot monitoring system.

SPECIFICATIONS

Attribute	Detail
Brand	Burco
Model Number	5594B
Compatible Vehicles	2014-2016 Toyota Highlander
Auto Part Position	Left
Diagonal Measurement	8 9/16 inches (Longest diagonal dimension from top corner to opposing bottom corner)
Lens Curvature	Convex
Features	Blind spot icons, Redi-Stick adhesive pads included
Material	High quality glass
Manufacturing Location	USA
Item Weight	2 Pounds
UPC	685784501716

WARRANTY AND SUPPORT

Burco products are manufactured with superior quality and precision in the USA, meeting or exceeding OEM specifications. While specific warranty details are not provided in this manual, Burco stands by the quality of its products.

For Assistance:

If you have questions regarding installation, product compatibility, or require support, please contact the retailer from whom you purchased this product or visit the official Burco website for further assistance.

Note: Always refer to your vehicle's owner's manual for specific instructions related to your vehicle's mirror system and safety features.



© 2024 Burco. All rights reserved.

This manual is for informational purposes only. Burco is not responsible for any damage or injury resulting from improper installation or use.