Scosche GM2000SW

Scosche GM2000SW Factory Stereo Replacement Interface Adapter User Manual

Model: GM2000SW | Brand: Scosche

Introduction

The Scosche GM2000SW Factory Stereo Replacement Interface Adapter is designed to facilitate the installation of an aftermarket stereo in select 2000-2013 GM vehicles. This interface allows for the retention of factory steering wheel controls and integration with OEM amplified sound systems, ensuring a seamless upgrade while preserving essential vehicle functions. It utilizes standard wire color codes for straightforward installation.

What's in the Box

The GM2000SW package includes the following components:

- Interface Module
- Steering Wheel Control Harness
- Interface Harness
- User Manual



Image: Overview of the Scosche GM2000SW kit components, showing the interface module, the main interface harness, the steering wheel control harness, and the instruction booklet.

Vehicle Compatibility

This interface adapter is compatible with select 2000-2013 GM vehicles. Please refer to the detailed fit guide below to verify your vehicle's compatibility. Note that this product is not designed for OnStar functionality, which will be disabled, and is not compatible with Digital "Premium Bose" Systems (RPO codes: Y91/Y92/Z75).

Compatible Vehicle List:

BUICK

LaCrosse: 2005-06

Rainer: 2004-07

Rendezvous: 2001-07

Terrazza: 2005-07

CADILLAC

Escalade/ESV/EXT: 2003-06

CHEVROLET

Avalanche: 2003-06

Blazer S-10: 2003-05

Cavalier: 2000-05

Classic: 2004

Colorado: 2004-12

Corvette: 2005-13

Express Van: 2003-07

Impala: 2000-05

Malibu: 2001-03

Monte Carlo: 2000-05

S-10: 2003-04

Silverado 1500-3500: 2003-06

Silverado 1500-3500 Classic: 2007

SSR: 2004-06

Suburban: 2003-06

Tahoe: 2003-06

Trailblazer: 2002-09

Uplander: 2005-08

Venture: 2002-05

GMC

Canyon: 2004-12

Envoy: 2002-09

Savana: 2003-07

Sierra 1500-3500: 2003-06

Sierra 1500-3500 Classic: 2007

Sonoma: 2002-04

Yukon: 2003-06

Yukon XL: 2003-06

HUMMER

H2: 2003-07

H2T: 2005-07

H3: 2006-09

H3T: 2006-09

ISUZU

Ascender: 2003-08

I280/I350: 2006-08

OLDSMOBILE

Alero (RDS Radio): 2002-04

Bravada: 2002-04

Silhouette: 2000-01

PONTIAC

Aztek: 2001-05

Grand Am: 2001-05

Montana: 2002-04

Montana SV6: 2005-06


Sunfire: 2000-04

SATURN

Relay: 2005-07



Image: Page 1 of the fit guide for the GM2000SW-WM1, detailing compatible Buick, Cadillac, Chevrolet, and GMC vehicle models and years. Includes notes about OnStar and Bose system incompatibility.

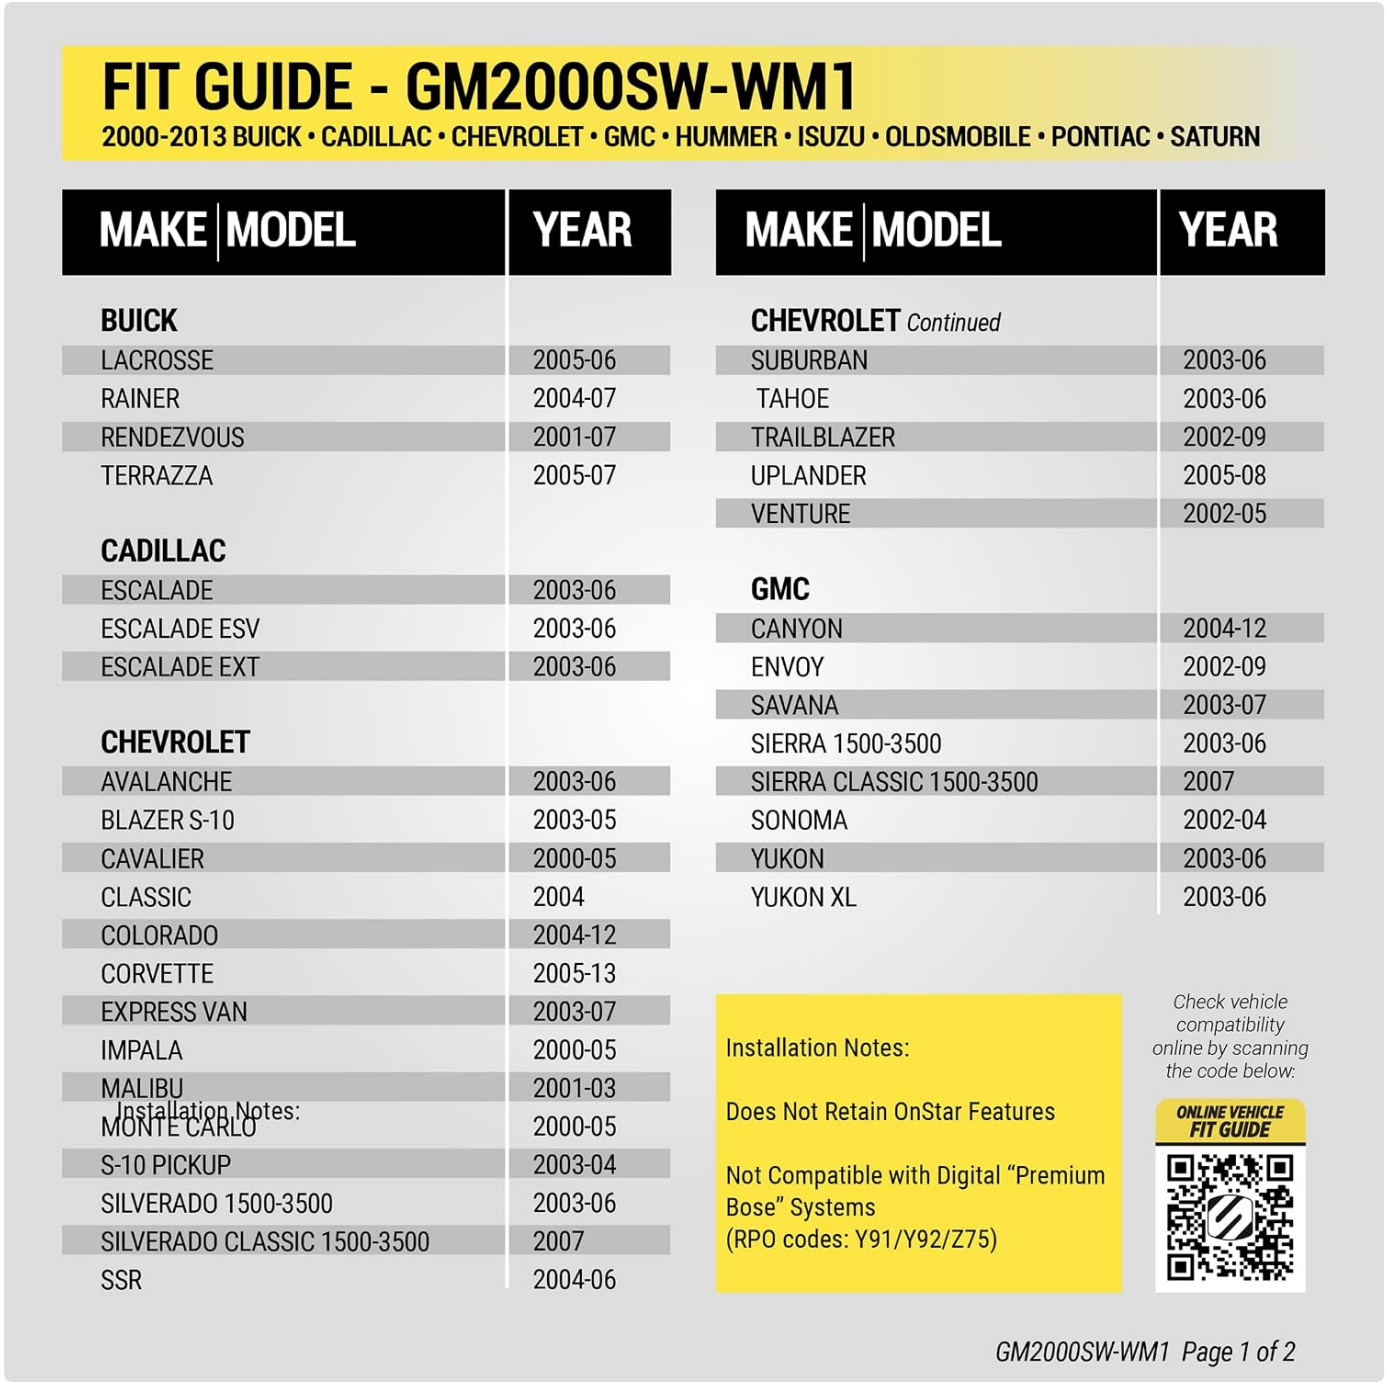

FIT GUIDE - GM2000SW-WM1

2000-2013 BUICK • CADILLAC • CHEVROLET • GMC • HUMMER • ISUZU • OLDSMOBILE • PONTIAC • SATURN

MAKE | MODEL	YEAR
BUICK	
LACROSSE	2005-06
RAINER	2004-07
RENDEZVOUS	2001-07
TERRAZZA	2005-07
CADILLAC	
ESCALADE	2003-06
ESCALADE ESV	2003-06
ESCALADE EXT	2003-06
CHEVROLET	
AVALANCHE	2003-06
BLAZER S-10	2003-05
CAVALIER	2000-05
CLASSIC	2004
COLORADO	2004-12
CORVETTE	2005-13
EXPRESS VAN	2003-07
IMPALA	2000-05
MALIBU	2001-03
MONTE CARLO	2000-05
S-10 PICKUP	2003-04
SILVERADO 1500-3500	2003-06
SILVERADO CLASSIC 1500-3500	2007
SSR	2004-06

MAKE | MODEL	YEAR
CHEVROLET *Continued*	
SUBURBAN	2003-06
TAHOE	2003-06
TRAILBLAZER	2002-09
UPLANDER	2005-08
VENTURE	2002-05
GMC	
CANYON	2004-12
ENVOY	2002-09
SAVANA	2003-07
SIERRA 1500-3500	2003-06
SIERRA CLASSIC 1500-3500	2007
SONOMA	2002-04
YUKON	2003-06
YUKON XL	2003-06

Installation Notes:

Does Not Retain OnStar Features

Not Compatible with Digital “Premium Bose” Systems
(RPO codes: Y91/Y92/Z75)

Check vehicle compatibility online by scanning the code below:

ONLINE VEHICLE FIT GUIDE

GM2000SW-WM1 Page 1 of 2

Image: Page 2 of the fit guide for the GM2000SW-WM1, detailing compatible Hummer, Isuzu, Oldsmobile, Pontiac, and Saturn vehicle models and years. Reinforces notes about OnStar and Bose system incompatibility.

For the most up-to-date compatibility information, please visit the official Scosche website: scosche.com/walmart

Setup and Installation

Proper installation of the Scosche GM2000SW interface is crucial for optimal performance. Follow these steps carefully. It is recommended to consult a professional if you are unsure about any part of the installation process.

Safety Precautions:

- Always disconnect the negative battery terminal before beginning any electrical work on your vehicle.
- Ensure all connections are secure to prevent short circuits.
- Refer to your vehicle's service manual for specific dashboard disassembly instructions.

Installation Steps:

1. **Disconnect Battery:** Disconnect the negative battery terminal of your vehicle.

Your browser does not support the video tag.

Video: Demonstrates disconnecting the negative battery terminal. This is a crucial first step for any car audio installation to prevent electrical shorts and damage.

2. **Prepare Wiring Harnesses:** Connect the aftermarket stereo's wiring harness to the Scosche interface harness. Match wire colors according to the EIA standard 12V wiring color code. Use appropriate splice connectors for secure connections. Some wires, such as amplifier turn-on, parking sense, and steering wheel control connections, may not connect directly to the vehicle harness and require specific routing or connection to the interface module.

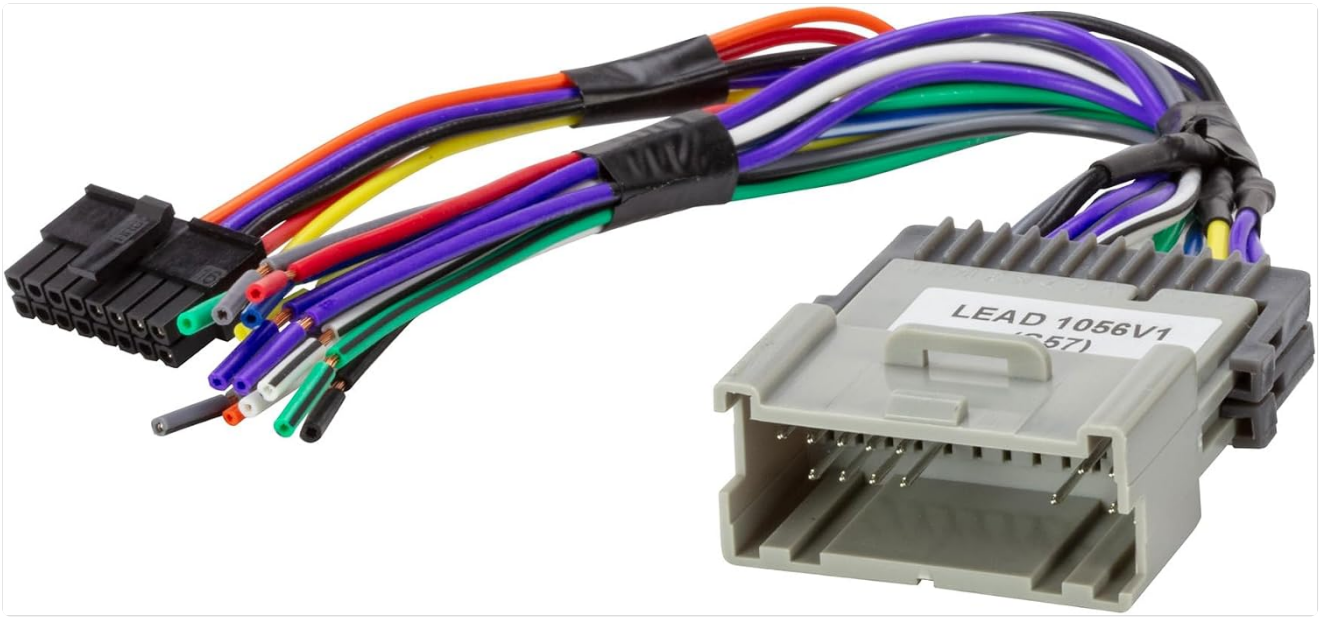


Image: Close-up of the Scosche interface harness, showing the various color-coded wires for connecting to the aftermarket stereo.



Image: The steering wheel control harness, which connects to the interface module to retain factory steering wheel audio controls.

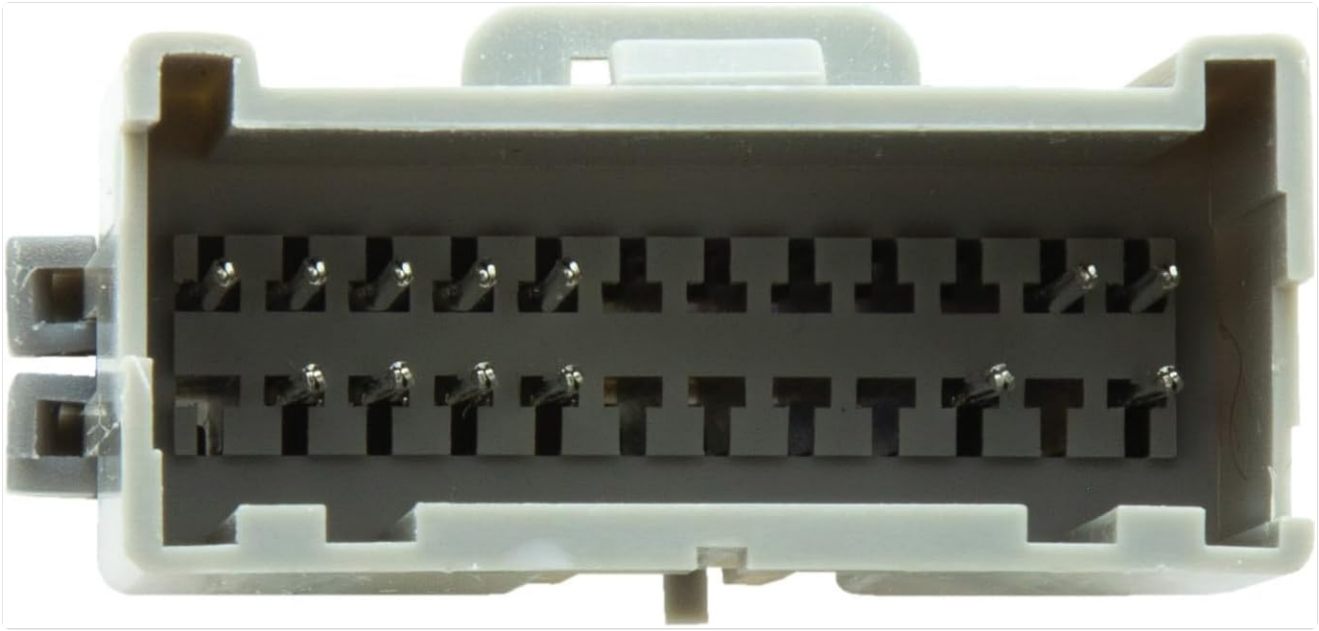


Image: The main interface module, a compact black box that processes signals between the vehicle and the aftermarket stereo.

Your browser does not support the video tag.

Video: Illustrates the process of connecting the aftermarket radio harness to the Scosche interface harness using splice connectors, emphasizing color-matching.

3. **Connect to Vehicle:** Plug the vehicle harness into the vehicle's factory wiring and the radio harness into the new aftermarket radio. Ensure all connections are firm and properly seated.



Image: The complete Scosche GM2000SW kit, illustrating how the interface module connects the vehicle's factory harness to the aftermarket stereo's harness.

Your browser does not support the video tag.

Video: Shows the final connections being made inside the vehicle's dashboard, connecting the interface to the vehicle's wiring and the aftermarket radio.

4. **Mount Stereo:** Secure the aftermarket stereo into the dashboard opening using appropriate mounting hardware (sold separately, if not included with your stereo).
5. **Reassemble Dash:** Carefully reassemble the vehicle's dashboard components, ensuring no wires are pinched.
6. **Reconnect Battery:** Reconnect the negative battery terminal.

Your browser does not support the video tag.

Video: Demonstrates reconnecting the negative battery terminal after installation is complete.

Operating Instructions

Once the Scosche GM2000SW interface is installed, your aftermarket stereo should function seamlessly with your vehicle's electrical system and retained features.

Initial Power-Up:

- Turn the vehicle's ignition to the ACC or ON position.
- Power on your aftermarket stereo.
- Verify that the stereo receives power and functions correctly.

Steering Wheel Control Functionality:

The GM2000SW is designed to retain the use of your car's factory steering wheel controls. Test each button (volume up/down, track skip, mode, etc.) to ensure proper communication with your new stereo. Refer to your aftermarket stereo's manual for any specific programming or setup required for steering wheel controls.

Your browser does not support the video tag.

Video: Demonstrates turning on the radio and checking its functions after installation, including verifying steering wheel control operation.

Safety and Warning Chimes:

This interface retains all factory safety and warning chimes. Listen for these chimes (e.g., seatbelt warning, door ajar) to confirm they are functioning as expected.

Maintenance

The Scosche GM2000SW interface module requires minimal maintenance. Once installed correctly, it is designed for long-term reliable operation.

- **Connections:** Periodically check the wiring connections behind the stereo to ensure they remain secure, especially if you experience intermittent issues.
- **Cleaning:** Keep the area around the interface module free from dust and debris.
- **Software/Firmware:** There are no user-updatable software or firmware components for this interface.

Troubleshooting

If you encounter issues after installing the GM2000SW interface, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No power to aftermarket stereo.	◦ Loose battery connection. ◦ Incorrect wiring of constant or switched 12V wires. ◦ Blown fuse in vehicle or stereo.	◦ Check and secure negative battery terminal. ◦ Verify all power wires (Yellow, Red) are correctly connected and crimped. ◦ Inspect vehicle and stereo fuses; replace if necessary.
No sound from speakers.	◦ Incorrect speaker wire connections. ◦ Amplifier turn-on wire (Blue/White) not connected. ◦ Factory amplifier not bypassed or integrated correctly.	◦ Double-check all speaker wire connections (White, Gray, Green, Purple). ◦ Ensure the amplifier turn-on wire is connected to the aftermarket stereo's remote output. ◦ Confirm the interface is compatible with your factory amplified system and all necessary connections are made.
Steering wheel controls not working.	◦ Steering wheel control harness not connected. ◦ Incorrect programming of aftermarket stereo for SWC.	◦ Verify the steering wheel control harness is securely plugged into the interface module and the aftermarket stereo. ◦ Refer to your aftermarket stereo's manual for instructions on programming steering wheel controls.
No warning chimes.	◦ Interface module not receiving proper data. ◦ Volume of chimes too low.	◦ Ensure all connections to the interface module are secure. ◦ Check if there's a volume adjustment for chimes on the interface or stereo.

Specifications

Feature	Detail
Model Number	GM2000SW
Brand	Scosche
Material	Acrylonitrile Butadiene Styrene
Item Dimensions (L x W x H)	6 x 3 x 4 inches
Item Weight	0.25 Pounds (4 ounces)
Cable Type	Automotive Wiring Harness
Connector Type	Automotive Wiring Harness Connector

Feature	Detail
Voltage	12 Volts
Steering Wheel Control Retention	Yes
OEM Amplifier Retention	Yes (Not compatible with Digital "Premium Bose" Systems)
OnStar Retention	No (OnStar function will be disabled)
RAP (Retained Accessory Power) Output	Yes, data-driven +12V accessory output

Warranty and Support

The Scosche GM2000SW Factory Stereo Replacement Interface Adapter is backed by Scosche's commitment to quality and customer satisfaction.

- **Limited Lifetime Warranty:** This product comes with a Limited Lifetime Warranty from Scosche.
- **Lifetime Tech Support:** Scosche provides Lifetime Tech Support for this product.

For technical assistance, warranty claims, or additional information, please visit the official Scosche website or contact their customer support directly. You can also refer to the official installation manual (PDF) available online for detailed diagrams and instructions: Installation Manual (PDF).

© 2024 Scosche. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question