

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DreamLine](#) /

› [DreamLine Essence Frameless Bypass Shower Door \(SHDR-6348760-04\) User Manual](#)

DreamLine SHDR-6348760-04

DreamLine Essence Frameless Bypass Shower Door User Manual

Model: SHDR-6348760-04 | Finish: Brushed Nickel | Dimensions: 44-48 inch W x 76 inch H

INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your DreamLine Essence Frameless Bypass Shower Door. Please read all instructions carefully before beginning installation to ensure proper function and safety. Professional installation is recommended.

SAFETY INFORMATION

- Always wear safety glasses during installation.
- Handle glass panels with extreme care. Tempered glass is strong but can shatter if struck at the edges.
- Ensure all measurements are taken accurately after walls are finished (tiled, backer board, etc.).
- Do not attempt to install heavy glass panels alone. Two people are required for safe handling.
- Verify that wall studs are present and capable of supporting the weight of the shower door system.

PACKAGE CONTENTS

Verify all components are present and undamaged before beginning installation.

- Clear Tempered Glass Panels (5/16 inch / 8 mm thick)
- Top and Bottom Guide Rails
- Dual Towel Bars/Handles
- Rollers and Mounting Hardware
- Anodized Aluminum Water Guards
- Installation Hardware Kit

SETUP & INSTALLATION

Proper preparation of your shower space is crucial for a successful installation. Refer to the detailed video guide for visual

assistance.

Your browser does not support the video tag.

Official DreamLine Essence Shower Door Product Video: This video provides an overview of the DreamLine Essence shower door, highlighting its features and design.

Pre-Installation Checks

Before selecting and installing your shower door, it is essential to evaluate your shower space. This video will guide you through the pre-installation requirements.

Your browser does not support the video tag.

Official DreamLine Shower Door Buyers Guide Product Video: Learn how to properly measure and assess your shower space for optimal shower door selection and installation.

1. **Finished Walls:** All measurements must be taken **AFTER** walls are finished with tile, backer board, or other materials. Unfinished walls will result in inaccurate measurements.
2. **Measure Opening Width:** Measure the width of your shower opening at the top, middle, and bottom. Use the smallest measurement for product selection.
3. **Check for Plumb:** Use a 4-foot level to check if your walls are perfectly vertical (plumb) and if your threshold is level. Walls that are out-of-plumb may require specific models or professional adjustment. The Essence model accommodates up to 1/4 inch for out-of-plumb walls.
4. **Threshold Condition:** Ensure the bottom corners of the shower opening where the walls meet the threshold are not curved or rounded.

Installation Steps (Summary)

This is a summary. Refer to the full installation guide provided with your product for detailed instructions.

1. Install the top and bottom guide rails, ensuring they are level and securely fastened. The top and bottom guiderails can be trimmed up to 4 inches for width adjustment if needed.
2. Mount the rollers onto the glass panels.
3. Carefully lift and hang the glass panels onto the top guide rail. This step requires at least two people due to the weight of the glass.
4. Install the dual towel bars, which also function as handles.
5. Attach the anodized aluminum water guards to accommodate any out-of-plumb conditions.
6. Apply silicone sealant as instructed to ensure a watertight seal.



Image: The DreamLine Essence Frameless Bypass Shower Door in a contemporary bathroom setting.



Image: Another view of the DreamLine Essence shower door, showcasing its frameless design and smooth gliding mechanism.

MODEL INFORMATION

SHDR-6348760

ESSENCE

DreamLine Essence 44-48" W x 76" H Frameless Bypass Shower Door

BYPASS DOOR

CONFIGURATION DIMENSIONS:

A: 44 - 48"

MODEL WIDTH

B: 76"


MODEL HEIGHT

C: 18 - 22"

ACCESS WIDTH

D: 25 5/16"

DOOR WIDTH

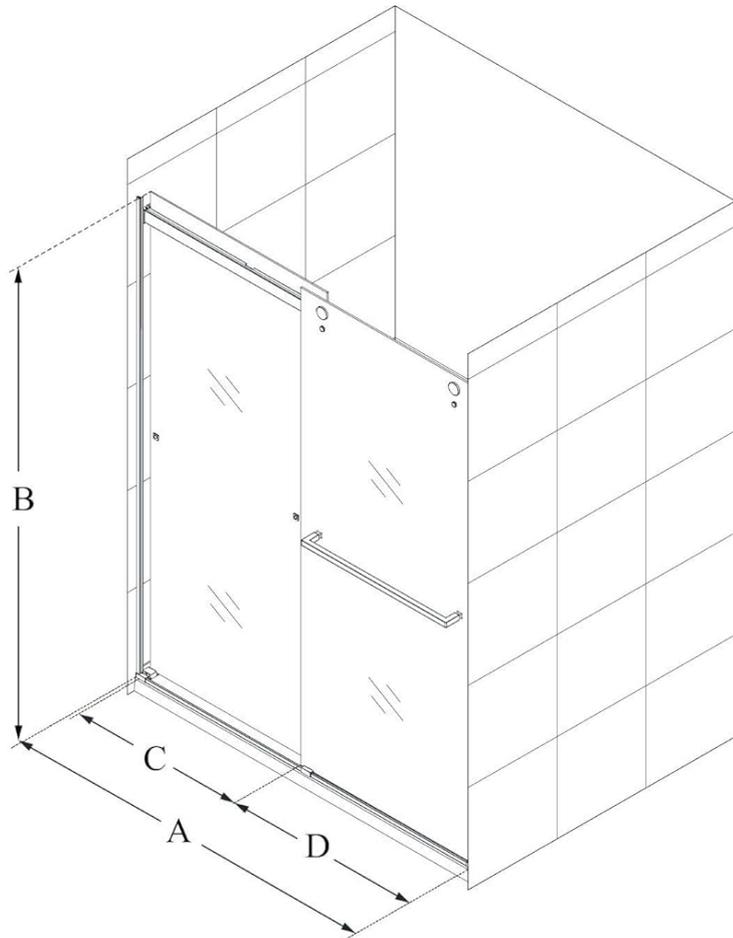

DreamLine reserves the right to update or modify the hardware or materials pictured without prior notice for the purpose of product improvement and customer satisfaction.

Image: Detailed diagram illustrating the configuration dimensions for the DreamLine Essence SHDR-6348760 model, including width, height, access width, and door width.

OPERATING INSTRUCTIONS

The DreamLine Essence features a double sliding bypass configuration, allowing entry from either the left or right side of the shower enclosure. The specially designed rollers ensure a smooth and quiet gliding operation.

- To open the door, gently push or pull one of the glass panels using the integrated towel bar/handle.
- The panels will glide along the top and bottom guide rails.
- Ensure the panels are fully closed after use to prevent water leakage.

MAINTENANCE

Regular cleaning and maintenance will preserve the appearance and functionality of your shower door.

Glass Care (ClearMax Coating)

The glass panels are treated with DreamLine's exclusive ClearMax water repellent and stain resistant coating for superior protection and easy maintenance.



Image: A visual representation of DreamLine's ClearMax glass protection, highlighting its water repellent, easy-to-maintain, and stain-reducing properties.

- After each use, rinse the glass with clean water to remove soap residue.
- Wipe down the glass with a soft cloth or squeegee to prevent water spots and mineral buildup.
- For deeper cleaning, use a mild, non-abrasive glass cleaner. Avoid harsh chemicals, abrasive pads, or scouring powders, as these can damage the ClearMax coating and hardware finish.

Hardware Care

- Clean hardware with a soft, damp cloth.

- Avoid using abrasive cleaners or solvents on the Brushed Nickel finish.
- Periodically check all screws and fasteners for tightness and tighten if necessary.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Water leakage	Improper sealant application; loose water guards; out-of-plumb walls.	Reapply silicone sealant; ensure water guards are properly installed and sealed; check wall plumbness and adjust if possible (consult professional).
Door does not slide smoothly	Debris in track; worn rollers; misaligned track.	Clean tracks thoroughly; inspect rollers for damage and replace if needed; check track alignment and adjust.
Glass appears cloudy/stained	Hard water buildup; improper cleaning agents.	Use recommended mild cleaners; regularly squeegee glass after use; for stubborn stains, consult DreamLine customer support for approved solutions.

SPECIFICATIONS

- **Model:** SHDR-6348760-04
- **Size:** 44 - 48 inch W x 76 inch H
- **Door Walk-in Opening:** 18-22 inches
- **Glass Type:** 5/16 inch (8 mm) ANSI certified clear tempered glass with ClearMax coating
- **Hardware Finish:** Brushed Nickel
- **Material:** Aluminum, Tempered Glass
- **Item Weight:** 132 pounds
- **Assembly Required:** Yes
- **UPC:** 849388038331

WARRANTY

The DreamLine Essence Frameless Bypass Shower Door is backed by a **Limited Lifetime Manufacturer Warranty**. All hardware finishes are covered by a **Three (3) Year Warranty**. Please retain your proof of purchase for warranty claims. For full warranty details, refer to the documentation included with your product or visit the official DreamLine website.

SUPPORT

For technical assistance, replacement parts, or any questions regarding your DreamLine product, please contact DreamLine Customer Support.

DreamLine Customer Support:

- Visit the [DreamLine Store on Amazon](#)
- Refer to the contact information provided in your product packaging.

