

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Zinus](#) /

› [Zinus Modern Studio 10 Inch Platforma Low Profile Bed Frame, Full Size Instruction Manual](#)

Zinus OLB-MBBF-10F

Zinus Modern Studio 10 Inch Platforma Low Profile Bed Frame, Full Size

Model: OLB-MBBF-10F

INTRODUCTION

Thank you for choosing the Zinus Modern Studio 10 Inch Platforma Low Profile Bed Frame. This bed frame is designed for functional minimalism, offering a sturdy and sophisticated foundation for your mattress. It features a durable steel frame and reliable wood slats, eliminating the need for a box spring. This manual provides essential information for safe assembly, proper usage, and maintenance to ensure long-lasting satisfaction with your product.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Ensure all parts are present and undamaged before beginning assembly.
- Do not use power tools for assembly as this may overtighten screws and damage the frame.
- Place the bed frame on a level surface.
- The Full size bed frame supports a maximum weight capacity of 700 lbs.
- Keep small parts away from children during assembly.

PACKAGE CONTENTS

Verify that all components listed below are included in your package. All necessary tools for assembly are provided.



Image: All components of the Zinus Modern Studio bed frame, including the metal frame pieces, wooden slats, and assembly tools, are laid out on a wooden floor, ready for assembly.

- Steel Frame Components
- Wood Slats (with Velcro strips)
- Assembly Hardware (bolts, washers, nuts)
- Assembly Tool (Allen wrench)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly of the Zinus Modern Studio bed frame is designed to be straightforward and typically takes less than an hour with assistance. Follow the numbered steps in the included instruction booklet. For a visual guide, please refer to the official assembly video below.

Your browser does not support the video tag.

Video: An official Zinus video demonstrating the step-by-step assembly process for the Joseph Metal Platform Bed Frame, showing how to connect the frame pieces and install the wooden slats.

Key Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Connect the main frame sections using the provided hardware. Ensure all bolts are securely tightened.
3. Attach the central support beams and legs for added stability.
4. Unroll the wooden slats onto the frame. The slats are connected and feature Velcro strips that adhere to the frame, ensuring proper spacing and preventing movement.
5. Place your mattress directly onto the installed slats. A box spring is not required.



Image: The fully assembled Zinus Modern Studio bed frame, viewed from above, showcasing the evenly spaced wooden slats that provide direct support for a mattress.

OPERATING INSTRUCTIONS (USAGE)

The Zinus Modern Studio bed frame is designed to support various mattress types, including latex, memory foam, and spring mattresses, without the need for a box spring. Simply place your mattress directly on the wooden slats. The low 10-inch platform height is ideal for taller mattresses or for those who prefer a lower bed profile. The open space beneath the bed provides ample room for storage.



Image: A close-up view of the Zinus Modern Studio bed frame, highlighting the generous under-bed clearance with a storage box neatly placed beneath, demonstrating its storage capability.

MAINTENANCE

To maintain the quality and longevity of your bed frame, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the metal frame with a dry cloth or a damp cloth as needed. Avoid harsh chemicals that may damage the finish.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Slats:** Ensure the wooden slats remain properly aligned and securely attached to the Velcro strips on the frame.

TROUBLESHOOTING

If you encounter any issues with your Zinus Modern Studio bed frame, consider the following common solutions:

- **Squeaking Noises:** Squeaking can often be resolved by re-tightening all assembly bolts. Ensure the wooden slats are properly seated and the Velcro is fully engaged.

- **Instability/Wobbling:** Check that the frame is on a level surface. Verify that all support legs are making firm contact with the floor and that all connections are secure.
- **Mattress Shifting:** The bed frame includes adhesive strips on the slats to help keep the mattress in place. Ensure these strips are uncovered and the mattress is properly positioned.

SPECIFICATIONS

Size	Full
Product Dimensions	74.5"L x 53.5"W x 10"H
Color	Black
Material	100% Steel Frame, Wood Slats
Weight Capacity (Full)	700 lbs
Ground to Item Distance	10 Inches
Item Weight	43 pounds
Model Number	OLB-MBBF-10F
UPC	768640302266, 623122411679, 841550093889

Dimension & Capacity

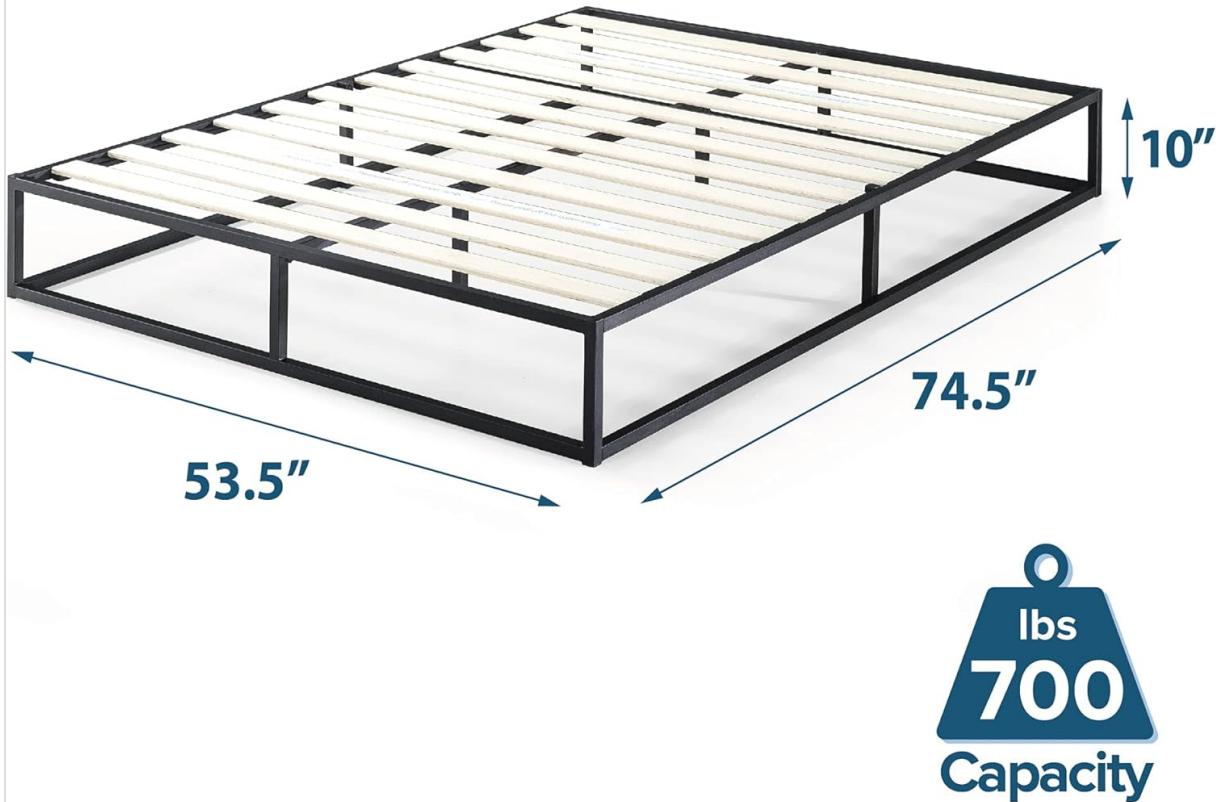


Image: A diagram illustrating the dimensions (74.5"L x 53.5"W x 10"H) and weight capacity (700 lbs) of the Zinus Modern Studio bed frame.

WARRANTY AND SUPPORT

Your Zinus Modern Studio bed frame includes a worry-free 5-year limited warranty. For warranty claims, product support, or any questions not covered in this manual, please contact Zinus customer service. Refer to the contact information provided on the Zinus official website or your purchase documentation.