

APS CL6360H

APS CL6360H Main Upper Stainless Steel Black Mesh Rivet Grille Insert Instruction Manual

For Chevy Silverado 1500 (2016-2018 & 2019 1500 LD)

1. PRODUCT OVERVIEW

This document provides installation and maintenance instructions for the APS CL6360H Main Upper Stainless Steel Black Mesh Rivet Grille Insert. This product is designed to enhance the front appearance of your vehicle by adding a custom grille overlay.



Image 1.1: Two APS CL6360H black mesh rivet grille inserts, showing their design and construction.

2. COMPATIBILITY

This grille insert is compatible with the following vehicle models:

- Chevy Silverado 1500 (Model Years: 2016, 2017, 2018)
- Chevy Silverado 1500 LD (Model Year: 2019)

Important Note:

- Not compatible with Z71 and High Country models.
- This product is a grille insert only; the original equipment (OE) grille shell remains on the vehicle after installation. Logo, emblem, frame, or shell are not included.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged:

- Main Upper Grille Insert (1.8mm Wire Mesh Rivet Style, Black, Quantity: 2 pieces)
- Mounting Hardware (screws, clamps, etc.)
- Installation Paper (detailed instructions)

If any items are missing or damaged, please contact customer support immediately.

4. SETUP (INSTALLATION)

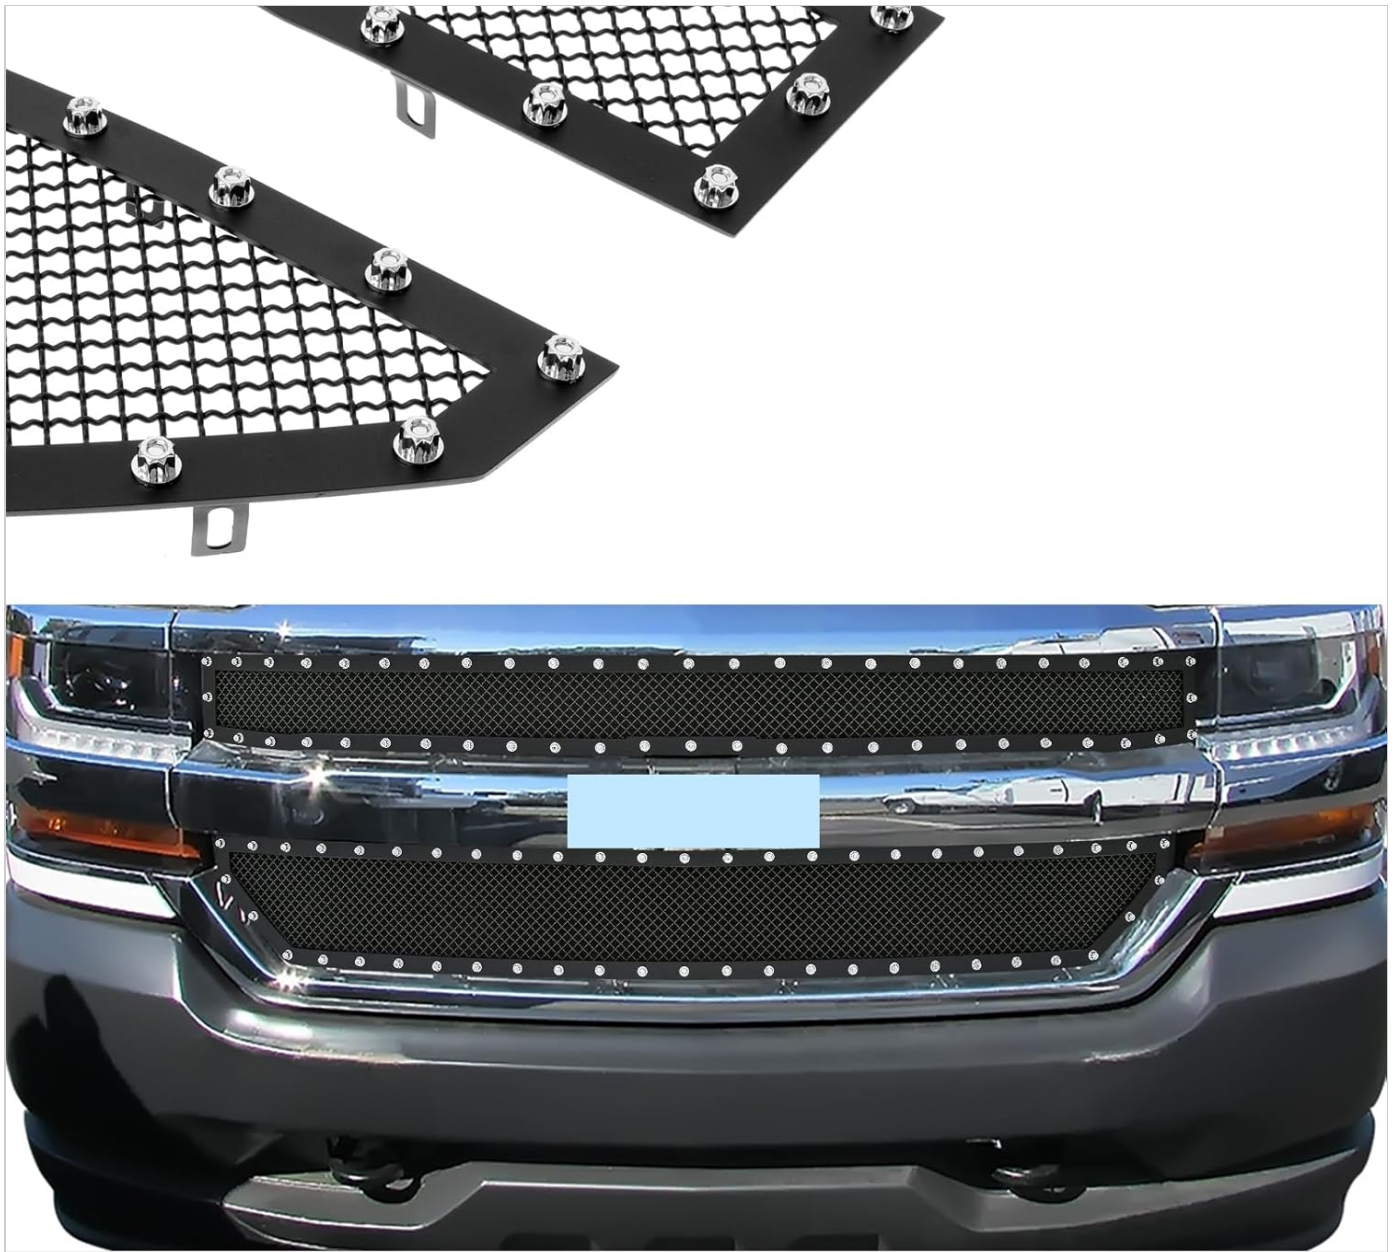
This grille insert utilizes a Bolt Over/Overlay/Bolton installation method, which requires drilling. The original grille shell must remain on the vehicle. Professional installation is recommended.

Required Tools (Not Included):

- Drill
- Drill bits (appropriate size for mounting hardware)
- Measuring tape or ruler
- Marker or pencil
- Protective eyewear and gloves

Installation Steps:

1. **Preparation:** Ensure the vehicle's front end, particularly the existing grille area, is clean and free of debris.
2. **Positioning:** Carefully place the new grille insert over the existing OE grille shell. Align it to ensure proper fitment and desired aesthetic.
3. **Marking Drill Points:** Once aligned, use a marker or pencil to accurately mark the drilling locations through the tabs on the new grille insert onto the OE grille shell.
4. **Drilling:** Remove the new grille insert. Using the marked points, carefully drill pilot holes into the OE grille shell. Ensure drill bit size matches the provided mounting hardware to avoid damage.
5. **Securing the Insert:** Reposition the new grille insert. Align the tabs with the drilled holes. Use the provided mounting hardware (screws, clamps) to secure the insert firmly to the OE grille shell. Ensure all connections are tight and secure.
6. **Final Check:** Verify that the grille insert is securely mounted and does not obstruct any vehicle functions or lighting.



2pc Main Upper Grille Insert Only

Shell and Frame Are Not Included

Image 4.1: Example of the APS CL6360H grille insert installed on a compatible Chevy Silverado 1500. Note that the original grille shell remains.

5. OPERATING INSTRUCTIONS

The APS CL6360H grille insert is a static cosmetic and protective component. It does not require any operational procedures after installation. Once properly installed, it functions passively to enhance vehicle aesthetics and provide a layer of protection to the radiator area.

6. MAINTENANCE

To ensure the longevity and appearance of your grille insert, follow these maintenance guidelines:

- **Regular Cleaning:** Clean the grille insert regularly with mild automotive soap and water. Use a soft cloth or sponge to avoid scratching the powder-coated finish.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

- **Inspect Fasteners:** Periodically check all mounting hardware to ensure they remain tight and secure. Re-tighten if necessary.
- **Damage Inspection:** Inspect the grille for any signs of damage (e.g., bent mesh, loose rivets) after impacts or off-road driving. Address any issues promptly.

7. TROUBLESHOOTING

This section addresses common concerns that may arise during or after installation.

Issue: Grille insert does not align properly or fit flush.

Possible Causes:

- Incorrect vehicle model or year.
- Tabs on the insert are bent or misaligned.
- Drill holes on the OE grille shell are not accurately placed.

Solution:

- Double-check vehicle compatibility against the product specifications.
- Carefully inspect the grille insert for any manufacturing defects or shipping damage. Gently adjust tabs if slightly bent, but avoid excessive force.
- Ensure precise marking and drilling of holes. If holes are significantly off, professional assistance may be required.

Issue: Mounting hardware feels loose after installation.

Possible Causes:

- Hardware not tightened sufficiently.
- Incorrect drill bit size used, resulting in oversized holes.

Solution:

- Re-tighten all mounting hardware. Do not overtighten to avoid stripping threads or damaging components.
- If holes are oversized, consider using larger washers or alternative fastening methods (e.g., rivet nuts) with professional guidance.

For issues not covered here, please refer to the "Warranty and Support" section.

8. SPECIFICATIONS

Feature	Detail
Brand	APS
Model Number	CL6360H
Material	Stainless Steel
Finish	Powder Coated (Black)
Grille Style	1.8mm Wire Mesh Rivet Style
Installation Type	Bolt-Over/Overlay (Drilling Required)

Vehicle Service Type	Car (Chevy Silverado 1500)
Item Weight	8.2 pounds
Package Dimensions	53 x 7 x 4 inches

9. WARRANTY AND SUPPORT

APS is committed to customer satisfaction. If you encounter any quality problems with your grille insert, please do not hesitate to contact our customer service team.

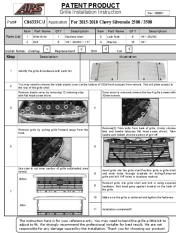

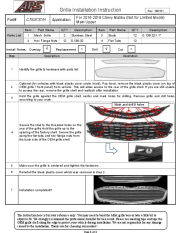
While specific warranty details are not provided in this manual, APS offers professional and sincere service to resolve product-related issues.

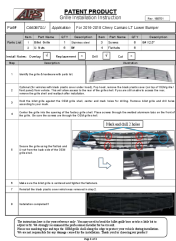
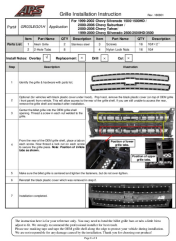
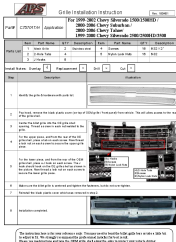
For assistance, please contact APS customer support through the retailer's platform or the official APS website.



© 2023 APS. All rights reserved. This manual is for informational purposes only.

Related Documents - CL6360H

	<p>2015-2018 Chevy Silverado 2500/3500 Grille Installation Instructions - APS C86333C/J</p> <p>Detailed installation guide for the APS C86333C/J billet grille designed for the 2015-2018 Chevrolet Silverado 2500 and 3500 models. Includes parts list and step-by-step instructions.</p>
	<p>APS Grille Installation Instructions for Chevy Silverado</p> <p>Step-by-step installation guide for APS Grille for 2005-2007 Chevy Silverado models, including parts list and important notes.</p>
	<p>Grille Installation Instructions for 2016-2018 Chevy Malibu Main Upper</p> <p>Step-by-step guide for installing the APS C76373T/H Main Upper Grille on a 2016-2018 Chevrolet Malibu. Includes parts list and installation notes.</p>

	<p>2016-2018 Chevy Camaro LT Lower Bumper Grille Installation Instructions APS Patent Product</p> <p>Step-by-step installation guide for the APS Patent Product Billet Grille (Part# C66367S/J) for the 2016-2018 Chevrolet Camaro LT Lower Bumper. Includes parts list and installation notes.</p>
	<p>Grille Installation Instructions for Chevy Silverado, Suburban, and Tahoe</p> <p>Step-by-step guide for installing the GR03LEG01H grille on 1999-2002 Chevy Silverado 1500/1500HD, 2000-2006 Chevy Suburban, 2000-2006 Chevy Tahoe, and 1999-2000 Chevy Silverado 2500/2500HD/3500. Includes parts list and installation notes.</p>
	<p>APS Grille Installation Instructions for Chevy Silverado, Tahoe, Suburban</p> <p>Step-by-step guide for installing an APS billet grille on 1999-2002 Chevy Silverado 1500/1500HD, 2000-2006 Chevy Tahoe, 2000-2006 Chevy Suburban, and 1999-2000 Chevy Silverado 2500/2500HD/3500. Includes parts list and detailed illustrations.</p>