

[Manuals.plus](#) /

› [Tvilum](#) /

› Tvilum Scottsdale Queen Bed with Slat Roll Instruction Manual

Tvilum 76200/1348

Tvilum Scottsdale Queen Bed with Slat Roll Instruction Manual

Model: 76200/1348

[Assembly](#) [Usage](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

INTRODUCTION

This manual provides detailed instructions for the assembly, usage, and maintenance of your Tvilum Scottsdale Queen Bed with Slat Roll. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Tvilum Scottsdale Queen Bed, fully assembled, featuring a white wood grain finish and an arched headboard, shown in a modern bedroom environment.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- Keep all assembly hardware out of reach of children.
- Assemble the bed on a soft, clean surface to prevent scratching.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight recommendation of 200 pounds.
- Do not stand or jump on the bed.
- Use only the recommended mattress size (Queen).

PARTS LIST

Before beginning assembly, verify that all components are present and undamaged. Refer to the included hardware pack for specific part identifiers.

- Headboard (1)
- Footboard (1)
- Side Rails (2)
- Slat Roll (1)
- Center Support Beam (1, if applicable)
- Hardware Pack (screws, bolts, washers, Allen wrench)

SETUP & ASSEMBLY

Assembly typically requires two adults. Please follow these steps carefully.

Step 1: Unpack and Identify Components

Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each component using the parts list.

Step 2: Attach Side Rails to Headboard

Align the side rails with the pre-drilled holes on the headboard. Secure them using the provided bolts and washers. Do not fully tighten at this stage.

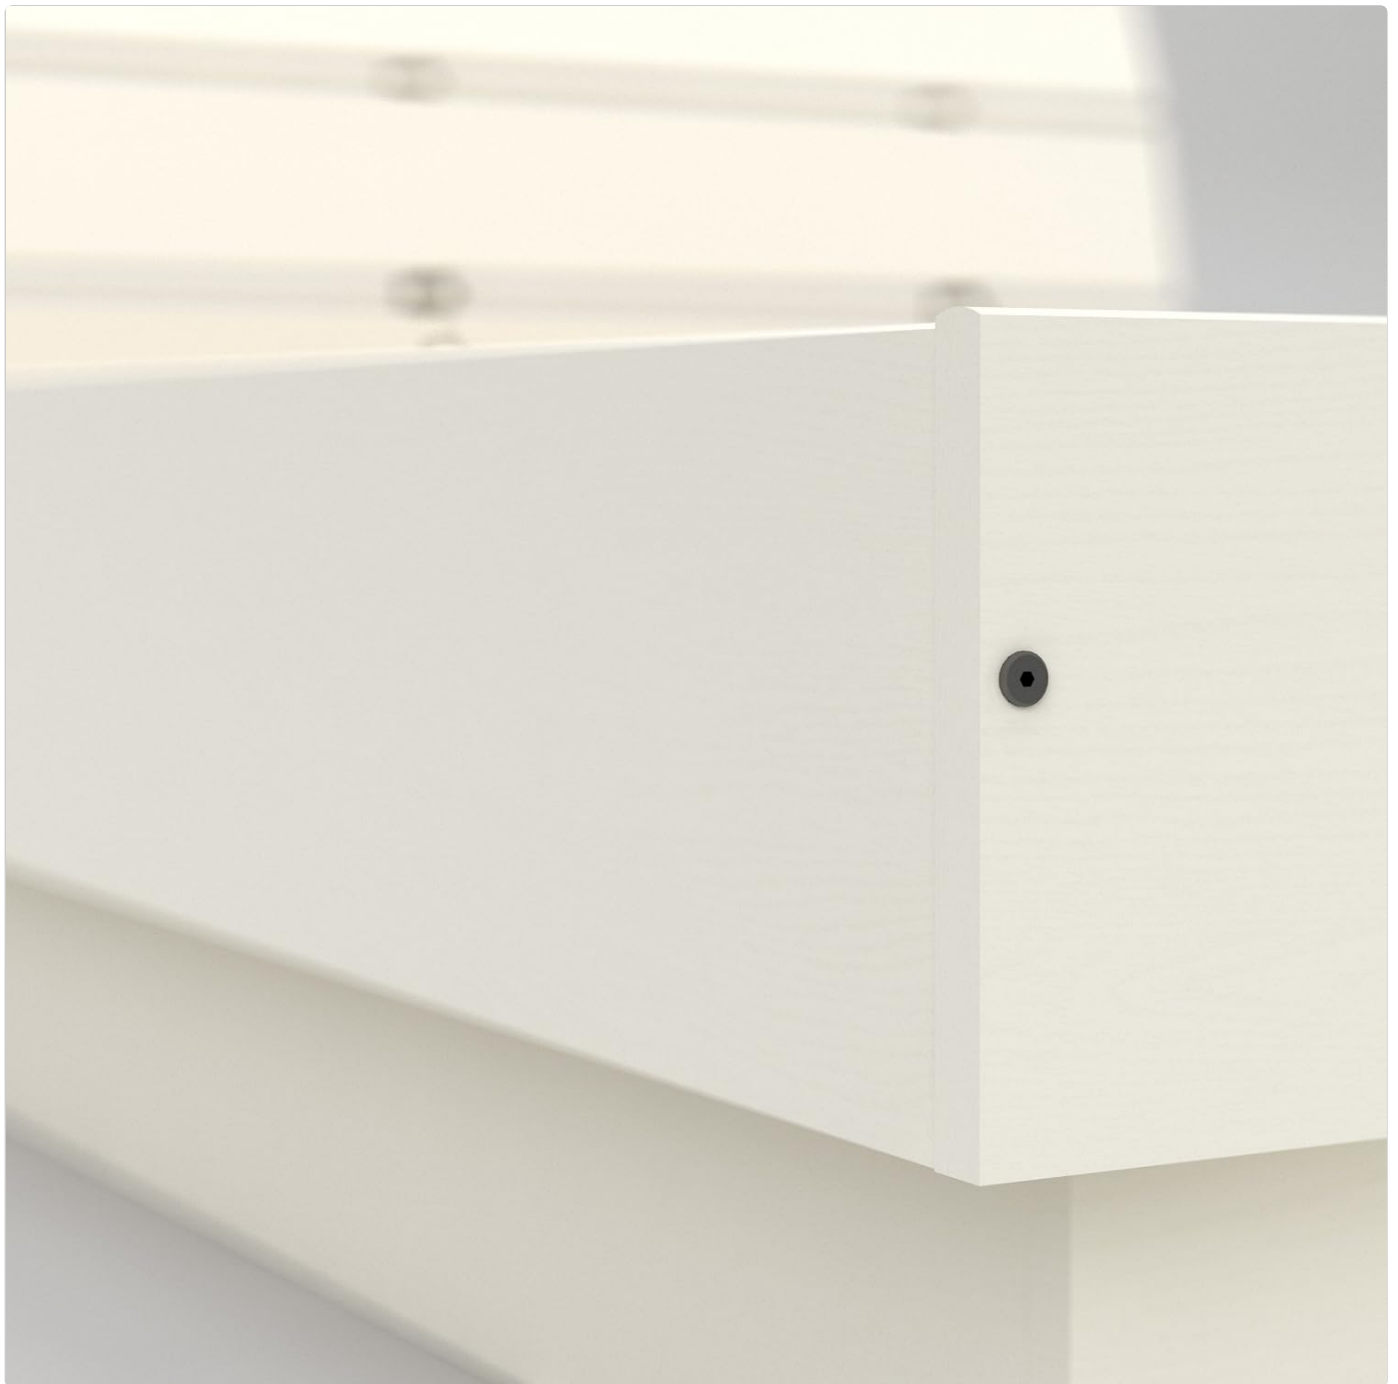


Image: A close-up view of a bed frame corner, illustrating the connection point where a side rail attaches to the headboard or footboard, secured by a visible screw.

Step 3: Attach Side Rails to Footboard

Repeat the process from Step 2 to attach the other ends of the side rails to the footboard. Ensure the frame is square before proceeding.

Step 4: Install Center Support Beam (if applicable)

If your model includes a center support beam, attach it to the designated brackets on the headboard and footboard.

Step 5: Secure the Slat Roll

Unroll the slat roll across the width of the bed frame, ensuring even spacing. Secure the ends of the slat roll to the side rails using the provided screws.



Image: A detailed view showing the connection between the headboard and the wooden slat roll, highlighting how the slats are integrated into the bed frame for mattress support.

Step 6: Final Tightening

Once all components are in place, go back and fully tighten all bolts and screws. Do not overtighten.

USAGE

Your Tvilum Scottsdale Queen Bed is designed to accommodate a standard Queen-size mattress.

- Place your Queen-size mattress directly onto the slat roll. A box spring is not required.
- Ensure the mattress is centered on the bed frame.
- The bed is designed for sleeping and resting. Avoid excessive force or impact on the frame.



Image: The Tvilum Scottsdale Queen Bed, fully dressed with a mattress and bedding, showcasing its contemporary design and arched headboard in a bedroom setting.

MAINTENANCE

Proper care will extend the life and appearance of your bed.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Immediately wipe up spills to prevent staining. The finish is water and stain resistant.
- **Hardware:** Periodically check all bolts and screws and re-tighten if necessary to maintain stability.
- **Moving:** When moving the bed, lift it rather than dragging it to prevent damage to the frame and floor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware.	Check and tighten all bolts and screws. Ensure all connections are secure.
Squeaking noises.	Loose connections or friction between parts.	Re-tighten all hardware. Apply a small amount of lubricant (e.g., silicone spray) to contact points if necessary.
Slat roll appears uneven.	Slats not properly spaced or secured.	Ensure slats are evenly spaced and securely fastened to the side rails.

SPECIFICATIONS

- **Model:** 76200/1348
- **Brand:** Tvilum
- **Style:** Contemporary
- **Size:** Queen
- **Color:** White Wood Grain
- **Frame Material:** Wood
- **Included Components:** Slat Roll
- **Required Assembly:** Yes
- **Item Weight:** 88 Pounds
- **Maximum Weight Recommendation:** 200 Pounds
- **UPC:** 840268105273

WARRANTY INFORMATION

This product is covered by a **12 months manufacturer defects + parts only** warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please contact Tvilum customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Tvilum customer support.

- **Online Support:** Visit the [Tvilum Store on Amazon](#) for product information and support resources.
- **Contact Information:** Refer to your product packaging or the Tvilum website for the most current contact details.

