Modway MOD-6000-BEI

Modway Amira Tufted Fabric Upholstered Full Bed Frame

Model: MOD-6000-BEI

Information	**Assembly**	**Usage**	**Overview Maintenance Support**	**Safety Troubleshooting**	**Specifications**	**Warranty &**

1. PRODUCT OVERVIEW

The Modway Amira Tufted Fabric Upholstered Full Bed Frame is designed to provide a stylish and comfortable foundation for your mattress. Featuring a soft polyester fabric upholstered base and a timeless button-tufted headboard, this bed frame adds a touch of elegance to any bedroom. It is constructed with a durable wood frame and legs, including a reinforced center beam for enhanced stability. The Amira bed frame is compatible with various mattress types, including memory foam, spring, latex, and hybrid mattresses, and requires a box spring for optimal support.

Figure 1.1: The Modway Amira Tufted Fabric Upholstered Full Bed Frame in Beige, showcasing its elegant design within a bedroom environment.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** Do not load more than 800 pounds onto the bed frame. Exceeding this weight limit can compromise the structural integrity and lead to collapse.
- **Assembly:** Follow assembly instructions carefully to avoid instability. Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- **Box Spring Requirement:** This bed frame requires a box spring for proper mattress support and to ensure the longevity of the frame. Using a mattress directly on the slats without a box spring may lead to damage to the mattress and/or the bed frame.
- **Placement:** Place the bed frame on a flat, level surface to prevent wobbling and ensure stability.

- **Children and Pets:** Keep small parts and packaging materials away from children and pets during assembly to prevent choking hazards.

3. ASSEMBLY INSTRUCTIONS

Assembly of the Modway Amira Bed Frame typically requires two adults. Please ensure all parts are present before beginning. A box spring is required and not included.

3.1. Parts List

Verify that all components are included in your package:

- Headboard (1)
- Side Rails (2)
- Footboard (1)
- Center Support Beam (1)
- Support Legs for Center Beam (2-3, quantity may vary by size)
- Wood Slats (Quantity varies by size, typically 4-6)
- Hardware Pack (Bolts, Washers, Allen Wrench)

Figure 3.1: Components of the Modway Amira Bed Frame, illustrating the headboard, side rails, and wooden slats before assembly.

3.2. Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.

2. **Attach Headboard Legs:** If the headboard legs are separate, attach them to the headboard using the provided bolts and Allen wrench. Do not fully tighten yet.

3. **Connect Side Rails to Headboard:** Align the side rails with the headboard. Insert bolts through the pre-drilled

holes and secure them. Hand-tighten only for now.

4. **Attach Footboard:** Connect the footboard to the other end of the side rails using the remaining bolts. Hand-tighten.

5. **Install Center Support Beam:** Place the center support beam along the length of the bed frame, connecting it to the headboard and footboard brackets. Attach the support legs to the center beam.

6. **Place Wood Slats:** Lay the wooden slats across the side rails, ensuring they are evenly spaced and secured if there are attachment points.

7. **Final Tightening:** Once all components are in place and aligned, go back and securely tighten all bolts using the Allen wrench. Do not overtighten.

8. **Verify Stability:** Gently shake the assembled frame to ensure it is stable and all connections are secure.

Figure 3.2: The Modway Amira Bed Frame fully assembled and ready for use with a mattress.

4. USAGE GUIDELINES

To ensure the longevity and safe use of your Modway Amira Bed Frame, please adhere to the following guidelines:

- **Mattress Placement:** Always use a box spring with your mattress on this bed frame. Place the box spring evenly on the wooden slats, followed by your mattress.

- **Weight Distribution:** Distribute weight evenly across the bed surface. Avoid concentrating heavy loads in one small area.

- **Movement:** When moving the bed frame, lift it rather than dragging it to prevent damage to the legs and frame structure.

- **Children's Play:** Discourage jumping or excessive rough play on the bed, as this can stress the frame and lead to damage or injury.

Figure 4.1: Side profile of the Modway Amira Bed Frame, illustrating the height and mattress fit.

5. Care and Maintenance

Proper care will help maintain the appearance and structural integrity of your bed frame.

- **Cleaning Fabric:** For general cleaning, gently vacuum the upholstered fabric to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, consult a professional upholstery cleaner or use a mild fabric cleaner suitable for polyester, testing on an inconspicuous area first.
- **Cleaning Wood:** Wipe wood components with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Regular Inspection:** Periodically inspect all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading. Position the bed away from direct sunlight or use curtains/blinds.
- **Humidity Control:** Maintain a stable room temperature and humidity level to prevent warping or damage to the wood components.

6. Troubleshooting Guide

Problem	Possible Cause	Solution
Bed frame feels unstable or wobbly.	Loose bolts or uneven assembly.	Ensure all bolts are securely tightened. Verify that the bed frame is placed on a flat, level surface. Re-check assembly steps.
Squeaking noises from the bed.	Loose connections, friction between parts, or an old box spring/mattress.	Tighten all bolts. Apply a small amount of lubricant (e.g., silicone spray) to connection points if necessary. Inspect box spring and mattress for wear.

Problem	Possible Cause	Solution
Mattress sags or feels unsupported.	No box spring used, worn-out box spring, or damaged slats.	Ensure a box spring is used as required. Inspect the box spring for signs of wear or damage. Check wooden slats for cracks or bowing and replace if necessary.
Difficulty aligning parts during assembly.	Incorrect orientation of parts or overtightened bolts too early.	Refer to the assembly diagrams and ensure parts are oriented correctly. Loosen any previously tightened bolts to allow for adjustment, then re-tighten once aligned.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	MOD-6000-BEI
Brand	Modway
Size	Full
Color	Beige
Product Dimensions (L x W x H)	80.5" x 58" x 45.5"
Item Weight	50 pounds
Material	100% Polyester Fabric, Wood Frame
Weight Capacity	800 lbs
Assembly Required	Yes
Box Spring Required	Yes (Not Included)
UPC	889654132295

Figure 7.1: Dimensional diagram of the Modway Amira Full Bed Frame.

8. WARRANTY AND SUPPORT

8.1. Manufacturer's Warranty

The Modway Amira Tufted Fabric Upholstered Full Bed Frame comes with a **one-year warranty against manufacturer defects**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper assembly, misuse, abuse, accidents, modifications, or normal wear and tear.
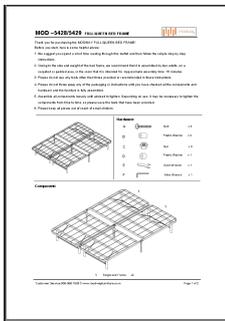To make a warranty claim, please retain your proof of purchase and contact Modway customer service.

8.2. Customer Support

For assistance with assembly, missing parts, or any other inquiries regarding your Modway Amira Bed Frame, please contact Modway Customer Service:

- **Website:** Visit the official Modway website for FAQs and support resources.
- **Email:** Refer to your purchase documentation for direct email support.
- **Phone:** Refer to your purchase documentation for customer service phone numbers.

When contacting support, please have your model number (MOD-6000-BEI) and proof of purchase readily available.

Related Documents - MOD-6000-BEI

[MOD-5428/5429 Full/Queen Bed Frame Assembly Instructions](#)
Step-by-step assembly guide for the Modway MOD-5428/5429 Full/Queen Bed Frame, detailing hardware, components, and assembly steps for easy setup.

[Confetti Soft Modular Lounge | Specification Sheet | DESIGN BY THEM](#)
Detailed specification sheet for the Confetti Soft Modular Lounge by DESIGN BY THEM, designed by Gibson Karlo. Includes dimensions, configurations, materials, and care instructions.

[Honeywell DKG-N Burner Control Box Technical Specification](#)
Detailed technical specifications, application details, safety instructions, and operational guidelines for the Honeywell DKG-N series burner control boxes, designed for 2-stage atmospheric burners and direct air heaters.

[Growatt MOD 3-15KTL3-HU Series Hybrid Solar Inverter User Manual](#)
Comprehensive user manual for the Growatt MOD 3-15KTL3-HU series of hybrid solar inverters. Covers installation, electrical connection, operation, maintenance, troubleshooting, and specifications for efficient solar energy management.

[Catalogo B9: Segatrici a Nastro BIANCO](#)
Scopri la gamma completa di segatrici a nastro BIANCO e BTM, incluse le serie Manuali, Semiautomatiche e Automatiche. Il catalogo B9 presenta modelli innovativi con specifiche tecniche dettagliate per ogni esigenza industriale.

[Hillstone AX-Series Application Delivery Controller (ADC) | Features and Specifications](#)
Explore the Hillstone AX-Series Application Delivery Controllers (ADCs), enterprise-grade solutions for optimizing application delivery, load balancing, security, and performance. Details on features, specifications, and models.