

Manuals.plus /

- › d-c-fix /
- › d-c-fix Whitewood Self-Adhesive Film User Manual

d-c-fix 346-0089-2PK

d-c-fix Decorative Self-Adhesive Film Instruction Manual

Model: 346-0089-2PK

Brand: d-c-fix

INTRODUCTION

This manual provides comprehensive instructions for the proper application, care, and maintenance of your d-c-fix Whitewood self-adhesive decorative film. Designed for transforming various flat surfaces, this solvent-free film offers a durable and water-resistant solution for home and office makeovers. Please read all instructions carefully before beginning the application process to ensure optimal results and product longevity.

SAFETY INFORMATION

- Ensure the application area is well-ventilated.
- Keep sharp tools (scissors, scalpels) out of reach of children.
- Avoid applying the film to surfaces that exceed 75°C (167°F) as this may affect adhesion and material integrity.
- Do not ingest any part of the film.

WHAT'S IN THE BOX

- (2) rolls of d-c-fix Whitewood self-adhesive film (17" x 78" each)

Note: Applicator tools (smoother, scalpel) are sold separately or may be included in specific product bundles.



Image: Two rolls of d-c-fix Whitewood self-adhesive film, as typically found in the product packaging.

SETUP AND INSTALLATION

Achieving a professional finish with d-c-fix film is straightforward. Follow these steps for successful application:

1. Prepare the Surface

Ensure the surface is thoroughly cleaned, dry, and smooth. Remove any dust, grease, or debris. For best results, use a mild cleaner and allow the surface to dry completely. Remove any handles or obstructions from cabinets or drawers if applicable.



Image: A person applying the self-adhesive film to a surface, demonstrating the smoothing process.

2. Measure and Cut the Film

Measure the area you intend to cover precisely. The backing paper of the d-c-fix film features a convenient grid, allowing for accurate measurements and straight cuts. It is recommended to cut the film slightly larger than needed (e.g., 4mm larger on each side) to allow for trimming after application, ensuring a perfect edge.

<p>6. A szabályos élek kialakítása érdekében egy vonalzó segítségével vágja le a szeleket esetlegesen felesleges fóliát.</p>	<p>6. Pentru muchii perfecte, îndepărtați folia de deasupra cu ajutorul unui cutter și, dacă este cazul, cu o riglă.</p>	<p>6. Для получения аккуратной кромки выступающие края пленки обрежьте острыми ножом и удалите (при этом можно использовать линейку).</p>
<p>Upute za uporabu</p> <ol style="list-style-type: none"> 1. Željenu veličnu foliju, uključujući dodatna 2 – 3 cm, iscrtati na stražnjem papiru i izrezati škarama. 2. Temeljito očistiti površinu za lijepljenje! Podloga mora biti očišćena od prašine i masnoća. 3. Papir na stražnjoj strani odijepiti ca. 7 cm od folije i saviti tako da samo mala površina ljepljive folije ostane slobodna. 4. Foliju sa slobodnom ljepljivom površinom pažljivo pristoniti na podlogu i pritisnuti prstima čvrsto na foliju. 5. Papir na stražnjoj strani postepeno odvajati od folije i nakon toga foliju lagano odmaknuti od podloga. 6. Za precizne kutove odstraniti foliju skalpelom, eventualno uz pomoć ravnila. 	<p>Navodila za uporabo</p> <ol style="list-style-type: none"> 1. Na hrbtini strani označite željenu dublino folije z uključno 2 – 3 cm dodatka in jo odrežite s škarami. 2. Površino na katero lepíte folijo temeljito očistite! Podlaga mora biti lepljivina in brez prahu. 3. Zaščitni papir na hrbtini strani folije odlepite za približno 5 cm in ga priporovite tako, da je lepljiva površina prosta. 4. Prosto lepljivo površino previdno nanesite na podlago in jo pritrdite z prsti. 5. Zaščitni papir na hrbtini strani folije postopoma odlepite in hkrati folijo s pomočjo gladilne lopatice pritrdite na podlago. 6. Za ravne in natančne robove odrežite odvečno folijo s pomočjo noža za leroško. Po potrebi si pomagajte z ravnilom. 	<p>Инструкции за работа</p> <ol style="list-style-type: none"> 1. Обозначте желани размер фолио плюс още 2 – 3 см върху хартията на гърба и изрежете с ножица. 2. Почистете основно повърхността за облепване! Основата трябва да бъде чиста от прах и мазнина. 3. Отлепете хартията около 5 см от фолиото и прегънете, така че да се открие само малка повърхност от лепящото фолио. 4. Поставете внимателно фолиото с откритата лепяща повърхност върху основата и притиснете с ръкав за фолио. 5. Продължете да отлепвате постепенно хартията от фолиото и приглаждайте добре с ръкав. 6. За да зачистите ръбовете, отстранете стърчащото фолио с помощта на макиет нож, евентуално линия.
<p>Instrukcija uzicia</p> <ol style="list-style-type: none"> 1. Na odrotnej strani folije pokrijte papirjem zabezpečujacim odrysuj požadany kształt dodajac do niego 2 – 3 cm zapasu, a nastepnie wytnij go uzywajac nozyczek. 2. Oczyść dokladnie powierzchnię, która chcesz okleić. Powinna być ona odleuszczona i wolna od kurzu. 3. Na odcinke około 5 cm usuń warstwę papieru zabezpieczającego zginając go na krawędzi tak, aby odsłonięta była niewielka powierzchnia folii klejącej. 4. Umieść folię klejącą stroną na powierzchnię, którą chcesz okleić. 5. Z pomocą rąkla wygładź powierzchnię folii stopniowo ściągając z niej papier zabezpieczający. 6. Aby uzyskać precyzyjne krawędzie przyłóż do nich linijkę, a następnie usuń nadmiar folii nożykiem tapicerskim. 	<p>Інструкція по експлуатації</p> <ol style="list-style-type: none"> 1. Розмірні плівку за необхідним розміром з припуском 2 – 3 см і вирізати ножицями. 2. Ретельно очистити поверхню наклеювання від пилу, за необхідністю знежирити основу. 3. Відкрити і відігнути папір на 5 см від краю плівки, щоб з'явилася тіньова частина наклеюваної плівки. 4. Обережно вставляти плівку на поверхню і притиснути за допомогою раневла. 5. Тепер необхідно поступово ділянку за ділянкою знімати папір з плівки та за допомогою раяла притиснути і розгладити плівку на поверхні. 6. Для отримання акуратної кромки виступаючі краї плівки обрізати гострим ножем. 	<p>Navod na použitie</p> <ol style="list-style-type: none"> 1. Želanjí rozmer fólie plus 2–3 cm navyše si vyznače na papier na zadnej strane a pomocou nožnic ju odstrihnete. 2. Plochu, na ktorú sa má lepiť, dôkladne vyčistite! Podklad musí byť bez prítomnosti prachu a mastnoty. 3. Papier na zadnej strane asi na 5 cm siahnite z fólie a zahňte, aby bola odkrytá iba malá plocha lepiacej fólie. 4. Fóliu opatrne položte odkrytú lepiacou plochou na podklad a pomocou stierky na fóliu ju pritlačte. 5. Papier na zadnej strane potom postupne ďalej sťahujte z fólie a následne fóliu pomocou stierky pevne uhladte. 6. Keď si ziskajú čistých hrán, prečnievajúcu fóliu odstráňte pomocou zalamovacieho noža a pravítka.
<p>使用说明</p> <ol style="list-style-type: none"> 1. 将所需尺寸的薄膜 连同 2 – 3 cm 的余量在背面纸张上勾划出来 再用剪刀剪下 2. 彻底清洁要粘帖的表面 必须无尘 无油污 3. 将的背面纸张从薄膜上揭升大约 5 cm 并折角 以便让粘性薄膜的一小块面积空出 4. 将空出黏性表面的薄膜小心地放置在背面上, 并用薄膜刮板按压 	<p>الاستخدامات</p> <ol style="list-style-type: none"> 1. قم برسم قياس اللقطة المطلوب فيه مع إضافة 2 – 3 سم على ورق ظهر السطح وقطعه بالقص. 2. تأكد سطح الالتصاق جيداً! يجب أن تكون الأوحية خالية من الغبار أو المواد الملوثة. 3. ارفع حوالي 5 سم من ورق ظهر السطح من الرقعة المصقفة حرراً، وفر بثلثه حيث تظل فقط مساحة صغيرة من الرقعة المصقفة حرراً. 	<p>使用说明书</p> <ol style="list-style-type: none"> 1. シートの裏紙に、貼り付けたいと思う箇所の輪郭を実物大で書き、その周りに2–3センチの余白部分(のりしろ)を追加して、はさみでシートを切ってください。 2. シートを貼り付ける面は、事前にきれいに清掃してください。埃や油がついていると、うまく貼れません。 3. 貼り方:裏紙を幅らセンチ程度シートから引き剥がし、裏紙は折りこみます。シートの手前部分は、それ以上露出しないようにしてください。

Image: The gridlines on the film's backing paper, useful for precise measuring and cutting.

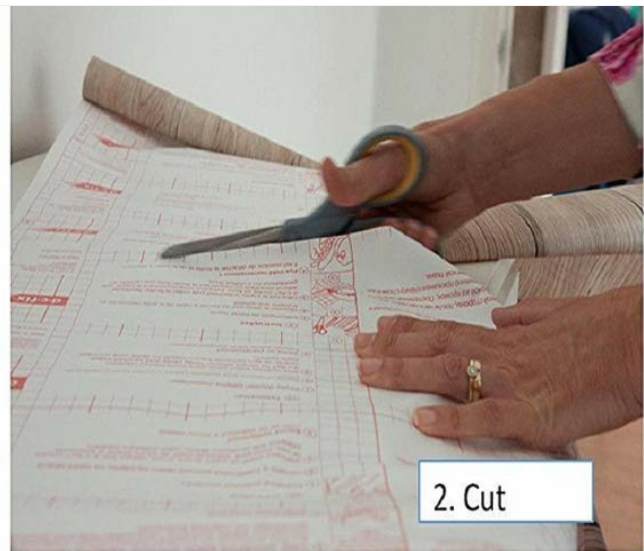
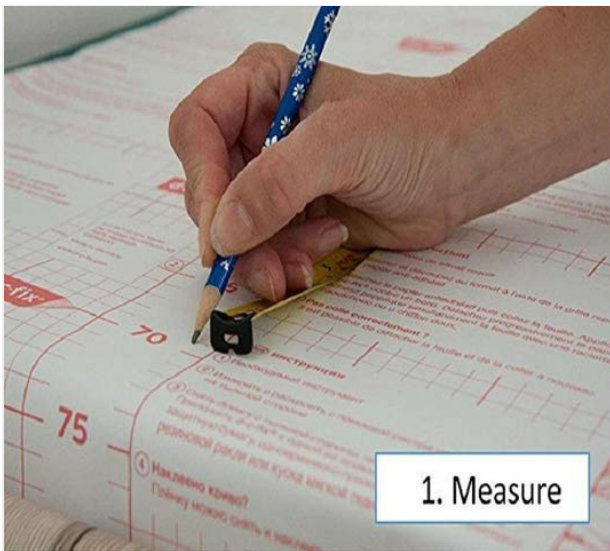


Image: A visual guide illustrating the four key steps: Measure, Cut, Peel, and Smooth.

3. Apply the Film

1. Gently peel back a small section of the backing paper from one corner or edge.
2. Align the exposed adhesive side of the film with your starting point on the surface.
3. Slowly and gradually peel off the remaining backing paper while simultaneously smoothing the film onto the surface. Work from the center outwards to push out any air bubbles. A d-c-fix smoother or a soft cloth is recommended for this step.
4. If you make a mistake or encounter wrinkles, simply peel back the film carefully and reapply. The special adhesive allows for repositioning before it fully bonds. Full bond typically occurs within 24 hours.

4. Handle Air Bubbles

Small air bubbles can be pricked with a fine pin or needle. After pricking, gently smooth the area with a cloth or smoother to release the trapped air.

Video Guide: Application How-To

Your browser does not support the video tag.

Video: A detailed application guide for d-c-fix decorative and window films, demonstrating best practices for a smooth, bubble-free finish. (Source: d-c-fix Vendor)

OPERATING AND USAGE

d-c-fix Whitewood self-adhesive film is versatile and can be applied to almost any dry, flat, and clean surface. Its primary use is to transform and protect surfaces, offering a fresh, light white wood aesthetic with a grey grain finish.

- **Kitchen Surfaces:** Ideal for updating counters, cabinets, and backsplashes.
- **Furniture:** Revitalize old tables, wardrobes, shelves, and drawers.
- **Decorative Projects:** Suitable for various arts and crafts, decorations, and personalizing items.



Image: Example of d-c-fix Whitewood film applied to kitchen cabinets, showcasing its transformative effect.



Image: A table surface covered with d-c-fix Whitewood film, demonstrating its use on furniture.

MAINTENANCE AND CARE

Surfaces covered with d-c-fix film are easy to clean and maintain.

- **Cleaning:** Wipe clean with warm soapy water and a soft cloth. Avoid abrasive cleaners or harsh chemicals that could damage the film's surface.
- **Heat Resistance:** The film is heat resistant up to 75°C (167°F). For hotter items, use trivets or heat pads to prevent damage.
- **Removal:** To remove the film without leaving residue, simply lift a corner and pull slowly. For stronger adhesion, warm water or a hairdryer can be used to soften the film and adhesive. Any remaining adhesive can be wiped clean with a cloth and warm water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Film not sticking well / Peeling off	Surface not clean, dry, or smooth enough; adhesive not fully bonded.	Ensure surface is thoroughly cleaned and dry before application. Press firmly during application. Allow 24 hours for adhesive to fully bond. For stubborn areas, apply gentle heat (e.g., with a hairdryer) and press firmly.
Air bubbles under the film	Film applied too quickly or unevenly.	Slowly peel back the film and reapply, smoothing from the center outwards. For small, trapped bubbles, prick with a fine pin and smooth out.
Wrinkles or creases	Film not applied straight or stretched during application.	Carefully peel back the film to the wrinkle and reapply, ensuring it is laid flat without stretching.

SPECIFICATIONS

Brand: d-c-fix

Model Number: 346-0089-2PK

Color: Whitewood

Material: Vinyl

Product Dimensions: 78"L x 17"W (per roll)

Number of Items: 2 rolls

Special Feature: Waterproof

Heat Resistance: Up to 75°C (167°F)

Product Care Instructions: Wipe with Damp Cloth

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the official d-c-fix website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: d-c-fix (Konrad Hornschuch AG Group)

For further assistance, visit the d-c-fix Store on Amazon.