

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [oEdRo](#) /

› [oEdRo Soft Tri-fold Truck Bed Tonneau Cover Instruction Manual for Dodge Ram 1500 2500 3500](#)

oEdRo MAOA-0038

oEdRo Soft Tri-fold Truck Bed Tonneau Cover Instruction Manual

Model: MAOA-0038

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your oEdRo Soft Tri-fold Truck Bed Tonneau Cover. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product.

Compatibility

This tonneau cover is compatible with the following truck models:

- Dodge Ram 1500: 2002-2018
- Ram 1500 Classic & New Body: 2019-2026
- Dodge Ram 2500: 2003-2026
- Dodge Ram 3500: 2003-2026

Important: This cover is designed for **Fleet Side 6.4ft / 6.5ft beds only** and is **not compatible with models equipped with RamBox or Split Tailgate.**

To ensure proper fitment, measure your truck bed length before ordering. The measurement should be taken from the bulkhead to the tailgate, along the inside of the bed.

Measure Bed Size before Ordering

Compatible with Dodge Ram 1500 2500 3500

ONLY FIT 6.4FT



How to Measure Your Bed Size

Image: How to measure your truck bed size. Ensure your bed measures approximately 6.4 feet from bulkhead to tailgate for proper fit.

SAFETY INFORMATION AND IMPORTANT CONSIDERATIONS

Please observe the following safety guidelines and considerations:

- Ensure all clamps and fasteners are securely tightened before driving. Regularly check for tightness.
- Do not place heavy objects on the tonneau cover.
- Always ensure the cover is properly latched or folded when the vehicle is in motion.
- Keep hands and fingers clear of moving parts during folding and unfolding operations.
- Do not modify the tonneau cover or its components.

Incompatible Truck Bed Accessories

This tonneau cover is not suitable for installation on trucks with certain existing bed accessories. Please remove any of the following prior to installation:

- Bed racks
- Toolboxes
- Roll bars
- Any other accessories that obstruct the bed rails or the area where the tonneau cover clamps are installed.

Not Suitable For The Following Condition Remove Prior to Installation



Image: Examples of truck bed conditions not suitable for tonneau cover installation. Remove any obstructing accessories before proceeding.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- oEdRo Soft Tri-fold Tonneau Cover Assembly (pre-assembled rails and cover)
- Mounting Clamps (pre-installed or separate)
- Weather Strip (if included separately)
- Instruction Manual

- LED Light (included as an accessory)

Free Led light included.
If broken when received, contact us via amamazon message for exchange.



oEDRO[®]
OFF-ROAD 4x4 DIY

Image: A free LED light is included to illuminate your truck bed.

SETUP AND INSTALLATION

The oEdRo Soft Tri-fold Tonneau Cover is designed for easy, no-drill installation in most cases. Follow these steps for a smooth setup:

Step 1: Prepare the Truck Bed

- Clean the truck bed rails thoroughly to ensure a good seal.
- Remove any existing bed accessories that may interfere with the cover's installation (refer to the Safety Information section).
- If your truck has a bed liner that extends over the bed rails, you may need to make small cuts to allow the clamps to secure properly. For bed liners under the bed rails, no cutting is typically required.

Step 2: Position the Tonneau Cover

- Place the pre-assembled tonneau cover onto the front of your truck bed, near the bulkhead.
- Ensure the cover is centered and flush with the bed rails.


No Drilling Easy Installation



Image: Visual guide for the no-drilling installation process. The cover is placed, unfolded, and then secured.

Step 3: Secure the Front Clamps

- Locate the front clamps on the underside of the tonneau cover.
- Hook the clamps under the truck bed rails and tighten them securely. Ensure a strong connection to stabilize the cover in its initial position.

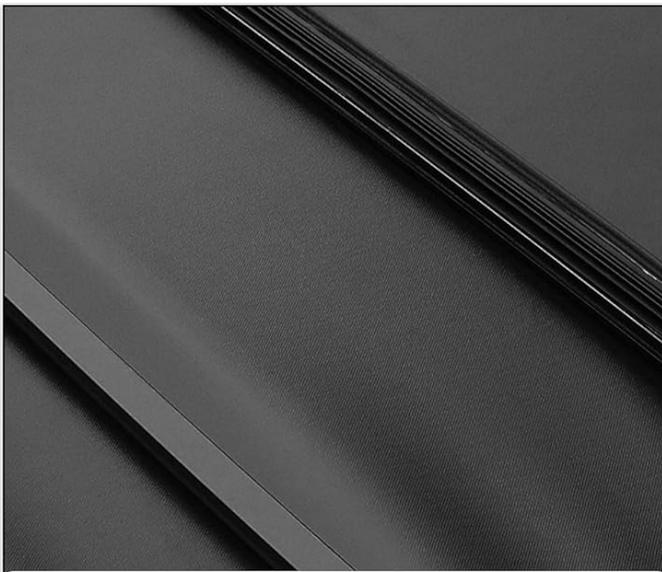


Double Layer PVC: Water resistant and thoroughly tested for UV protection and good tensile properties.



Strong Connection: Stabilize in the initial position of your truck bed.



Weather Strip: Prevent rain, snow, etc. from entering your truck bed.

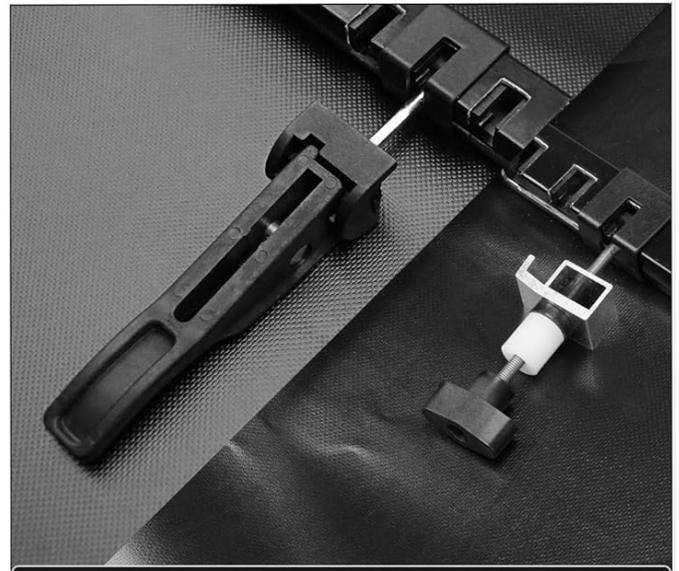


Security Clamps: Rear clamps make sure your tonneau cover stays put.

Image: Details of the tonneau cover's construction and securing mechanisms. Top right shows a strong connection point for stability.

Step 4: Unfold and Secure the Rear Clamps

- Carefully unfold the tonneau cover towards the tailgate.
- Once fully extended, locate the rear security clamps.
- Engage and tighten these clamps to the truck bed rails. These clamps ensure the tonneau cover stays put and provides a secure, snow-proof, and dust-proof trunk instantly.

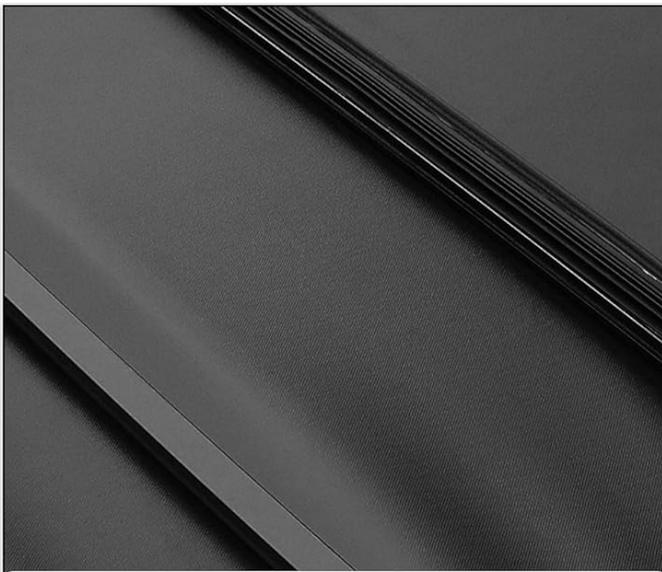


Double Layer PVC: Water resistant and thoroughly tested for UV protection and good tensile properties.



Strong Connection: Stabilize in the initial position of your truck bed.



Weather Strip: Prevent rain, snow, etc. from entering your truck bed.

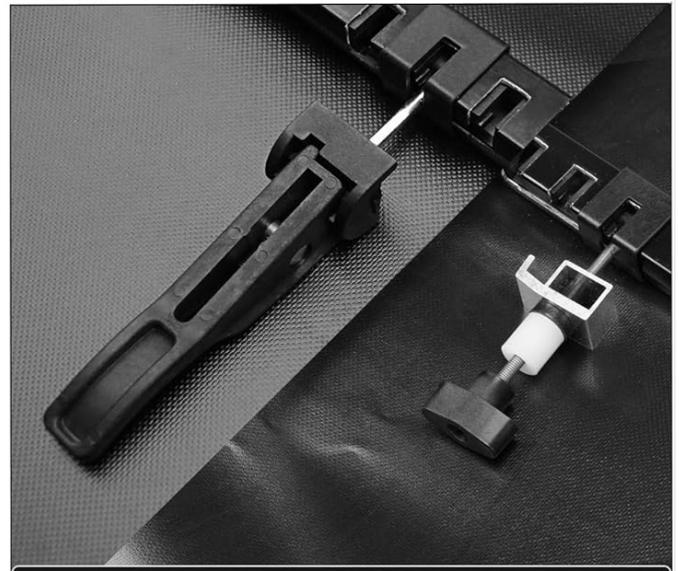

Security Clamps: Rear clamps make sure your tonneau cover stays put.

Image: Bottom right shows the security clamps that hold the cover in place at the rear.

Step 5: Install Weather Strip (if separate)

- If your weather strip is not pre-installed, apply it along the tailgate edge or other specified areas to prevent rain and snow from entering the truck bed.

Perfect Fit Weather Strip Included

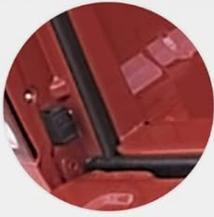


Image: The tonneau cover with an included weather strip ensures a perfect fit and protection against elements.

OPERATING INSTRUCTIONS

Opening the Tonneau Cover

1. Release the rear security clamps by disengaging them from the truck bed rails.
2. Fold the rear panel of the tonneau cover towards the front of the truck.
3. Continue folding the middle panel over the front panel.
4. Secure the folded cover using the integrated straps or buckles to prevent it from unfolding during transit.

Closing the Tonneau Cover

1. Release the securing straps/buckles.
2. Carefully unfold the front panel, then the middle panel, and finally the rear panel over the truck bed.

3. Ensure the cover is properly aligned with the bed rails.
4. Engage and tighten the rear security clamps to secure the cover in the closed position.

Proper operation ensures your cargo remains protected and can contribute to improved fuel efficiency.



Image: The aerodynamic design of the tonneau cover can improve gas mileage by up to 12%.

MAINTENANCE

To ensure the longevity and optimal performance of your oEdRo Tonneau Cover, follow these maintenance guidelines:

- **Cleaning:** Wash the tonneau cover regularly with mild soap and water. Use a soft brush or cloth. Rinse thoroughly and allow to air dry. Avoid harsh chemicals or abrasive cleaners.
- **UV Protection:** The cover is made from double-layer PVC with UV protection. However, applying a UV protectant spray designed for vinyl or tonneau covers can further extend its life and prevent fading.
- **Hardware Check:** Periodically inspect all clamps, hinges, and fasteners for tightness. Re-tighten as necessary to maintain a secure fit.

- **Weather Seal:** Check the weather strip and seals for any signs of wear or damage. Replace if necessary to maintain water resistance.
- **Storage:** If removing the cover for extended periods, clean it thoroughly, ensure it is completely dry, and store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cover does not fit properly or is loose.	Incorrect bed size measurement; clamps not tightened; cover not centered.	Verify truck bed dimensions. Re-center the cover. Ensure all front and rear clamps are securely tightened.
Water leakage into the truck bed.	Weather strip improperly installed or damaged; cover not fully sealed; tailgate gap.	Check weather strip for proper placement and condition. Ensure the cover is fully closed and all clamps are tight. Consider adding a tailgate seal if leakage persists from the tailgate area.
Difficulty folding or unfolding the cover.	Obstruction; cold weather affecting material flexibility.	Check for any debris or objects obstructing the folding mechanism. In cold weather, the material may be stiffer; allow it to warm slightly if possible.
Clamps do not secure properly.	Bed liner interference; clamps misaligned or damaged.	Inspect for bed liner interference and trim if necessary. Ensure clamps are correctly aligned with the bed rails. Contact support if clamps appear damaged.

SPECIFICATIONS

Brand	oEdRo
Model Name	Soft Tri-fold Bed Tonneau Cover
Item Model Number	MAOA-0038
Product Dimensions	179.98 x 63.98 x 11 cm (70.86 x 25.19 x 4.33 inches)
Item Weight	13.6 Kilograms (29.98 lbs)
Color	Black
Material	Double Layer PVC Fabric
Lock Type	Tailgate
Style	Soft Tri-fold

WARRANTY AND SUPPORT

oEdRo products are designed for durability and performance. For specific warranty information, please refer to the documentation included with your purchase or visit the official oEdRo website.

If you encounter any issues or have questions regarding your tonneau cover, please contact oEdRo customer support. If the included LED light is broken upon receipt, contact us via Amazon message for an exchange.

Contact Information: Refer to your purchase documentation or the oEdRo official website for the most current support contact details.