

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [WeatherTech](#) /

> [WeatherTech Custom Fit FloorLiners for Chevrolet Camaro \(2nd Row, Model 459022\) - Tan](#)

## WeatherTech 459022

# WeatherTech Custom Fit FloorLiners Instruction Manual

Model: 459022 | For Chevrolet Camaro (2nd Row)

## INTRODUCTION

This manual provides essential information for the installation, use, and maintenance of your WeatherTech Custom Fit FloorLiners, Model 459022, specifically designed for the 2nd row of select Chevrolet Camaro models from 2016 to 2024. These FloorLiners offer advanced vehicle floor protection through their precise fit and durable construction.

## PRODUCT FEATURES AND DESIGN

WeatherTech FloorLiners are engineered for comprehensive interior protection. They are laser-measured to ensure a precise, custom fit for your vehicle's floor, covering the front, back, and even extending up the sides of the footwell.

- **Material:** Constructed from a patented High-Density Tri-Extruded (HDTE) material, providing a rigid core for strength, surface friction to prevent shifting, and a tactile feel.
- **Advanced Surface Design:** Features channels that direct fluids and debris into a lower reservoir, minimizing movement of liquids while driving.
- **Retention System:** Designed to integrate with your vehicle's factory retention devices or WeatherTech's supplemental devices where applicable, ensuring the liners remain securely in place.

# FLOORLINER™

## Custom Fit for Total Coverage.

**LASER MEASURED** —●  
For a perfect fit.

**SURFACE CHANNELS** —●  
Redirects liquids and debris  
to trap messes.


**RIGID CORE** —●  
For strength and stability.

**Please confirm fitment to your vehicle's  
year, make, & model in Amazon Confirmed Fit.**

**Figure 1: FloorLiner Features.** This diagram highlights key design elements such as laser measurement for a perfect fit, surface channels for liquid redirection, and a rigid core for strength and stability.



**SURFACE CHANNELS**

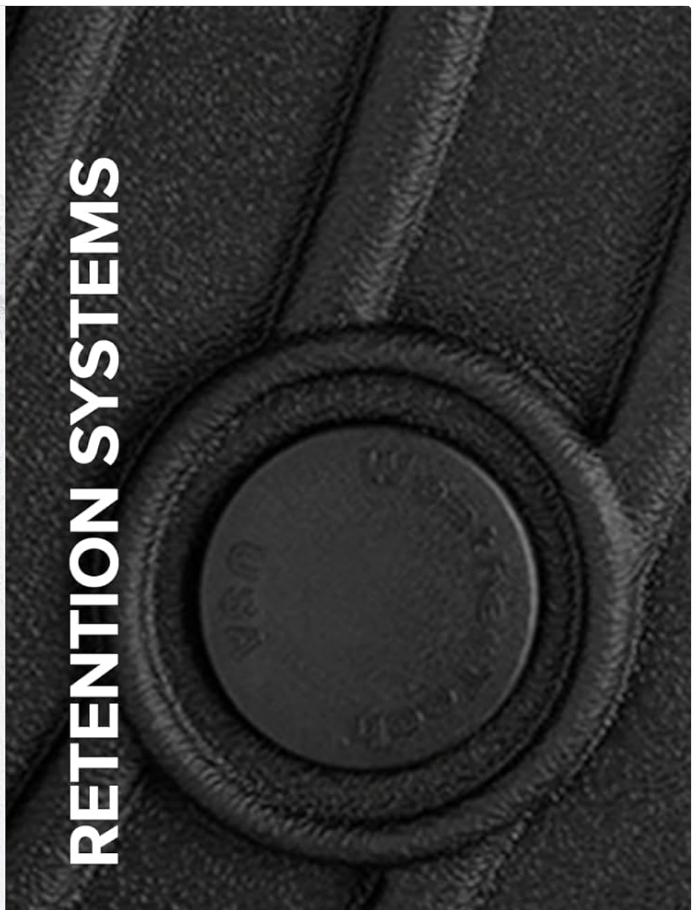

**RETENTION SYSTEMS**

## **INTERIOR PROTECTION.**

**Sturdy design redirects messes  
& keeps mat locked in place**

**Figure 2: Interior Protection Details.** A close-up view showing the surface channels designed to contain spills and debris, and the retention system that helps keep the mat securely positioned.

### **INSTALLATION INSTRUCTIONS**

Installing your WeatherTech FloorLiners is a straightforward process. Ensure your vehicle's original floor mats are removed before installing the FloorLiners.

- 1. Prepare the Area:** Remove any existing floor mats or liners from the 2nd-row footwell of your Chevrolet Camaro. Clean the carpeted area thoroughly to remove any dirt or debris.
- 2. Position the Liner:** Carefully place the WeatherTech FloorLiner into the designated footwell. Ensure it is properly aligned with the contours of your vehicle's floor.
- 3. Secure the Liner:** If your vehicle is equipped with factory retention hooks or posts, align the corresponding holes in the FloorLiner over these devices and press down firmly to secure. If supplemental retention devices are provided by WeatherTech, follow their specific instructions for installation.
- 4. Check Pedal Clearance (if applicable for front liners):** For front FloorLiners (not applicable for this 2nd-row product, but a

general safety reminder), always verify that the liner does not interfere with the full operation of the accelerator, brake, or clutch pedals. Ensure there is no obstruction to pedal movement.



**Figure 3: FloorLiner Installation.** This image shows hands carefully positioning a WeatherTech FloorLiner into the vehicle's footwell, demonstrating the ease of installation.

Your browser does not support the video tag.

**Video 1: WeatherTech FloorLiner Installation Guide.** This official video from WeatherTech demonstrates the proper steps for installing FloorLiners in a vehicle, including positioning and securing the mats. (Duration: 0:59)

## MAINTENANCE AND CLEANING

---

Maintaining your WeatherTech FloorLiners is simple, helping to preserve your vehicle's interior and the longevity of the liners.


1. **Regular Cleaning:** For light dirt and dust, simply remove the liners from the vehicle and shake them out.
2. **Deep Cleaning:** For heavier dirt, mud, or spills, remove the liners from the vehicle. Use a hose to rinse off loose debris. For stubborn grime, use a mild soap and water solution or a dedicated WeatherTech cleaner. Scrub gently with a soft brush if necessary.
3. **Drying:** Allow the FloorLiners to air dry completely before placing them back into your vehicle. Do not use harsh chemicals or abrasive cleaners, as these can damage the material.



# EASY MAINTENANCE

Cleaning & maintaining these floor mats is simple.

**Figure 4: Easy Maintenance.** A person is shown hosing down a FloorLiner outdoors, illustrating the simple cleaning process to remove dirt and debris.

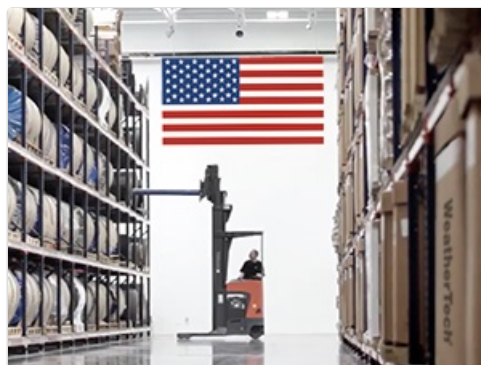

**Figure 5: Removing a Dirty FloorLiner.** This image demonstrates how easily a dirty FloorLiner can be removed from the vehicle for cleaning, preventing messes from spreading to the carpet.

## SPECIFICATIONS

Attribute	Detail
Brand	WeatherTech
Model Number	459022
Compatible Vehicles	2016-2024 Chevrolet Camaro (2nd Row)
Coverage Area	2nd Row (2-Piece Liner)
Color	Tan
Material	High-Density Tri-Extruded (HDTE)
Item Weight	30.5 pounds
Manufacturing Location	USA (with American made tooling)
Automotive Fit Type	Vehicle Specific Fit

## WARRANTY AND SUPPORT

---

For information regarding product warranty, returns, or customer support, please refer to the official WeatherTech website or contact their customer service directly. Specific warranty details are typically provided with your purchase documentation.

## IMPORTANT CONSIDERATIONS

---

- Always confirm fitment for your specific vehicle year, make, and model prior to purchase.
- Images provided in this manual are for illustrative purposes and may not always reflect the exact vehicle or part.
- Ensure FloorLiners are properly secured and do not obstruct pedal operation before driving.