

[Manuals.plus](#) /

> [JURMERRY](#) /

> JURMERRY Metal Canopy Bed Frame Four-Poster Bed with Headboard & Footboard Mattress Foundation Sturdy Slatted Structure No Box Spring Needed Easy Assembly, Full Black

JURMERRY FULL

JURMERRY Metal Canopy Bed Frame User Manual

Model: FULL

1. INTRODUCTION

Thank you for purchasing the JURMERRY Metal Canopy Bed Frame. This bed frame is designed to provide stable and stylish support for your mattress without the need for a box spring. Crafted from sturdy metal steel, it offers durability and a modern aesthetic to any bedroom. Please read this manual carefully before assembly and use to ensure proper setup and longevity of your product.



Figure 1: JURMERRY Metal Canopy Bed Frame (Full Black) in a bedroom setting, showcasing its four-poster design and elegant headboard and footboard.

2. SAFETY INFORMATION

- Keep all parts and packaging materials away from children and pets.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand or jump on the bed frame.
- Distribute weight evenly across the bed frame.
- Use the bed frame on a flat, level surface to prevent instability.
- Do not use power tools for assembly as this may overtighten screws and damage the frame.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
Headboard	Decorative top section of the bed.	1
Footboard	Decorative bottom section of the bed.	1
Side Rails	Long metal bars connecting headboard and footboard.	2
Support Legs	Central support legs for the frame.	(Varies by design, typically 3-6)
Slats	Metal bars forming the mattress foundation.	(Multiple)
Canopy Posts	Vertical posts for the canopy structure.	4
Canopy Rails	Horizontal bars for the canopy structure.	(Multiple)
Hardware Pack	Bolts, screws, washers, Allen wrench.	1

4. SETUP AND ASSEMBLY

Assembly typically requires two adults. Please follow these steps carefully. An Allen wrench is usually included; no power tools are recommended.



Figure 2: The bed frame components laid out, illustrating the main structural parts before assembly.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface (like a carpet) to prevent scratches. Refer to the "Package Contents" section to identify each part.
2. **Assemble Headboard and Footboard:** Attach any decorative elements or support legs to the headboard and footboard sections as per the specific instructions provided with your hardware pack.
3. **Connect Side Rails:** Attach the side rails to the headboard and footboard using the provided bolts and nuts. Ensure the connections are snug but do not fully tighten yet.
4. **Install Center Support Legs (if applicable):** If your frame includes central support legs, attach them to the designated crossbars or central rail.
5. **Insert Slats:** Place the metal slats into the designated slots or attach them to the side rails. Ensure they are evenly spaced and securely fastened. This forms the mattress foundation.
6. **Assemble Canopy Posts:** Attach the four vertical canopy posts to the corners of the bed frame.
7. **Attach Canopy Rails:** Connect the horizontal canopy rails to the top of the canopy posts, forming the upper canopy structure.
8. **Final Tightening:** Once all parts are assembled, go back and securely tighten all bolts and screws. Do not overtighten.



Figure 3: A detailed view of the sturdy slatted structure and central support legs, designed to provide robust mattress support.

5. OPERATING AND USAGE

The JURMERRY Metal Canopy Bed Frame is designed for use with a standard Full-size mattress. No box spring is required due to the sturdy slatted foundation.

- **Mattress Placement:** Carefully place your mattress directly onto the assembled metal slats. Ensure it is centered and sits securely within the frame.
- **Canopy Use:** The canopy structure can be used to hang decorative drapes, netting, or lights to personalize your bedroom aesthetic. Ensure any hung items do not exceed the frame's weight capacity and are securely attached.
- **Under-Bed Storage:** The frame provides over 12 inches of clearance underneath, offering ample space for storage boxes, shoes, or other items.



Figure 4: The assembled bed frame with a mattress and bedding, ready for use, highlighting the spacious under-bed area.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your bed frame.

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Tightening Bolts:** Periodically (e.g., every 3-6 months) check all bolts and screws and re-tighten them if necessary. This helps maintain the frame's stability and prevents squeaking.
- **Inspection:** Inspect the frame for any signs of wear, damage, or loose connections. Address any issues promptly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly/unstable.	Loose bolts or uneven floor.	Ensure all bolts are securely tightened. Move the bed to a level surface or use shims under legs if floor is uneven.

Problem	Possible Cause	Solution
Squeaking noises.	Loose connections or friction between metal parts.	Tighten all bolts. Apply a small amount of silicone spray or wax to connection points if squeaking persists.
Parts do not fit during assembly.	Incorrect orientation of parts or manufacturing defect.	Double-check the assembly instructions and part orientation. Do not force parts. Contact customer support if parts are defective.
Mattress slides on slats.	Smooth surface of slats.	Place a non-slip mat or rubber grippers between the mattress and the slats.

8. SPECIFICATIONS

Feature	Detail
Brand	JURMERRY
Model Number	FULL
Size	Full
Color	Black
Material	Metal Steel
Product Dimensions	77.95"L x 53.94"W x 75.6"H
Item Weight	56.4 pounds
Special Feature	No Box Spring Needed
Under-Bed Clearance	Over 12 inches
Assembly Required	Yes

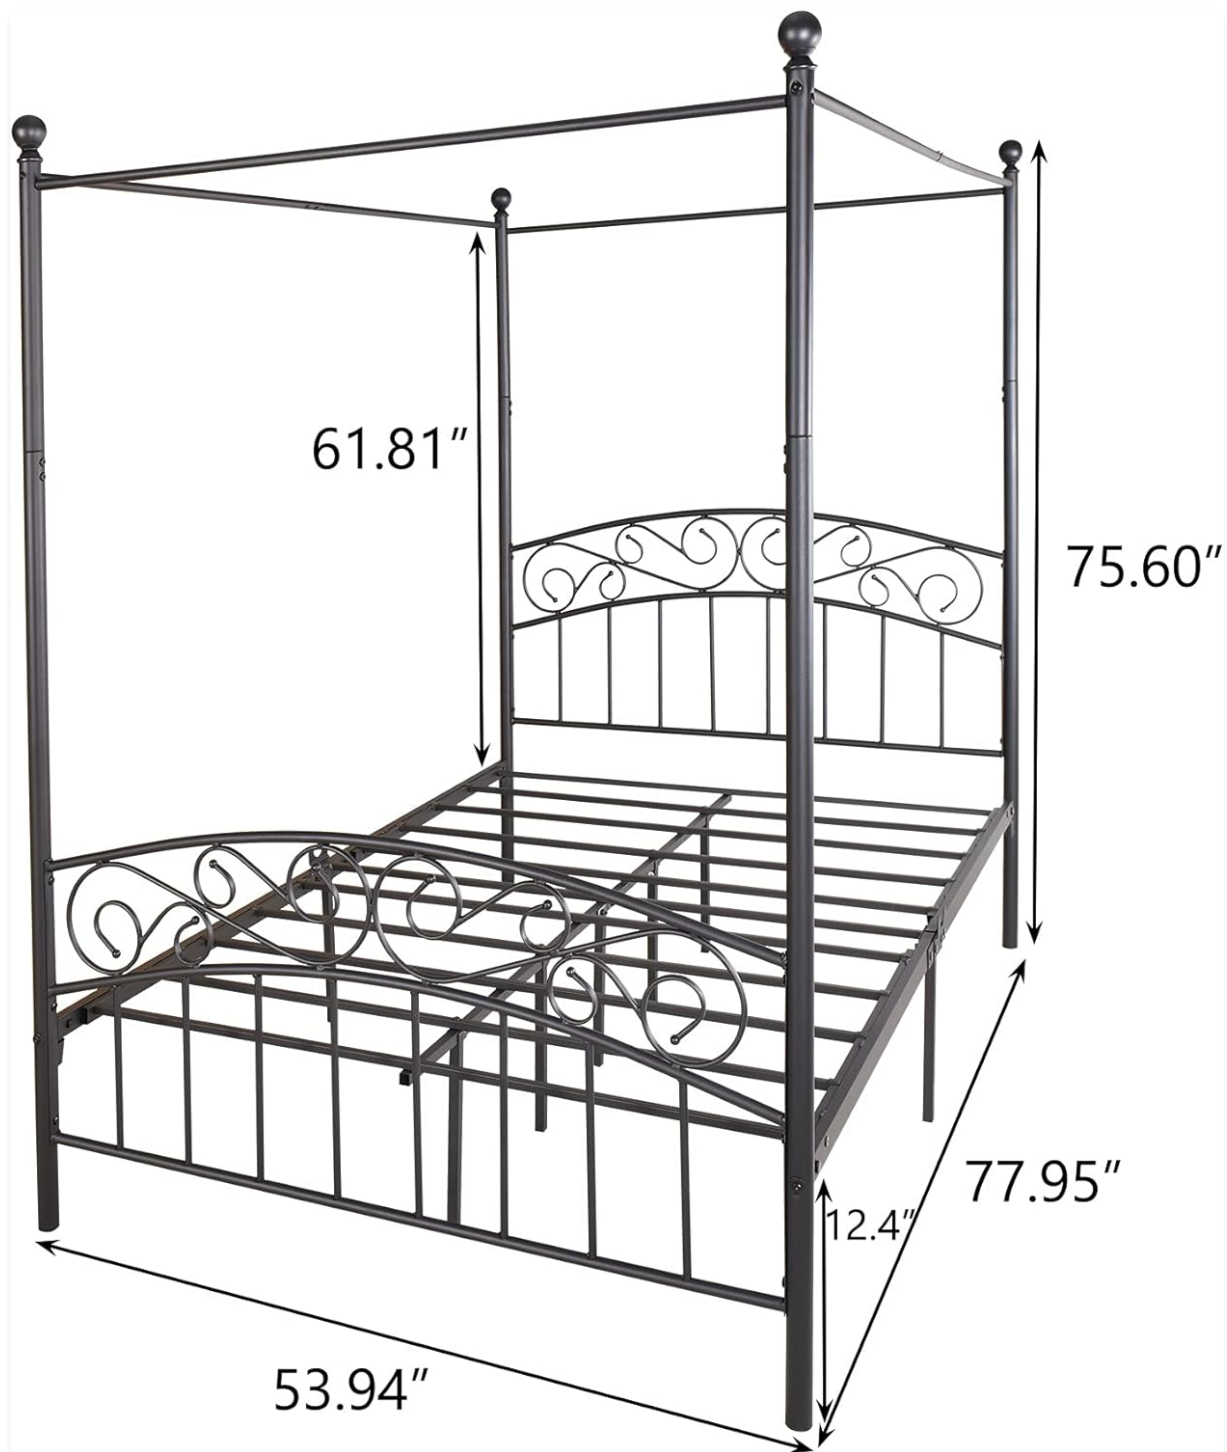


Figure 5: Dimensional diagram of the bed frame, indicating length, width, height, and under-bed clearance.

9. WARRANTY AND SUPPORT

JURMERRY is committed to providing high-quality products. For warranty information, missing parts, or technical support, please contact your retailer or visit the official JURMERRY store on Amazon:

[Visit the JURMERRY Store on Amazon](#)

Please have your model number (FULL) and purchase date ready when contacting support.

