

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Omix-Ada](#) /

› [Omix-Ada | 13510.44 | Straps, With Rivets, Pair | OE Reference: 68003647AB | Fits 2007-2010 Jeep Wrangler JKU 4Door](#)

Omix-Ada 13510.44

Instruction Manual: Omix-Ada Soft Top Stay Pad Straps with Rivets

Model: 13510.44

OE Reference: 68003647AB

PRODUCT OVERVIEW

The Omix-Ada 13510.44 Soft Top Stay Pad Strap Kit is designed as a direct replacement for the original equipment straps on 2007-2010 Jeep Wrangler JKU 4-Door models. This kit includes two durable straps and the necessary attaching rivets, providing a complete solution for servicing one soft top. These straps are crucial for maintaining the proper tension and position of your vehicle's folding soft top, ensuring its functionality and appearance.

Key features include:

- **Fitment:** Specifically designed for 2007-2010 Jeep Wrangler JKU 4-Door models.
- **OE Reference:** Replaces original equipment part number 68003647AB.
- **Complete Kit:** Includes two straps and all required rivets for installation.
- **Quality Standards:** Manufactured to meet or exceed original manufacturer specifications for reliability and durability.

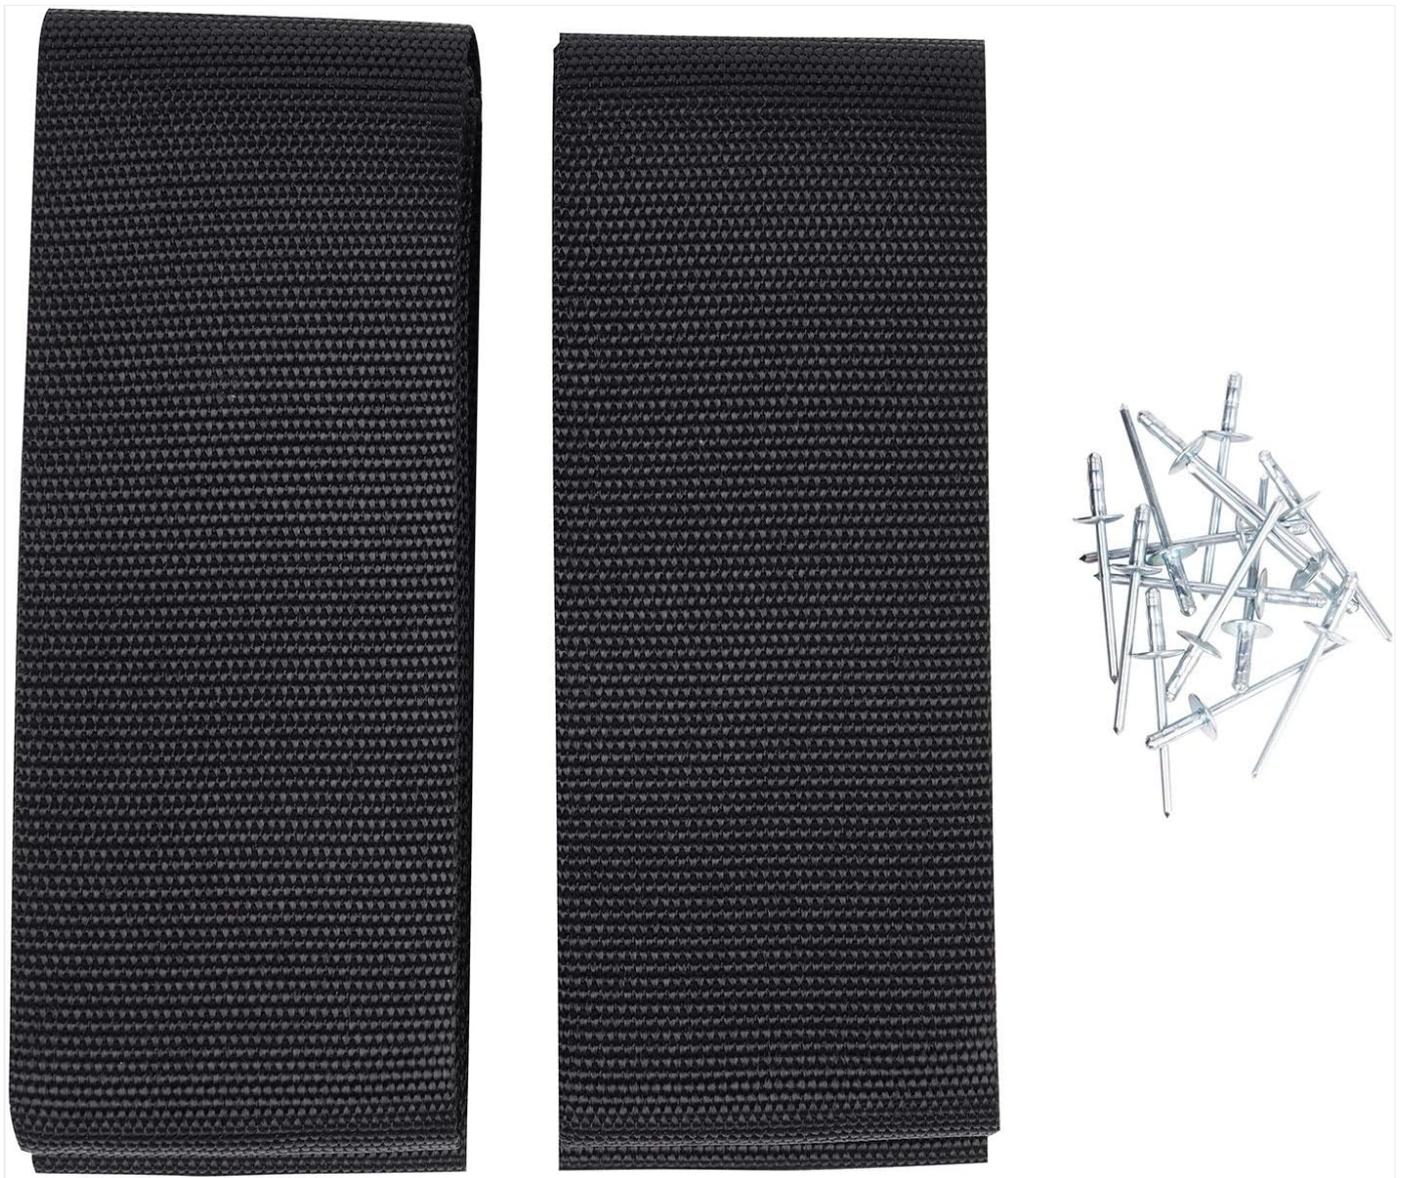


Image: The Omix-Ada 13510.44 kit, showing two black fabric straps and a collection of silver pop-rivets. These components are used to secure the soft top stay pads.

INSTALLATION INSTRUCTIONS

Installation of the Omix-Ada 13510.44 Soft Top Stay Pad Straps requires basic hand tools and a pop-rivet gun. It is recommended to perform this installation in a well-lit area with sufficient space.

Required Tools:

- Pop-rivet gun
- Drill with appropriate drill bit (to remove old rivets)
- Safety glasses
- Marker or pencil (optional)

Step-by-Step Guide:

1. **Prepare the Vehicle:** Ensure the soft top is in a position that allows easy access to the existing stay pad straps. It may be helpful to partially fold or secure the top to expose the attachment points.
2. **Remove Old Straps:**
 - Locate the existing soft top stay pad straps. These are typically secured with pop-rivets.

- Using a drill with a suitable drill bit, carefully drill out the center of each old pop-rivet. This will release the rivet and allow you to remove the old strap.
- Remove all old rivets and the worn or damaged straps. Dispose of them properly.

3. Position New Straps:

- Take one of the new Omix-Ada straps. The straps are designed to fit specific locations, so ensure you have the correct orientation.
- Align the pre-punched holes on the new strap with the existing holes on the soft top frame or attachment point. The holes are precisely sized for a perfect fit.
- It is often easiest to start securing the strap from the front attachment point and work your way towards the rear.

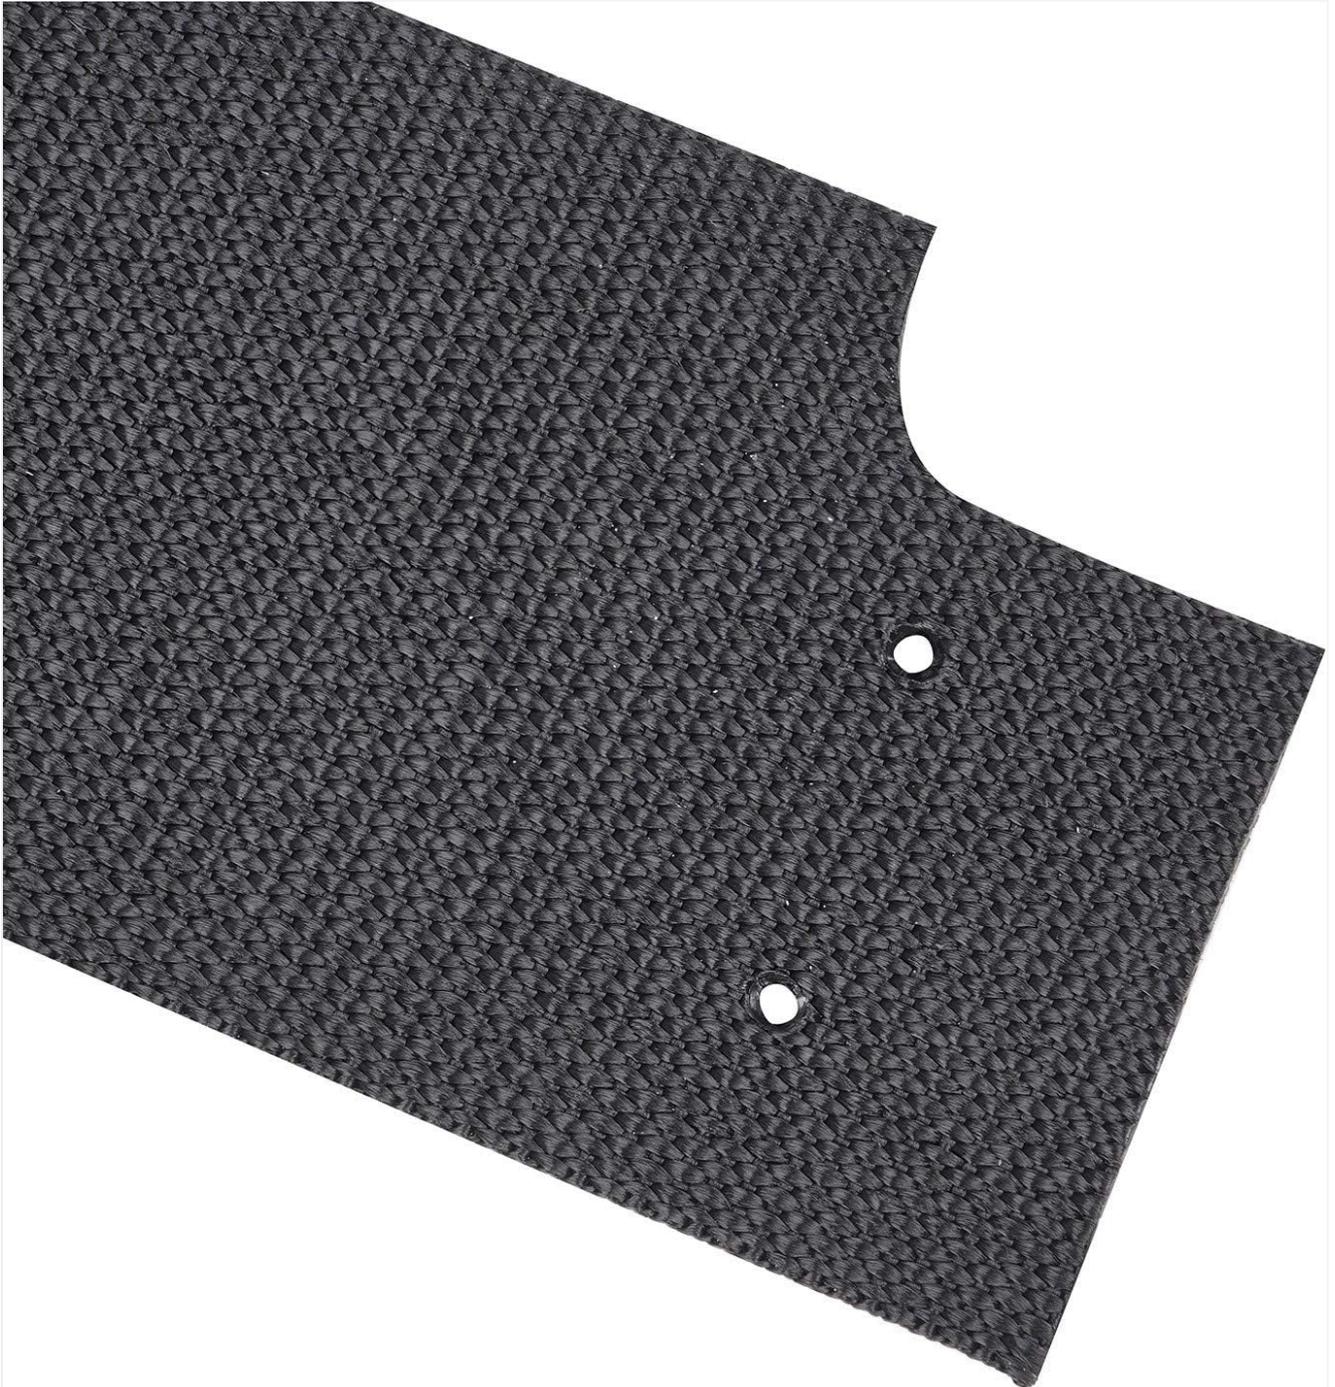


Image: A close-up view of the strap material, highlighting two pre-punched holes designed for rivet installation. These holes ensure precise alignment during mounting.

4. Install New Rivets:

- Insert one of the new rivets into a hole on the strap and through the corresponding hole on the vehicle's frame.
- Load the pop-rivet gun with the rivet.
- Firmly press the rivet gun against the rivet head and squeeze the handles until the rivet expands and secures the strap in place. You will hear a distinct "pop" sound when the rivet is properly set.
- Repeat this process for all remaining holes on the strap, ensuring each rivet is securely fastened.

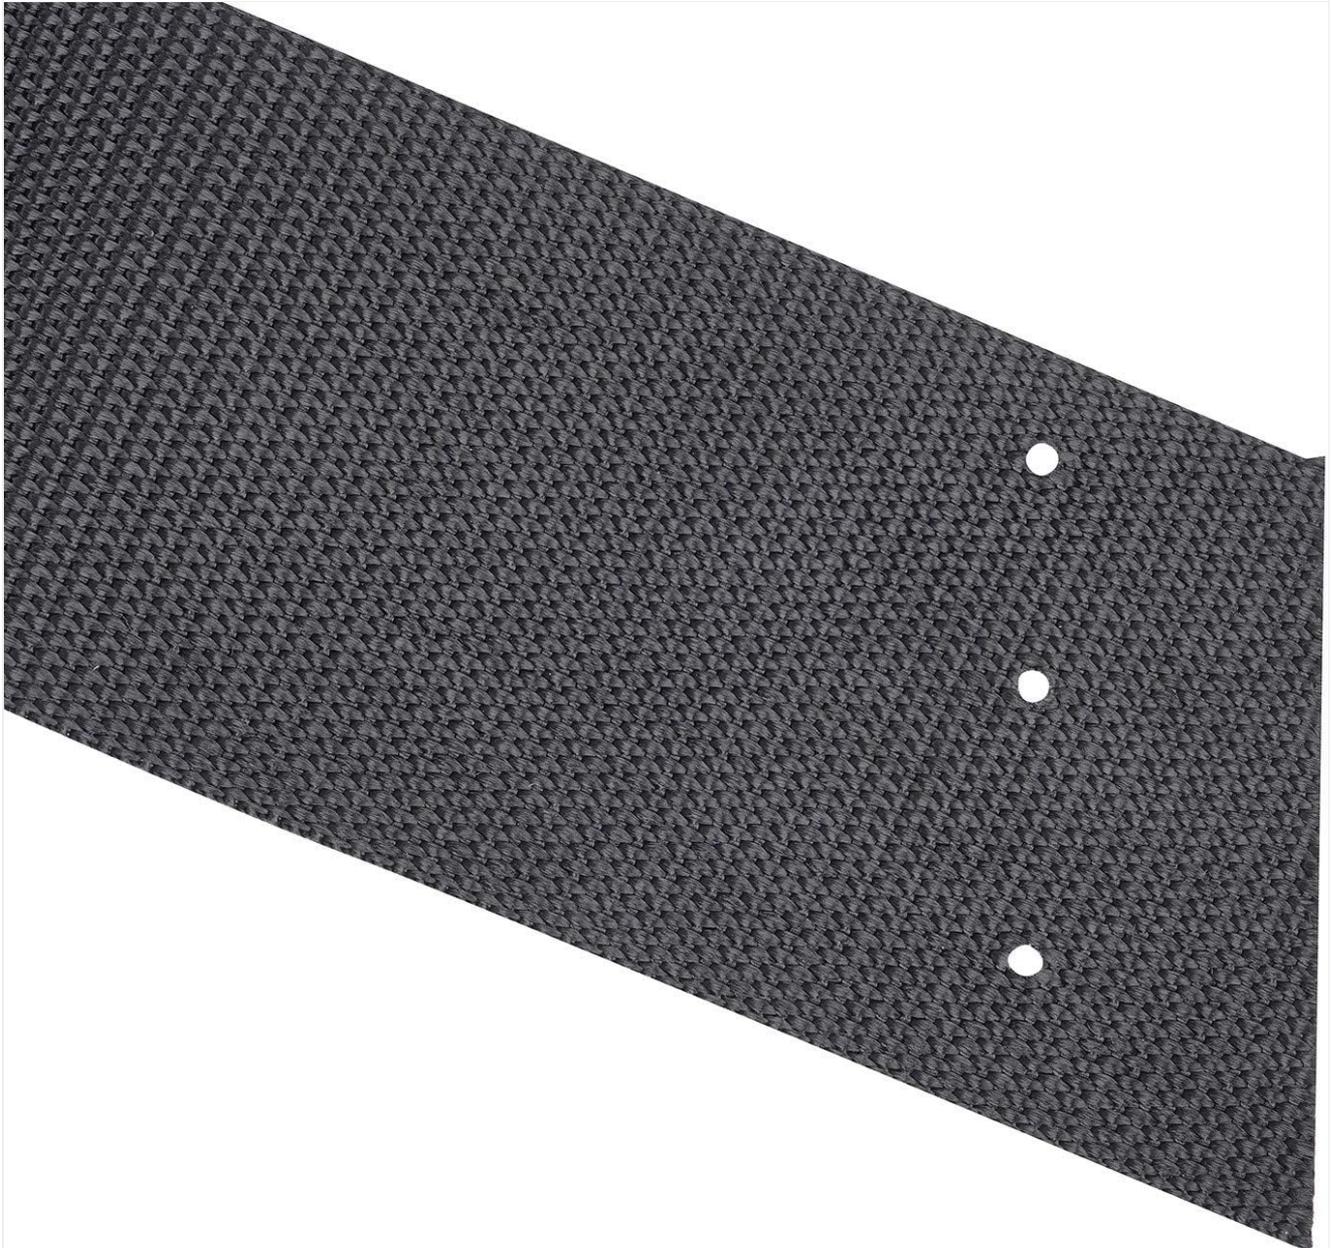


Image: A detailed view of the strap, showing three pre-punched holes. These holes are designed for secure attachment using the provided rivets.

5. **Install Second Strap:** Repeat steps 3 and 4 for the second soft top stay pad strap on the opposite side of the vehicle.
6. **Final Check:** Once both straps are installed, visually inspect all rivets to ensure they are properly seated and secure. Gently tug on the straps to confirm they are firmly attached and provide the necessary tension for the soft top.

FUNCTION AND OPERATION

The Omix-Ada 13510.44 straps serve a critical function in the proper operation and folding of your Jeep Wrangler JKU's soft top. These straps are designed to hold the soft top's stay pads in their correct position, preventing them from flapping or becoming misaligned during vehicle movement or when the top is partially folded. By maintaining proper tension and

alignment, they contribute to the overall stability and longevity of the soft top assembly.

While these straps do not have active "operation" in the traditional sense, their passive function is essential for:

- Securing the soft top's structural components.
- Reducing wear and tear on the soft top fabric by preventing excessive movement.
- Ensuring a neat and tidy appearance of the soft top when folded or in use.

MAINTENANCE

To ensure the longevity and continued performance of your Omix-Ada soft top stay pad straps, consider the following maintenance guidelines:

- **Regular Inspection:** Periodically inspect the straps and rivets for any signs of wear, fraying, or looseness. Check for corrosion on the rivets.
- **Cleaning:** Clean the straps with mild soap and water if they become dirty. Avoid harsh chemicals or abrasive cleaners that could damage the fabric. Rinse thoroughly and allow to air dry completely.
- **Rivet Integrity:** Ensure all rivets remain securely fastened. If a rivet appears loose or damaged, it should be replaced promptly to prevent further issues.
- **Avoid Over-Stressing:** Do not apply excessive force or tension to the straps beyond their intended purpose, as this can lead to premature wear or failure.

TROUBLESHOOTING

While the Omix-Ada 13510.44 straps are designed for durability, minor issues may arise. Here are some common troubleshooting scenarios:

Problem	Possible Cause	Solution
Strap appears loose or detached.	Rivet has failed or come loose.	Inspect the rivets. If a rivet is loose or missing, drill out any remaining parts and install a new rivet using a pop-rivet gun. Ensure proper alignment before riveting.
Strap is frayed or torn.	Excessive wear, abrasion, or damage from external factors.	The strap is damaged beyond repair. Replace the entire strap kit (Omix-Ada 13510.44) to ensure proper function and safety.
Soft top does not fold correctly or is misaligned.	Damaged or improperly installed straps, or issues with other soft top components.	Verify that both straps are securely installed and in good condition. If the straps are fine, inspect other soft top hardware for damage or misalignment. Consult a professional if the issue persists.

SPECIFICATIONS

Attribute	Detail
Brand	Omix-Ada
Model Number	13510.44
OE Part Number	68003647AB
Item Weight	7.2 ounces

Attribute	Detail
Product Dimensions	8 x 3 x 1.5 inches
Country of Origin	Taiwan
Exterior Finish	Machined
Compatibility	2007-2010 Jeep Wrangler JKU 4-Door
Kit Contents	2 Straps, Attaching Rivets

WARRANTY INFORMATION

The Omix-Ada 13510.44 Soft Top Stay Pad Straps are backed by a **Limited 5-Year Warranty**. This warranty covers defects in materials and workmanship under normal use and service. For specific terms, conditions, and claim procedures, please refer to the official Omix-Ada warranty documentation or contact Omix-Ada customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding the Omix-Ada 13510.44 Soft Top Stay Pad Straps, please contact Omix-Ada customer service. You can typically find contact information on the official Omix-Ada website or through your product retailer.

When contacting support, please have your product model number (13510.44) and any relevant purchase information readily available.

