



[Manuals.plus](#) /

› [AMBEE21](#) /

› AMBEE21 Golden Gate Beds Victorian Style Full Metal Platform Bed Frame Instruction Manual

## AMBEE21 A-180

# AMBEE21 Golden Gate Beds Victorian Style Full Metal Platform Bed Frame Instruction Manual

Model: A-180

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, use, and maintenance of your AMBEE21 Golden Gate Beds Victorian Style Full Metal Platform Bed Frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: Fully assembled AMBEE21 Golden Gate Beds Victorian Style Full Metal Platform Bed Frame in black finish.

## 2. SAFETY INFORMATION

---

- Exercise caution around sharp edges during assembly and handling.
- Do not exceed the maximum weight recommendation of 1000 pounds.
- Always assemble the bed frame strictly according to the provided instructions to prevent instability or collapse.
- Ensure all bolts and connections are securely tightened before use.
- Keep small parts away from children during assembly.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Headboard and Footboard sections

- Side Rails
- Support Legs
- Metal Slats
- Hardware Pack (bolts, washers, nuts, Allen wrench, spanner wrench)
- Assembly Instructions (this manual)

## 4. SETUP AND ASSEMBLY INSTRUCTIONS

---

Assembly typically requires two adults and approximately 60-90 minutes. Ensure you have adequate space and all tools provided.

### 4.1. Pre-Assembly Checklist

- Unpack all components and lay them out on a soft, clean surface to prevent scratches.
- Identify all parts using the included parts list.
- Ensure all necessary tools (Allen wrench, spanner wrench) are available.


### 4.2. Assembly Steps

1. **Attach Side Rails to Headboard:** Connect the side rails to the headboard using the specified bolts and washers. Hand-tighten initially.
2. **Attach Side Rails to Footboard:** Connect the other end of the side rails to the footboard, securing with bolts and washers.
3. **Install Center Support Legs:** Attach any central support legs to the main frame structure as indicated in the diagrams.
4. **Place Metal Slats:** Lay the metal slats across the frame. Ensure they are evenly spaced and securely fitted into their designated slots or attached with provided fasteners.
5. **Final Tightening:** Once all components are in place, systematically tighten all bolts using the provided tools. Do not overtighten.




Image 4.1: Product dimensions for the Full size bed frame: 75"L x 54"W x 48.5"H.

# OUR BED

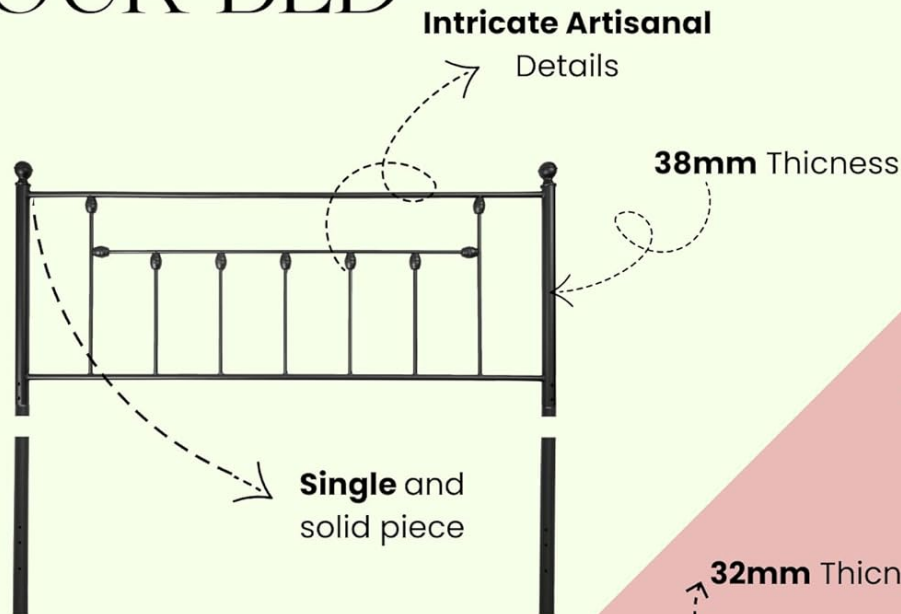

- Feel **rich, elegant,** and **durable** with **easy assembly**

- Feels **lightweight, cheap,** and **unstable** with complicated assembly

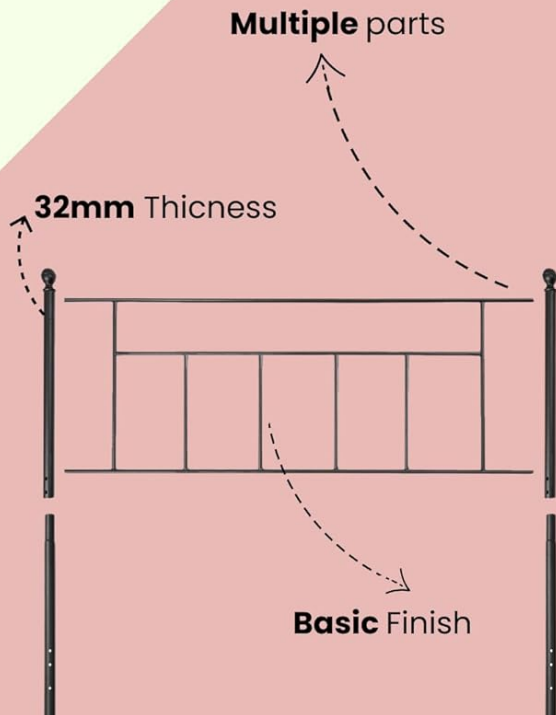

# OTHER BED

Image 4.2: Key features: No box spring required, easy assembly, and a 1000 lbs weight capacity.

## 4.3. Assembly Video Guide

For a visual guide on the assembly process, please refer to the official product video below:

Your browser does not support the video tag.

Video 4.1: Official Golden Gate Beds assembly guide for a similar metal bed frame, demonstrating the setup process.

## 5. USAGE AND OPERATING

This platform bed frame is designed to support your mattress directly, eliminating the need for a box spring. The sturdy metal slat system ensures proper mattress support and ventilation.

- Place your full-size mattress directly onto the metal slats.
- The elevated design provides ample under-bed storage space.
- Ensure the bed is placed on a level surface to maintain stability.



Image 5.1: The bed frame offers generous under-bed storage, ideal for organizing your bedroom.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Periodic Checks:** Periodically inspect all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Moving the Bed:** When moving the bed, lift it rather than dragging it to prevent damage to the frame or your flooring.



Image 6.1: Detail of the bed frame's protective foot pads and sturdy metal bars, designed for durability and floor protection.

## 7. TROUBLESHOOTING

---

### 7.1. Squeaking Noises

- **Check Connections:** The most common cause of squeaking is loose bolts. Re-tighten all bolts on the headboard, footboard, side rails, and support legs.
- **Lubrication:** Apply a small amount of lubricant (e.g., silicone spray or paraffin wax) to the joints where metal parts connect, if necessary.
- **Level Surface:** Ensure the bed frame is on a completely level surface. Uneven flooring can cause stress on the frame and lead to noise.

### 7.2. Mattress Sliding

- **Anti-Skid Pads:** Some mattresses may benefit from anti-skid pads placed between the mattress and the metal slats to prevent movement.

## 8. SPECIFICATIONS

---

Feature	Detail
Size	Full
Material	Iron
Product Dimensions (L x W x H)	75"L x 54"W x 48.5"H
Style	Victorian
Color	Black
Finish Type	Powder Coated
Maximum Weight Recommendation	1000 Pounds
Required Assembly	Yes
Model Number	A-180

## 9. WARRANTY AND SUPPORT

---

For any questions, missing parts, or support needs, please contact Golden Gate Beds customer service. Golden Gate Beds has over 60 years of experience in crafting quality beds and offers US-based customer support. Refer to your purchase documentation for specific warranty details and contact information.

