

[Manuals.plus](#) /

› [Ravinte](#) /

› Ravinte Cabinet Hardware Installation Template Kit User Manual

Ravinte 23

Ravinte Cabinet Hardware Installation Template Kit User Manual

Model: 23 | Brand: Ravinte

INTRODUCTION

The Ravinte Cabinet Door & Drawer Hardware Installation Template Kit is designed to simplify the precise installation of cabinet knobs and pulls. This comprehensive kit provides the necessary tools to achieve professional-looking results quickly and accurately, eliminating guesswork and potential errors during hardware mounting.

PRODUCT OVERVIEW

The kit includes the following components:

- (1) Door Drilling Template: Designed for vertical pull and knob installations on cabinet doors.
- (1) Drawer Drilling Template: Designed for horizontal pull and knob installations on cabinet drawers.
- (1) 3/16" Drill Bit: A high-quality drill bit suitable for creating pilot holes for hardware screws.



Figure 1: Contents of the Ravinte Cabinet Hardware Installation Template Kit.

SETUP

Before beginning installation, ensure your cabinet doors and drawers are clean and free of debris. Identify the type of hardware you will be installing (knob or pull) and its center-to-center measurement if it's a pull.

Identifying Template Measurements

The templates are clearly marked with common hole center distances: 3 inches (76mm), 3-3/4 inches (96mm), and 5 inches (128mm). Select the appropriate holes on the template that match your hardware's specifications.



Figure 2: Drawer template with marked hole center distances.

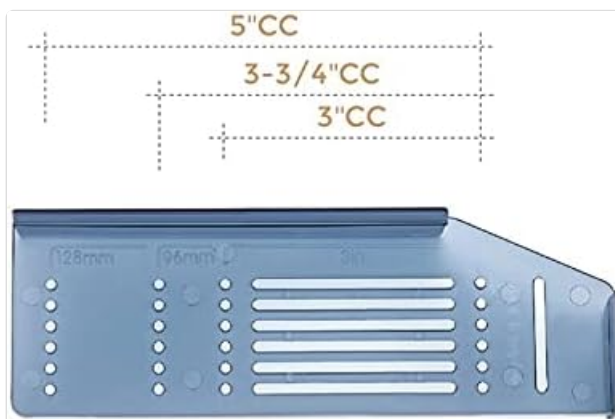


Figure 3: Door template with marked hole center distances.

OPERATING INSTRUCTIONS

For Cabinet Doors (Vertical Installation)

1. Select the door drilling template.
2. Align the template's bottom edge with the bottom edge of your cabinet door. The template features a lip that hooks over the door edge for stability.
3. Position the template to your desired height and horizontal placement on the door.
4. Using a pencil, mark the drill points through the selected holes on the template.
5. Carefully drill pilot holes at the marked points using the provided 3/16" drill bit. Ensure the drill is perpendicular to the cabinet surface.
6. Attach your cabinet knob or pull using the appropriate screws.



Figure 4: Door template in position for installing a cabinet pull.

For Cabinet Drawers (Horizontal Installation)

1. Select the drawer drilling template.
2. Determine the center of your drawer face. The template has a center line to assist with this.
3. Align the template's top edge with the top edge of your drawer face. The template features a lip that hooks over the drawer edge for stability.
4. Position the template horizontally so the center line aligns with the center of your drawer.
5. Using a pencil, mark the drill points through the selected holes on the template.
6. Carefully drill pilot holes at the marked points using the provided 3/16" drill bit. Ensure the drill is perpendicular to the cabinet surface.
7. Attach your cabinet knob or pull using the appropriate screws.



Figure 5: Drawer template in position for installing a cabinet knob.

MAINTENANCE

To ensure the longevity and accuracy of your Ravinte templates:

- Clean the templates with a soft, damp cloth after each use to remove pencil marks or dust.
- Store the templates in a dry, cool place, away from direct sunlight or extreme temperatures, to prevent warping or damage.
- Inspect the drill bit for sharpness and wear before each use. A dull drill bit can lead to splintering or inaccurate holes.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inaccurate drill holes	Template shifted during marking; incorrect holes selected.	Ensure template is firmly held against the cabinet. Double-check selected holes match hardware.
Wood splintering around hole	Dull drill bit; excessive pressure; drilling too fast.	Use a sharp drill bit (consider replacing the included one if issues persist, as some users have noted it may not be optimal). Apply steady, moderate pressure. Drill at a consistent, appropriate speed.

Problem	Possible Cause	Solution
Hardware not flush	Holes not drilled straight; screw length incorrect.	Ensure drill is perpendicular to the surface. Verify screw length is appropriate for cabinet thickness.

SPECIFICATIONS

- **Material:** Plastic
- **Color:** Black (Translucent)
- **Product Dimensions:** 128"L x 2.99"W (Overall template size, not individual component)
- **Included Components:** Door Drilling Template, Drawer Drilling Template, 3/16" Drill Bit
- **Compatible Hole Centers:** 3" (76mm), 3.75" (96mm), 5" (128mm)
- **Item Weight:** 4.6 Ounces
- **Model Number:** 23

WARRANTY & SUPPORT

Specific warranty information for this product is not provided within this manual. For detailed warranty terms, product support, or to contact customer service, please visit the official Ravinte website or refer to the product packaging for contact information. You can visit the Ravinte Store at: [Ravinte Store on Amazon](#)