

## Enthuze ENT200974

# Enthuze 4PC Smoked Window Visor Instruction Manual

Model: ENT200974

For 2015-2026 Ford F150, 2017-2026 Ford F-250 and F-350 Super Cab

[Introduction](#)   [Safety](#)   [Contents](#)   [Installation](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty](#)  
& [Support](#)

## 1. INTRODUCTION

---

Thank you for choosing the Enthuze 4PC Smoked Window Visors. These visors are designed to enhance your driving experience by allowing fresh air circulation while keeping rain and debris out. They are custom-made and precision-engineered for a perfect fit on your specific vehicle model. Please read this manual thoroughly before installation and use to ensure proper fitment and long-lasting performance.



*Image 1: Enthuze 4PC Smoked Window Visor installed on a truck, showcasing its sleek design and smoked finish.*

## 2. SAFETY INFORMATION

---

Always prioritize safety during installation and use. Improper installation can lead to product failure or damage to your vehicle. If you are unsure about any step, consult a professional installer.

- Ensure the vehicle is parked on a level surface with the engine off and parking brake engaged.
- Wear appropriate personal protective equipment, such as gloves and eye protection, during installation.
- Keep all components out of reach of children.
- Do not obstruct your view or the operation of any vehicle controls after installation.

## 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning installation:

- 4 x Enthuze Smoked Window Visors (2 front, 2 rear)
- Installation instructions (this manual)

- 3M automotive-grade adhesive (pre-applied or included separately)



Image 2: A set of four Enthuze window visors, typically included in the package.

## 4. INSTALLATION INSTRUCTIONS

---

These window visors are designed for in-channel installation, often supplemented with 3M automotive-grade adhesive for secure attachment. Follow these steps carefully:

1. **Clean the Window Channel:** Thoroughly clean the inside of your vehicle's window channels where the visors will be installed. Use rubbing alcohol or a mild automotive cleaner to remove any dirt, wax, or grease. Allow the surface to dry completely.
2. **Test Fit:** Before removing any adhesive backing, test fit each visor into its corresponding window channel to ensure proper alignment and fit. Identify the front and rear visors for each side of the vehicle.
3. **Prepare Adhesive (if applicable):** If your visors use separate adhesive strips, apply them according to the instructions provided with the adhesive. If adhesive is pre-applied, carefully peel back a small portion of the protective film from the 3M adhesive tape on the visor.
4. **Insert the Visor:** Carefully insert the visor into the window channel. Start by sliding one end into the channel, then gently flex the visor to guide the rest of it into place. **Do not worry about bending or twisting the window deflector to get it into the window channel because it is shatterproof.**
5. **Secure the Visor:** Once the visor is seated correctly in the channel, firmly press along the entire length of the visor to ensure the adhesive makes full contact with the window frame. If you only peeled back a portion of the adhesive film, slowly pull the remaining film while pressing the visor into place.
6. **Window Cycling:** After installation, close the window by intermittent movements, while gently pulling the window deflector away from the window. This helps the visor seat properly and prevents the window from catching on the visor. Repeat this process a few times.
7. **Allow Adhesive to Cure:** For optimal adhesion, avoid washing your vehicle or rolling down the windows for at least 24-48 hours after installation to allow the 3M adhesive to fully cure.

## Installation Videos

---

Your browser does not support the video tag.

Video 1: This video demonstrates the in-channel installation process for window deflectors, including tips on handling the shatterproof material and proper window cycling after installation. It highlights key steps for a secure fit.

Your browser does not support the video tag.

Video 2: An alternative guide to installing in-channel window deflectors, providing visual instructions and important considerations for a successful and durable installation.

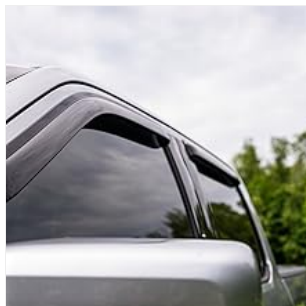


Image 3: A close-up view of the Enthuze window visor, showing its precise fit and smoked finish.

## 5. OPERATION AND BENEFITS

---

Once installed, your Enthuze window visors provide several benefits:

- **Fresh Air Circulation:** Enjoy fresh air even during light rain or snow by slightly opening your windows without water entering the cabin.
- **Reduced Wind Noise:** The aerodynamic design helps to reduce wind noise when windows are partially open.
- **Sun Glare Reduction:** The smoked tint helps to reduce sun glare, improving driving comfort.
- **Heat Reduction:** On hot days, you can leave your windows slightly ajar to allow heat to escape, keeping your vehicle cooler.



Image 4: Side profile of a truck featuring the installed window visors, demonstrating their aesthetic integration.

## 6. CARE AND MAINTENANCE

---

To ensure the longevity and appearance of your Enthuze window visors, follow these simple maintenance guidelines:

- **Cleaning:** Clean the visors regularly with mild soap and water. Use a soft cloth or sponge. Avoid abrasive cleaners or brushes that could scratch the surface.
- **Drying:** Dry the visors with a clean, soft towel to prevent water spots.
- **Avoid Harsh Chemicals:** Do not use strong chemical solvents, petroleum-based cleaners, or ammonia-based products, as these can damage the acrylic material and tint.
- **Adhesive Check:** Periodically check the adhesive bond, especially after extreme weather conditions. If any part seems loose, gently press it back into place.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your window visors, refer to the following common solutions:

- **Window Not Closing Properly:** This is often due to the window catching on the new visor. Perform the window cycling step (Section 4, Step 6) multiple times. If the issue persists, ensure the visor is fully seated in the channel and not obstructing the window's path. Sometimes, leaving the windows closed for 24-48 hours after installation helps the visor settle.
- **Visor Coming Loose:** Ensure the installation surface was thoroughly cleaned and dry before applying the adhesive. If the visor begins to detach, you may need to re-secure it with additional automotive-grade double-sided tape. Clean both surfaces thoroughly before re-application.
- **Excessive Wind Noise:** While visors are designed to reduce wind noise, improper installation can sometimes cause whistling. Check that all visors are flush with the window frame and securely seated in their channels.

## 8. PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Enthuze
Model Number	ENT200974
Compatibility	2015-2026 Ford F150, 2017-2026 Ford F-250 and F-350 Super Cab
Material	Reinforced Acrylic
Color/Finish	Smoked Black Tint

Feature	Detail
Attachment Method	In-channel with 3M Automotive-Grade Adhesive
UV Resistance	Yes
Scratch Resistance	Yes
Item Weight	1 kg
Country of Origin	China

## 9. WARRANTY AND CUSTOMER SUPPORT

---

For warranty information or customer support regarding your Enthuze 4PC Smoked Window Visors, please refer to the original purchase documentation or contact Enthuze Automotive Products directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.



© 2026 Enthuze Automotive Products. All rights reserved.

This manual is for informational purposes only. Enthuze is not responsible for damages resulting from improper installation or use.