

SARTODOORS 2555

SARTODOORS Lucia 2555 Matte White Sliding French Double Pocket Doors

MODEL: 2555 (84 x 80 INCHES) - INSTALLATION AND USER MANUAL

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your SARTODOORS Lucia 2555 Matte White Sliding French Double Pocket Doors. These doors, measuring 84 x 80 inches, feature clear glass with 3 lites and are crafted from solid pine wood with an eco-veneer finish, offering high durability and a modern aesthetic. The double pocket door system is designed to save space and provide a seamless look in your interior.

The complete set includes two door slabs (42x80 inches each), trims, pocket frames, door hangers, steel tracks, floor guides, stops, and round pocket pulls. All necessary hardware is provided. Please read all instructions carefully before beginning installation.



A pair of SARTODOORS Lucia 2555 Matte White Sliding French Double Pocket Doors, featuring clear glass with 3 lites, elegantly installed between a living room and another space, showcasing their space-saving design.

Your browser does not support the video tag.

This short video provides a 360-degree view of the Lucia 2555 Matte White Door Slab, highlighting its design and finish.

2. SETUP AND INSTALLATION

2.1. General Measurement Guidelines

Accurate measurements are essential for proper door installation. Always measure the width and height of your opening in three different points (top, middle, bottom for width; left, middle, right for height) and use the smallest value obtained. Ensure the opening is plumb and level, and account for any future flooring thickness.


- **Swing Doors:** Require a rough opening slightly larger than the door to accommodate jambs and shims. A typical

allowance is +2 inches for width and +2 inches for height.

- **Surface Sliding Barn Doors:** Must overlap the opening as they slide on the wall. For a single barn door, the approximate opening should be +2 inches for width and +1 inch for height. For double barn doors, two 36x80 inch leaves can cover a 72x80 inch opening. The track length should be approximately one door width.
- **Pocket Doors (Single and Double):** Require larger rough openings to house the door and cavity. For a single pocket door, the rough opening width is approximately 2 times the door width + 1 inch, and the rough opening height is approximately the door height + 4.5 inches. For double pocket doors, the rough opening width is approximately 145 inches by 84.5 inches for two 36x80 inch doors. Pocket cavities must be free of wiring and plumbing.
- **Closet Bypass (In-frame Sliding):** Measure the finished jamb-to-jamb width and floor-to-header height. Doors are typically slightly undersized to overlap. For a 72x80 inch closet opening, the width should be approximately 71 inches and the height approximately 80.5 to 81 inches for two 36x80 inch panels.
- **Bifold Systems:** Rely on finished opening dimensions. For a single 36x80 inch bifold door, the approximate opening is 36.5 inches by 82.88 inches. For a double 72x80 inch bifold door, the approximate opening is 73 inches.

Your browser does not support the video tag.

This video provides a comprehensive guide on how to accurately measure door openings for various door types, including swing, barn, and pocket doors, ensuring proper fit and installation.

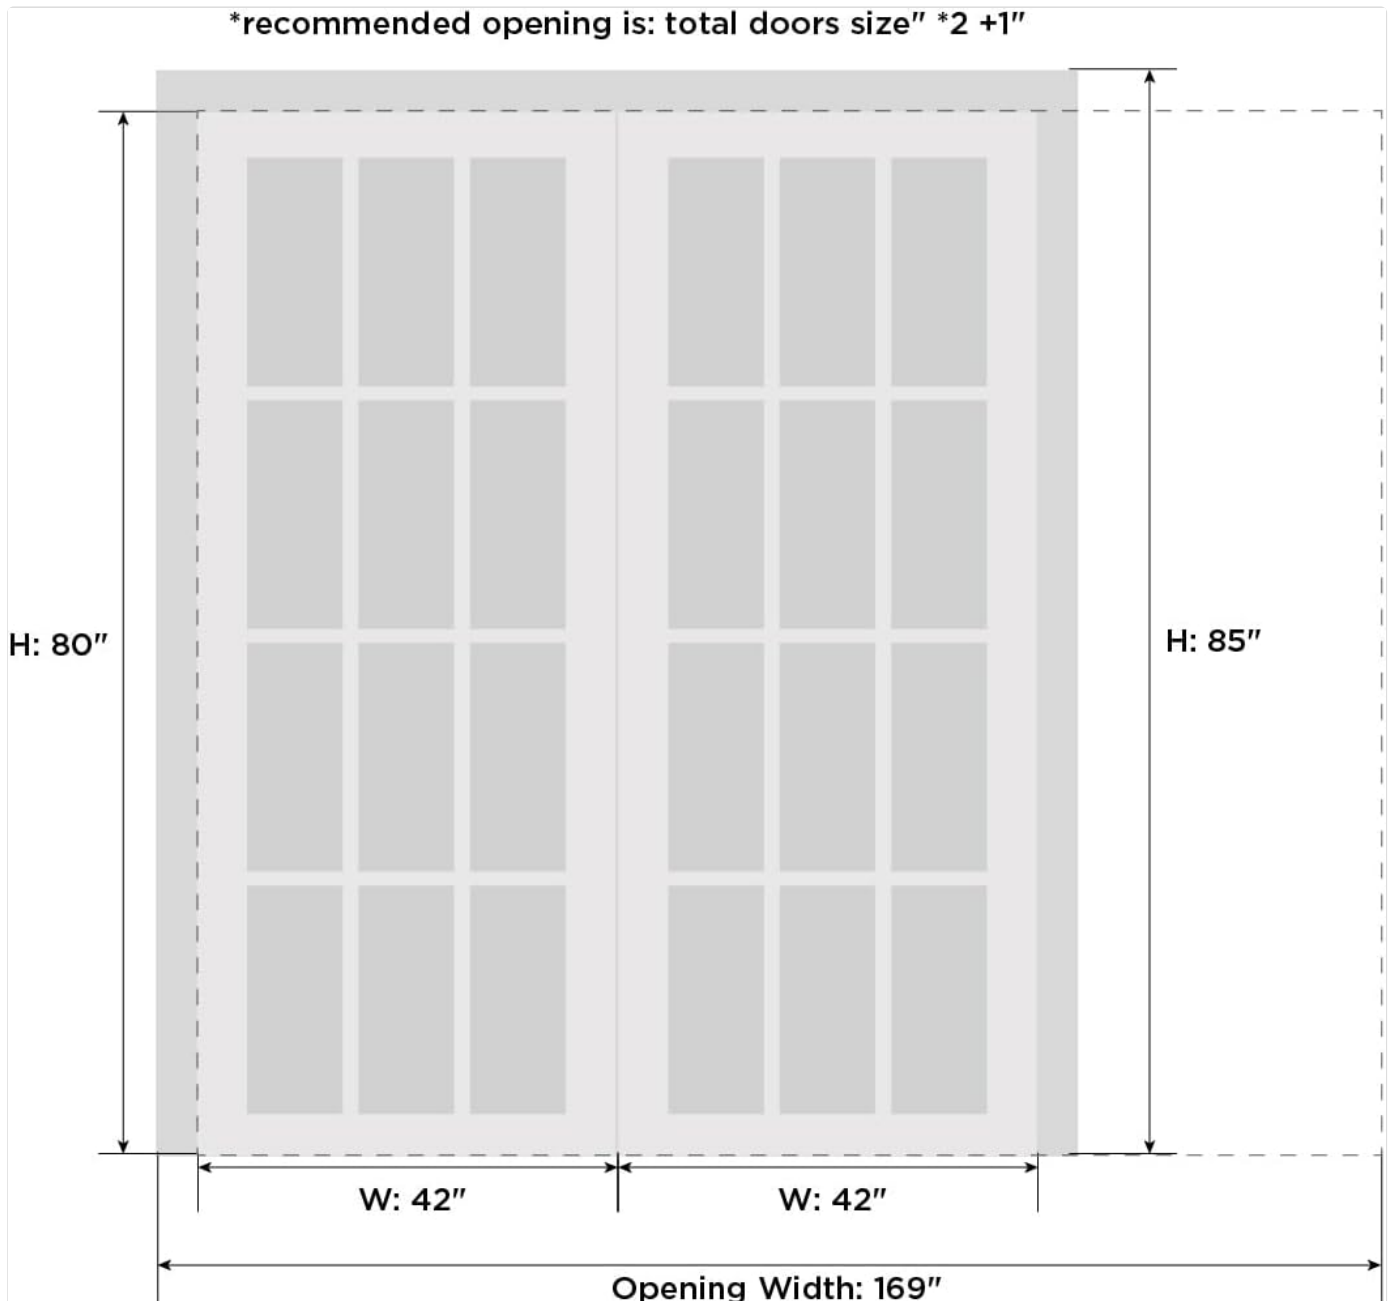

This diagram provides crucial measurements for installing double pocket doors. It specifies a recommended opening width of 169 inches for

two 42x80 inch doors, with the door height at 80 inches and the overall opening height at 85 inches.

2.2. Components Overview

Your SARTODOORS double pocket door kit includes the following:

- 2 Door Slabs (42x80 inches each) with Clear Glass (3 Lites)
- Trims
- Pocket Frames
- Door Hangers
- Steel Tracks
- Floor Guides
- Stops
- Round Pocket Pulls
- Screws and Fasteners

An optional soft-close kit can be purchased separately for enhanced functionality.



SET | INCLUDES:

2X




This image displays the comprehensive set of components included with your SARTODOORS double pocket door kit, featuring two pocket frames, door hangers, steel tracks, floor guides, stops, and various screws necessary for a complete installation.

SCHEME | OF DOOR:

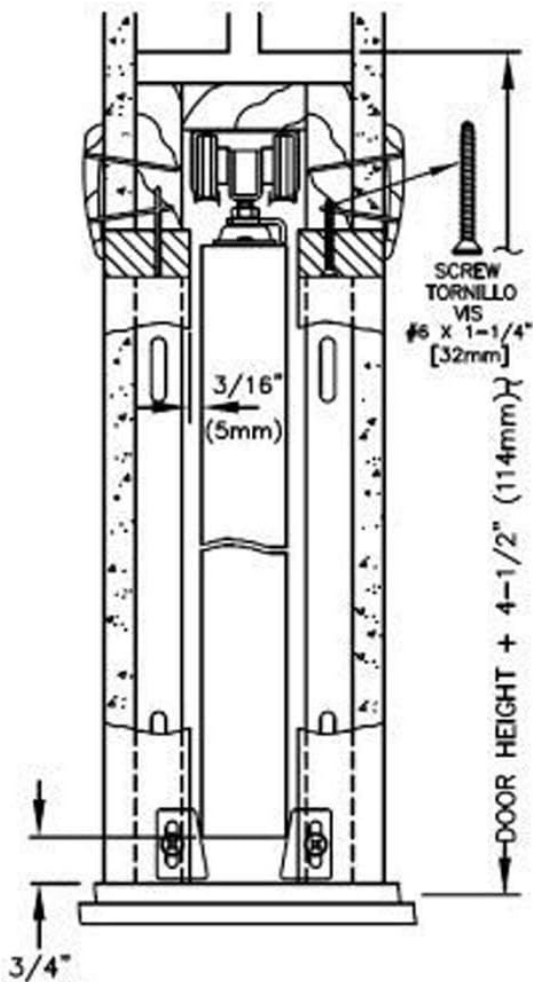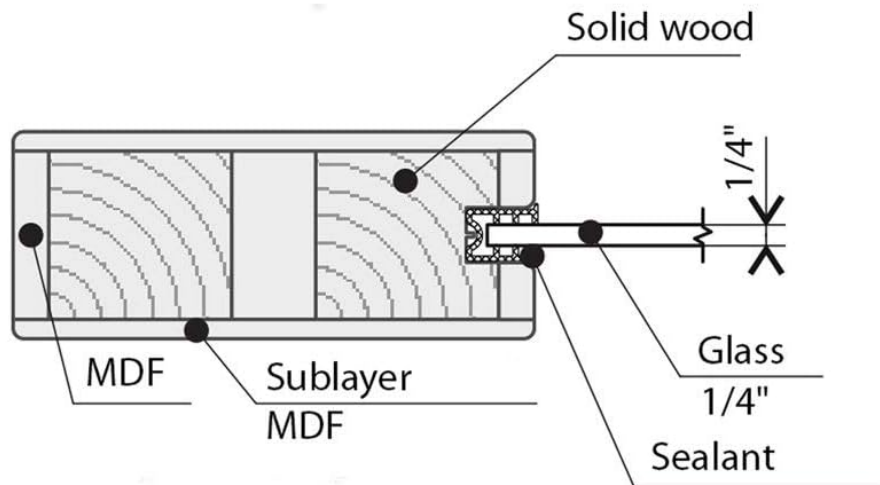

Box track

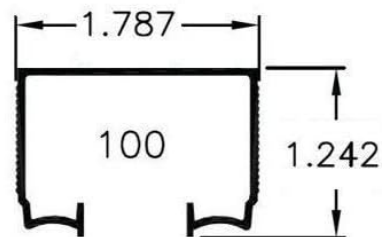

A detailed technical diagram illustrating the internal construction of a SARTODOORS door panel, highlighting the use of solid wood, MDF, and 1/4 inch clear glass secured with sealant. A cross-section of the box track is also shown with dimensions.

2.3. Detailed Installation Steps

Follow these steps for installing your double pocket doors. Refer to the video for visual guidance.


1. **Unpacking:** Carefully unbox the door slabs and hardware. Inspect all components for any damage.
2. **Door Trimming:** If necessary, trim the door slabs. Trimming is typically done partially on one side to accommodate the bottom guide. The door can be trimmed by 3/4 inch on the top, bottom, left, and right sides.

3. **Lock Hole Installation:** Use a router and appropriate templates to cut the holes for the pocket door pulls and the lock mechanism on the door slabs. Ensure precise measurements for a flush fit.
4. **Pocket Frame Assembly:** Assemble the pocket frames according to the manufacturer's instructions. This typically involves connecting the wooden and metal components that form the cavity for the doors.
5. **Installing the Pocket Frame:** Secure the assembled pocket frame into your rough opening. Ensure it is plumb, level, and securely fastened to the floor and header. Solid framing must be left on both sides for proper shimming.
6. **Soft-Close Mechanism Installation (Optional):** If using a soft-close kit, install the mechanism into the track system as per its specific instructions.
7. **Door Guide Installation:** Install the floor guides at the bottom of the opening. The door slabs come without pre-drilled holes for hardware, so a groove for the floor guide will need to be drilled into the bottom edge of each door.
8. **Hanging the Doors:** Attach the door hangers to the top of each door slab. Carefully lift and hang the doors onto the steel tracks within the pocket frame.
9. **Adjustments:** Adjust the door height and alignment using the hanger mechanisms. Ensure the doors slide smoothly and close properly. If using soft-close, adjust the mechanism for optimal performance.
10. **Connecting Plate for Double Pocket:** For double pocket doors, install the connecting plate to ensure both doors operate in unison and meet correctly in the center.
11. **Final Checks:** Verify that both doors slide freely into and out of the pocket, meet correctly, and that all hardware is securely fastened.

Your browser does not support the video tag.

This detailed video demonstrates the step-by-step process of installing SARTODOORS Double Pocket Doors, covering everything from preparing the door slabs to final adjustments.

The 1500 Frame installs quickly into standard 2x4 timber or steel framed walls with professional results.

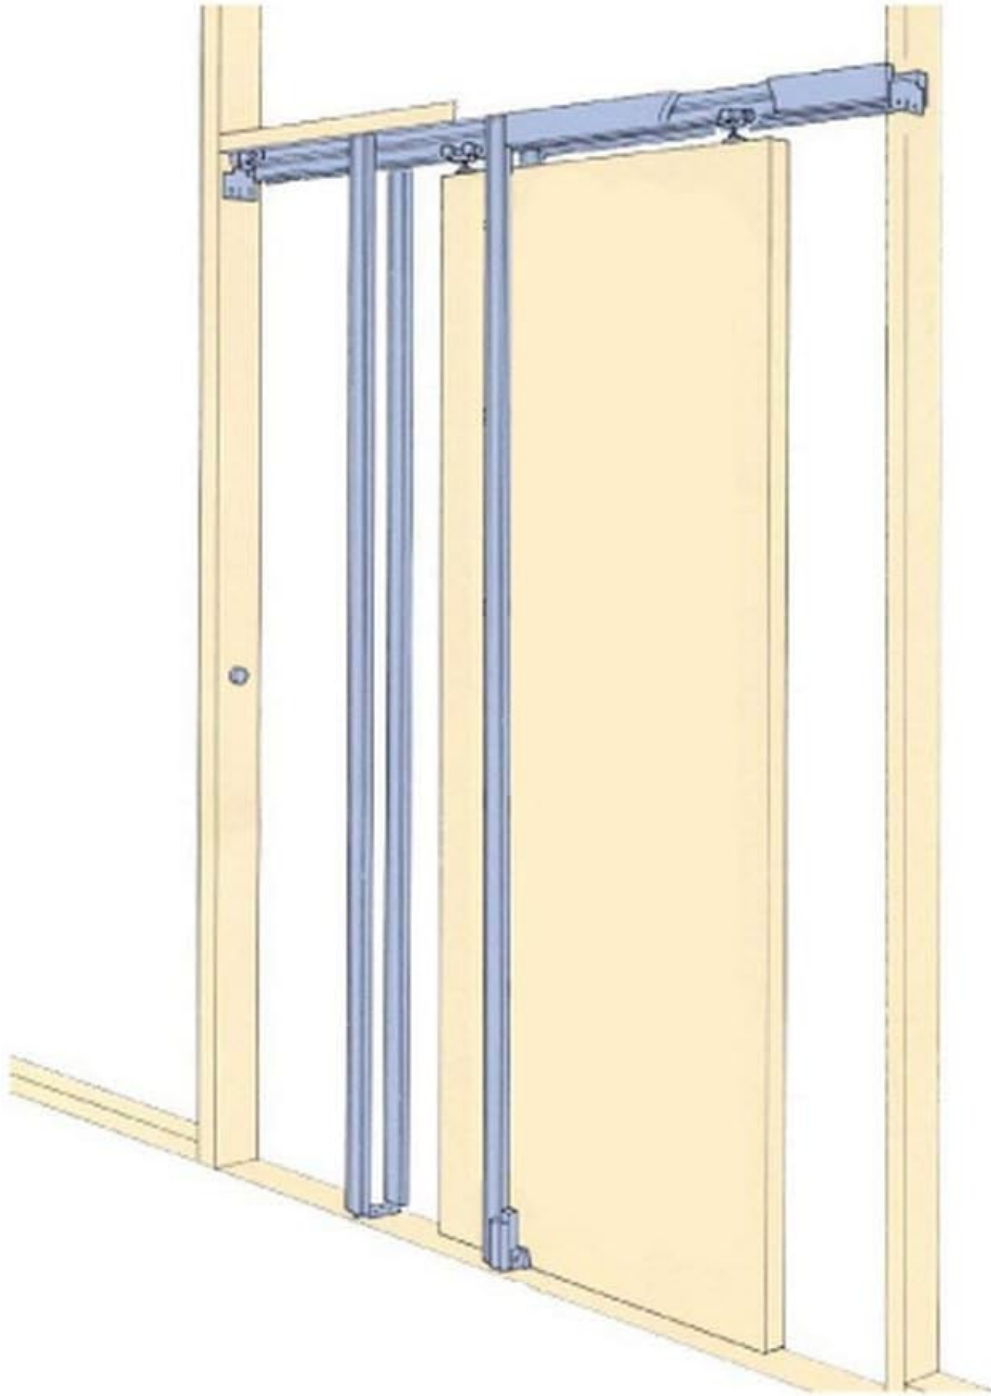

This diagram illustrates how the pocket door frame is integrated into a wall structure, demonstrating its quick installation into standard 2x4 timber or steel framed walls for a seamless finish.



1500 Series Pocket Door Frame Features

Heavy-gauge galvanized steel wrapped Split Studs resist rust in damp locations and provide a rigid pocket structure. Drywall is fastened to split studs using standard drywall screws, steel wrapping prevents screw penetration into pocket.



Self adjusting split stud floor brackets compensate automatically for floor or wall movement. Floor Bracket fingers slide into Split Stud grooves and allow the pocket structure to float minimizing wall warpage or door binding problems.



An illustration highlighting the key features of the Johnson Hardware 1500 Series Pocket Door Frame. It shows heavy-gauge galvanized steel wrapped split studs for rigidity and self-adjusting split stud floor brackets designed to compensate for floor or wall movement, minimizing warpage.

3. OPERATING YOUR DOORS

Your SARTODOORS pocket doors are designed for smooth and quiet operation. To open the doors, gently pull the recessed pocket pulls until the doors emerge from the wall cavity. To close, push the doors back into the center until they meet. If equipped with the optional soft-close mechanism, the doors will gently slow down and pull themselves into the fully closed or open position, preventing slamming and ensuring a quiet experience.

4. MAINTENANCE AND CARE

Proper maintenance will ensure the longevity and beauty of your SARTODOORS. The doors are made of solid pine wood with an eco-veneer finish, known for its cleanability and durability.

- **Cleaning the Door Surface:** For the matte white finish, use a soft, damp cloth with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the eco-veneer. Wipe dry immediately to prevent water spots.
- **Cleaning the Glass:** Use a standard glass cleaner and a lint-free cloth for the clear glass lites.
- **Track Maintenance:** Periodically inspect the tracks for any debris or dust accumulation. Clean the tracks with a vacuum cleaner or a damp cloth to ensure smooth sliding. Lubricate the rollers and tracks with a silicone-based lubricant if you notice any friction or noise during operation.
- **Hardware Inspection:** Check all screws and fasteners periodically to ensure they are tight. Tighten any loose hardware to maintain stability and proper function.

5. TROUBLESHOOTING

If you encounter any issues with your SARTODOORS, refer to the following common troubleshooting tips:

- **Doors are difficult to slide or are sticking:**
 - Check the tracks for debris or obstructions. Clean thoroughly.
 - Ensure the rollers are clean and lubricated.
 - Verify that the door is properly aligned and not rubbing against the frame or other door. Adjust hangers if necessary.
- **Doors do not close completely or leave a gap:**
 - Check the alignment of the doors and the connecting plate.
 - If using a soft-close mechanism, ensure it is correctly adjusted and not preventing full closure.
- **Doors are noisy during operation:**
 - Lubricate the rollers and tracks with a silicone-based lubricant.
 - Inspect for any loose hardware or components that might be rattling. Tighten as needed.
- **Pocket pulls are loose:**
 - Tighten the screws securing the pocket pulls.

6. SPECIFICATIONS

Feature	Detail
Brand	SARTODOORS
Model Number	2555
Door Type	Sliding French Double Pocket Doors
Size (Overall)	84 x 80 inches (2 x 42x80 inch slabs)
Glass Type	Clear Glass, 3 Lites per slab
Color	Matte White
Material	Solid Pine Wood core with Eco-Veneer coating
Door Slab Thickness	40 mm (1 9/16 inches)
Style	Modern
Item Weight	150 Pounds

Assembly Required	Yes
Sound Attenuation	30% noise reduction over standard doors (due to 40mm solid wood construction)

7. WARRANTY INFORMATION

For specific warranty details regarding your SARTODOORS Lucia 2555 Double Pocket Doors, please refer to the documentation included with your purchase or contact SARTODOORS directly. Warranty terms typically cover manufacturing defects and material quality.

8. CUSTOMER SUPPORT

Should you require further assistance with installation, operation, or have any questions about your SARTODOORS product, please contact our customer support team. You can also visit the official SARTODOORS store for more information and resources.

SARTODOORS Store: [Visit the SARTODOORS Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

