



Manuals.plus /

› VECELO /

› VECELO Full Size Victorian Style Metal Bed Frame Instruction Manual KHD-BTJ-MBF08-BLK

VECELO KHD-BTJ-MBF08-BLK

VECELO Full Size Victorian Style Metal Bed Frame Instruction Manual

Model: KHD-BTJ-MBF08-BLK

1. INTRODUCTION

Thank you for choosing the VECELO Full Size Victorian Style Metal Bed Frame. This manual provides essential information for the safe assembly, proper use, and maintenance of your new bed frame. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

This bed frame features a robust square solid metal steel structure for enhanced stability and to prevent mattress movement. Its design incorporates a welded platform structure and fixed screws to minimize noise and provide stable mattress support. Additionally, it offers 12.6 inches of under-bed storage space. The assembly process is designed to be straightforward, with all necessary parts and tools included. No box spring is required for use with this bed frame.



Figure 1: Fully assembled VECELO Full Size Victorian Style Metal Bed Frame.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the assembly area. Small parts may pose a choking hazard.
- Assemble the bed frame on a soft, clean surface (e.g., carpet or cardboard) to prevent scratches.
- Ensure all bolts and screws are securely tightened before using the bed frame. Periodically check and re-tighten fasteners.
- Do not over-tighten screws, as this may damage the threads or components.
- Do not stand or jump on the bed frame.
- Use the bed frame only on a level surface.
- The mattress is not included with this bed frame.
- If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

3. PACKAGE CONTENTS AND PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or defective, please contact VECELO customer service.

Included in Package:

- 1 x Bed Frame (disassembled components)
- 1 x Instruction Manual
- 1 x Assembly Kit (includes screws, bolts, and Allen wrench)

Typical Components (may vary slightly):

- Headboard Panel
- Footboard Panel
- Side Rails (Left and Right)
- Center Support Bar(s)
- Support Legs (for center bar and frame corners)
- Metal Slats
- Hardware (bolts, washers, nuts, Allen wrench)



Figure 2: Disassembled bed frame components.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your VECELO Full Size Victorian Style Metal Bed Frame. It is recommended to have two people for assembly.

1. Step 1: Prepare the Area

Clear a spacious area for assembly. Lay out all parts on a soft surface to prevent damage. Identify all components and hardware using the parts list.

2. Step 2: Attach Side Rails to Headboard

Align the side rails (A) with the pre-drilled holes on the headboard (B). Insert bolts and hand-tighten them. Do not fully tighten yet.

3. Step 3: Attach Side Rails to Footboard

Align the other end of the side rails (A) with the pre-drilled holes on the footboard (C). Insert bolts and hand-tighten them. Ensure the frame is stable before proceeding.



Figure 3: Detail of the headboard design.

4. Step 4: Install Center Support Bar(s)

Attach the center support bar(s) (D) to the designated brackets on the side rails. Secure with bolts and hand-tighten. Ensure any adjustable support legs are attached to the center bar(s).

5. Step 5: Place Metal Slats

Carefully place the metal slats (E) across the side rails, ensuring they fit into the designated slots or attach securely with provided fasteners. The welded steel slats are designed to reduce noise.



Figure 4: Detail of the metal slat support system.

6. **Step 6: Final Tightening**

Once all components are in place and hand-tightened, use the provided Allen wrench to fully tighten all bolts and screws. Work systematically to ensure even tightening. Do not overtighten.

7. **Step 7: Attach Anti-Scratch Rubber Mats (if applicable)**

If included, attach the anti-scratch rubber mats to the bottom of the bed frame legs to protect your flooring.

Your VECELO Full Size Victorian Style Metal Bed Frame is now assembled. Ensure it is stable and all connections are secure before placing your mattress.

5. OPERATING INSTRUCTIONS

Mattress Placement

Place your full-size mattress directly onto the metal slats. No box spring is required. The robust slat system provides ample support for your mattress.

Weight Capacity

The VECELO Full Size Victorian Style Metal Bed Frame has a maximum load capacity of **660 lbs** (including

mattress and occupants). Do not exceed this weight limit to ensure safety and product longevity.

Under-Bed Storage

The bed frame provides approximately 12.6 inches of clearance underneath, offering convenient space for storage bins or other items. Ensure stored items do not obstruct the bed frame's stability or airflow.

6. MAINTENANCE

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Regular Inspection:** Periodically (e.g., every 3-6 months) check all bolts and screws to ensure they remain tight. Re-tighten any loose fasteners to maintain stability and prevent squeaking.
- **Movement:** When moving the bed frame, lift it rather than dragging it to prevent damage to the frame or your flooring.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is squeaking	Loose bolts or connections.	Check and tighten all bolts and screws. Ensure the bed frame is on a level surface.
Bed frame feels unstable or wobbly	Incomplete assembly or loose fasteners. Uneven floor.	Verify all assembly steps are completed correctly. Tighten all bolts. Move the bed to a level surface or use shims under legs if necessary.
Mattress slides on the frame	Lack of friction between mattress and slats.	Consider placing a non-slip mat between the mattress and the slats.
Missing parts or damaged components	Shipping error or manufacturing defect.	Do not attempt to assemble. Contact VEGELO customer support immediately for replacement parts.

8. SPECIFICATIONS

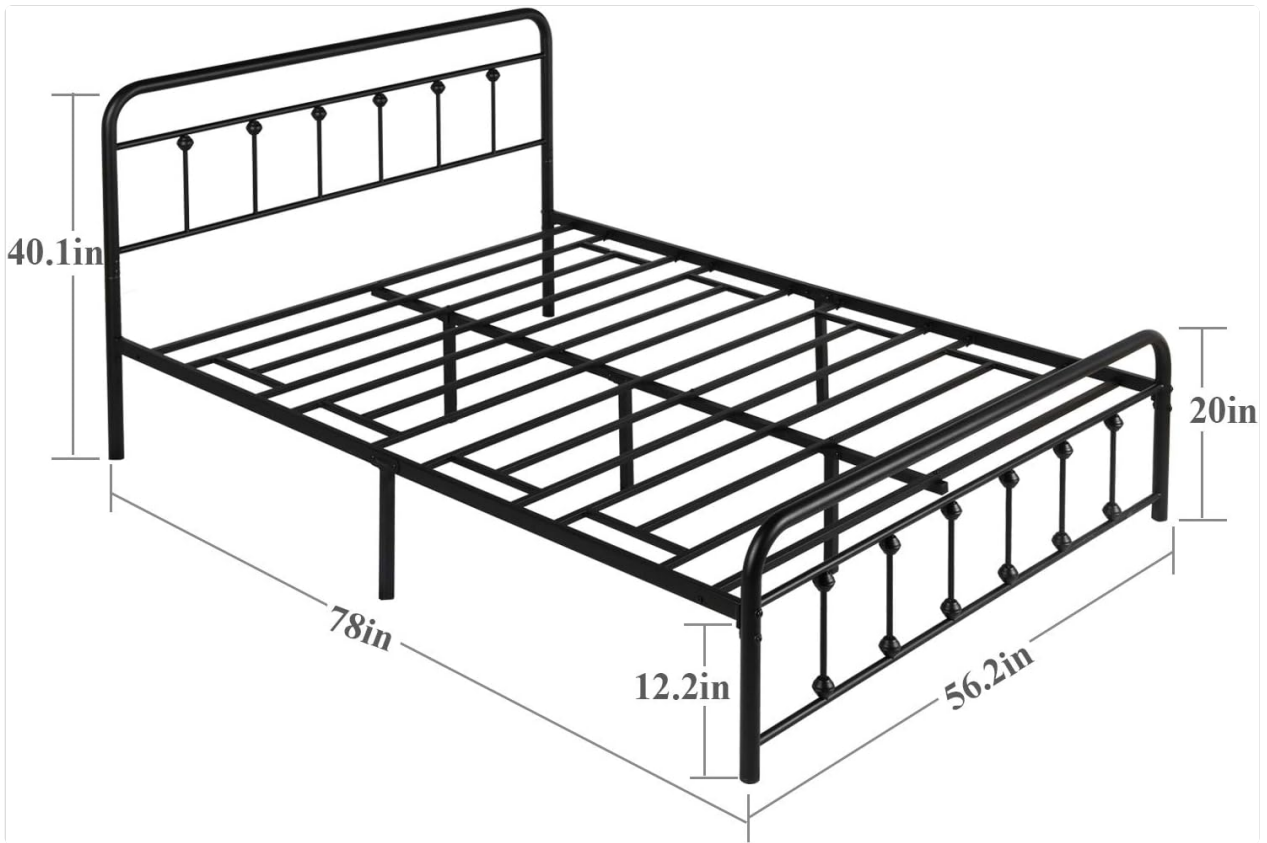


Figure 5: Bed frame dimensions.

Feature	Detail
Model Number	KHD-BTJ-MBF08-BLK
Size	Full
Product Dimensions (L x W x H)	78.2" x 54.6" x 43.3"
Color	Dark Black
Material	Steel
Finish Type	Steel
Item Weight	40.9 pounds
Max Load Capacity	660 lbs
Under-Bed Clearance	12.6 inches
Assembly Required	Yes
Box Spring Required	No

9. WARRANTY AND SUPPORT

Warranty Information

VECELO provides a one-year warranty for this product, covering manufacturing defects and offering free

replacement parts. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, concerns, missing parts, or warranty claims, please contact VECELO customer service. Refer to your purchase documentation or the VECELO official website for contact details.