

mDesign 11932MDHSEU

mDesign Modern Wall Shelf - Model 11932MDHSEU Instruction Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your mDesign Modern Wall Shelf, Model 11932MDHSEU. Please read these instructions carefully before beginning installation to ensure proper setup and safe use of the product. Retain this manual for future reference.

2. PRODUCT OVERVIEW

The mDesign Modern Wall Shelf is a versatile storage and display solution designed for various rooms, including bathrooms, kitchens, offices, and bedrooms. It features a durable wood shelf supported by robust metal brackets, offering a blend of functionality and modern aesthetic.



This image displays two assembled mDesign Modern Wall Shelves, showcasing their dark wood finish and sturdy black metal support brackets. The shelves are designed for functional and decorative storage.

3. SAFETY INFORMATION

- Always ensure the wall surface is suitable for mounting and can support the weight of the shelf and its contents.
- Use appropriate tools and follow all installation steps carefully.
- Do not overload the shelf. Distribute weight evenly.
- Keep small parts and hardware away from children to prevent choking hazards.
- If unsure about installation, consult a qualified professional.

4. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Wood Shelf(ves)
- Metal Support Bracket(s)
- Mounting Hardware (Screws, Wall Anchors)



HARDWARE INCLUDED

The necessary hardware for mounting the mDesign Modern Wall Shelf is shown, including multiple screws and corresponding wall anchors to ensure secure installation.

5. SETUP AND INSTALLATION


Tools Required (Not Included):

- Pencil
- Measuring Tape
- Level
- Drill with appropriate drill bit for wall anchors
- Screwdriver (Phillips head recommended)

Installation Steps:

1. **Determine Placement:** Choose a suitable location on your wall. Consider the shelf's dimensions and the items you plan to place on it.
2. **Mark Mounting Points:** Hold one metal bracket against the wall at your desired height. Use a pencil to mark the positions for the screw holes. Repeat for the second bracket, ensuring it is level with the first and spaced correctly for the wood shelf.

3. **Drill Pilot Holes:** Using a drill with an appropriate drill bit (typically slightly smaller than the wall anchor diameter), drill pilot holes at the marked points.
4. **Insert Wall Anchors:** Gently tap the plastic wall anchors into the pilot holes until they are flush with the wall surface.
5. **Attach Brackets:** Align the metal brackets with the installed wall anchors. Insert the screws through the bracket holes and tighten them into the wall anchors using a screwdriver until the brackets are securely fastened to the wall. Do not overtighten.
6. **Place Wood Shelf:** Carefully place the wood shelf onto the installed metal brackets. Ensure it sits securely and is stable.

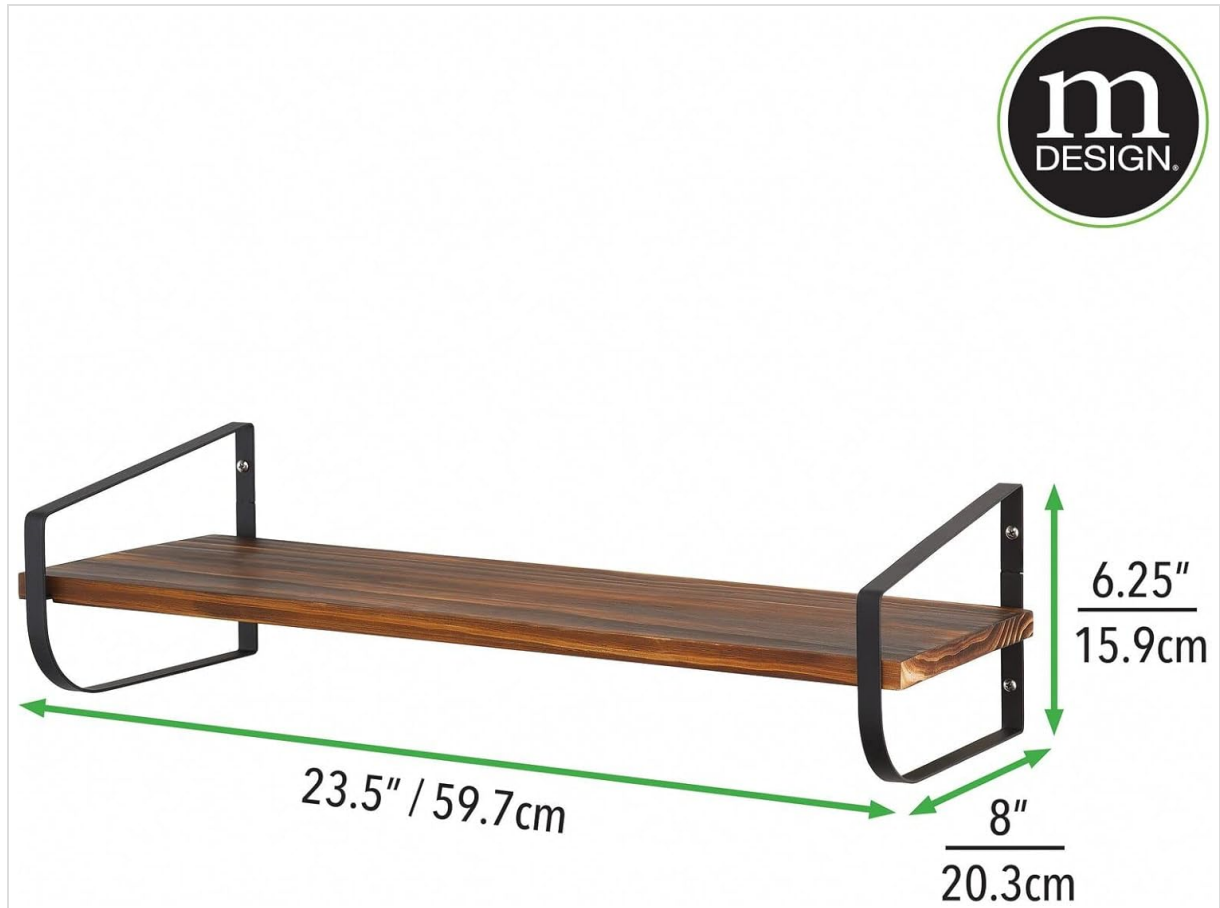

This diagram illustrates the precise measurements of the mDesign Modern Wall Shelf, indicating a length of 23.5 inches (59.7 cm), a depth of 8 inches (20.3 cm), and a total height of 6.25 inches (15.9 cm) including the brackets.



This image demonstrates two mDesign Modern Wall Shelves mounted on a wall, showcasing their versatility for displaying decorative items such as potted plants, books, and personal accessories in a home setting.

6. OPERATING INSTRUCTIONS

Once installed, the mDesign Modern Wall Shelf is ready for use. Place items on the shelf, ensuring that the weight is distributed evenly to maintain stability. Avoid placing excessively heavy objects on the shelf to prevent damage to the shelf or the wall.

7. MAINTENANCE AND CARE

- **Cleaning:** Wipe the wood shelf with a soft, damp cloth. For the metal brackets, use a dry or slightly damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Inspection:** Periodically check the mounting screws and brackets to ensure they remain tight and secure. Retighten if necessary.
- **Avoid Moisture:** While suitable for bathrooms, prolonged exposure to excessive moisture should be avoided to preserve the wood and metal finishes.

8. TROUBLESHOOTING

- **Shelf is not level:** Ensure that the pilot holes were drilled accurately and that the brackets are aligned correctly. Use a level during installation to prevent this issue. If already installed, carefully loosen screws, adjust, and retighten.
- **Shelf feels unstable:** Verify that the wall anchors are fully inserted and the screws are tightened securely into the anchors. Ensure the wall material is appropriate for the chosen mounting hardware.
- **Damage to wall during installation:** If the wall material crumbles or the anchor does not hold, you may need to use different anchors suitable for your specific wall type or choose a different mounting location.



9. SPECIFICATIONS

Brand	mDesign
Model Number	11932MDHSEU
Product Dimensions	59.69 x 20.07 x 15.49 cm (approximately 23.5 x 8 x 6.25 inches)
Product Weight	1.65 kg
Number of Shelves	1 (per unit)
Style	Modern
Assembly Required	No (installation of brackets required)

10. WARRANTY AND SUPPORT

For information regarding warranty coverage or product support, please refer to the retailer's return policy or contact mDesign customer service directly through their official website or the platform where the product was purchased. Please have your model number (11932MDHSEU) and purchase details available.

Related Documents - 11932MDHSEU

	<p>MDESIGN Dining Chair Assembly Instructions (Models ML-1497, ML-1498, ML-1499)</p> <p>Step-by-step assembly guide for MDESIGN dining chairs, models ML-1497, ML-1498, and ML-1499. Includes detailed textual descriptions of assembly steps and parts.</p>
	<p>Maximizing Small Closet Space: Expert Tips for Organization</p> <p>Discover practical and SEO-friendly tips for organizing small closets, including space-saving hangers, vertical folding, and smart storage solutions to maximize your wardrobe space.</p>

