



[Manuals.plus](#) /

> [AMBEE21](#) /

> AMBEE21 Golden Gate Beds Queen Metal Bed Frame (Model 1451) Instruction Manual

## AMBEE21 1451

# AMBEE21 Golden Gate Beds Queen Metal Bed Frame (Model 1451) Instruction Manual

Model: 1451 | Brand: AMBEE21

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your AMBEE21 Golden Gate Beds Queen Metal Bed Frame, Model 1451. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: Assembled Queen Metal Bed Frame

The Golden Gate Beds Queen Metal Bed Frame features a Victorian vintage style with a wrought iron headboard and footboard, designed for use without a box spring. It offers sturdy support for your mattress and includes under-bed storage space.

## 2. SAFETY INFORMATION

---

- **Weight Capacity:** Do not exceed the maximum weight capacity of 1000 lbs for this Queen size bed frame.
- **Assembly:** Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- **Noise:** While designed to minimize noise, some noise may occur during use.
- **Height:** Be cautious when approaching the bed frame as it is high off the ground (11 inches clearance) to avoid potential injury.
- **Children:** Keep small parts away from children during assembly.

### 3. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. The bed frame ships in one compact box with labeled parts.

- Headboard components
- Footboard components
- Side rails
- Support slats
- Center support legs
- Hardware pack (bolts, washers, nuts, Allen wrench, spanner wrench)
- Instruction manual

### 4. ASSEMBLY INSTRUCTIONS

---

Assembly is designed to be straightforward. It is recommended to assemble the bed frame with two people.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the provided labels.
2. **Attach Headboard and Footboard:** Connect the headboard and footboard sections according to the diagrams in your specific instruction sheet. Ensure all connections are finger-tightened initially.
3. **Connect Side Rails:** Attach the side rails to the assembled headboard and footboard. Align the holes and insert the bolts.
4. **Install Support Slats:** Place the metal support slats across the side rails. Ensure they are evenly spaced and securely fastened to the side rails.
5. **Attach Center Support Legs:** Install any required center support legs to the frame or slats as indicated in the instructions.
6. **Final Tightening:** Once all components are in place, use the provided Allen wrench and spanner wrench to fully tighten all bolts and fasteners. Do not overtighten.



Figure 2: Key features including Easy Assembly and Weight Capacity

## 5. USAGE GUIDELINES

- **Mattress Compatibility:** This bed frame is designed for a Queen size mattress and does not require a box spring. The sturdy metal platform provides direct support.
- **Weight Distribution:** Distribute weight evenly across the bed frame to ensure stability and longevity.
- **Under-Bed Storage:** The frame provides approximately 11 inches of clearance underneath, suitable for storing boxes or linens.

HEAVY-DUTY  
PLATFORM  
**NO BOX**  
SPRING REQUIRED



Figure 3: Under-bed storage area

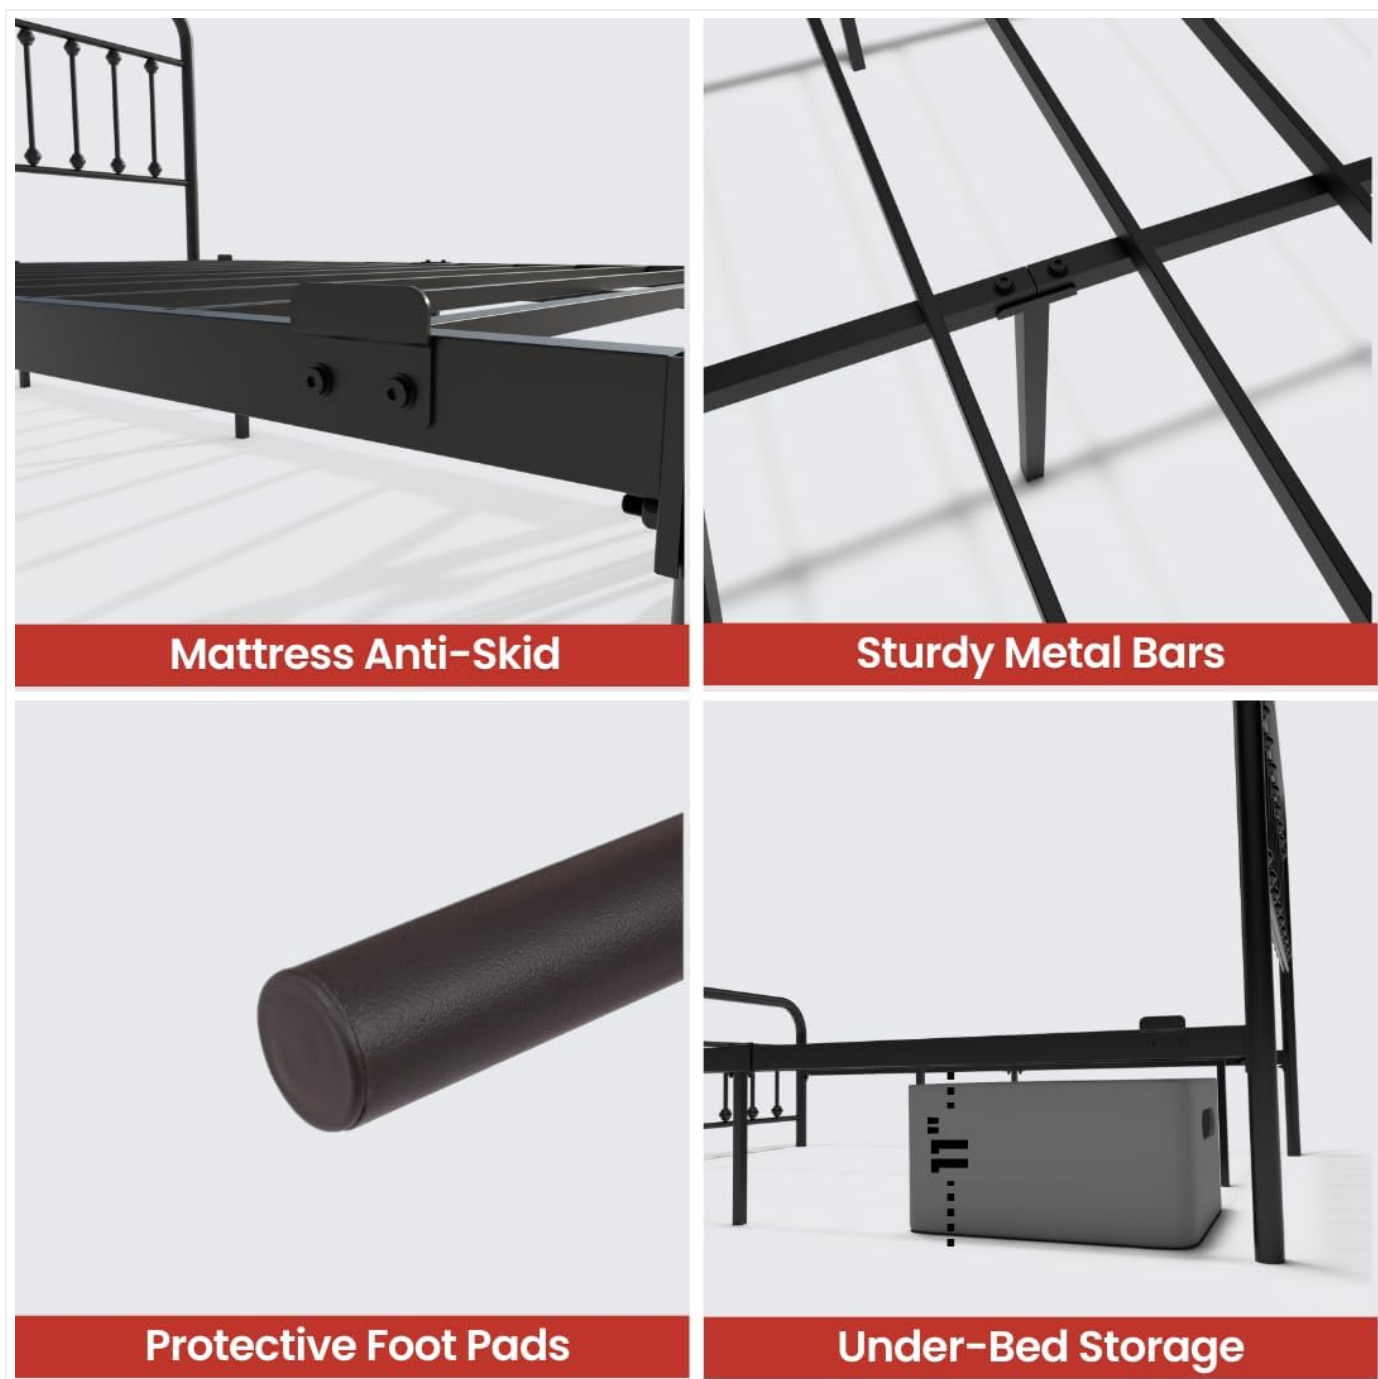


Figure 4: Detailed features including mattress anti-skid and protective foot pads

## 6. CARE AND MAINTENANCE

---

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Inspection:** Periodically inspect all connections and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability.
- **Movement:** When moving the bed frame, lift it rather than dragging it to prevent damage to the frame or your flooring.

## 7. TROUBLESHOOTING

---

- **Squeaking Noises:** If the bed frame develops squeaking noises, check all bolts and connections. Tighten any loose fasteners. Ensure the mattress is properly seated on the slats.

- **Instability:** If the frame feels unstable, verify that all components are correctly assembled and all bolts are fully tightened. Ensure the bed is on a level surface.
- **Missing Parts:** If any parts are missing or damaged upon arrival, contact customer support immediately for assistance.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	1451
<b>ASIN</b>	B08HW1BLLQ
<b>Size</b>	Queen
<b>Product Dimensions (L x W x H)</b>	80" x 60" x 42.5"
<b>Color</b>	Black
<b>Finish Type</b>	Powder Coated
<b>Material</b>	Metal (Wrought Iron Style)
<b>Weight Capacity</b>	Up to 1000 lbs
<b>Under-Bed Clearance</b>	11 Inches
<b>Assembly Required</b>	Yes



Figure 5: Product Dimensions

## 9. WARRANTY AND SUPPORT

For customer support or inquiries regarding your AMBEE21 Golden Gate Beds product, please refer to the contact information provided with your purchase or visit the official AMBEE21 brand store.

Protection plans may be available for purchase separately to extend coverage beyond the standard manufacturer's warranty. Please check your purchase details for more information on available protection plans.

**AMBEE21 Store:** [Visit the AMBEE21 Store on Amazon](#)