

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Streamline](#) /

› [Streamline 61" Clawfoot Soaking Bathtub User Manual](#)

Streamline N480BL-IN-BL

Streamline 61" Clawfoot Soaking Bathtub User Manual

Model: N480BL-IN-BL

Brand: Streamline

1. IMPORTANT SAFETY INFORMATION

Please read this entire manual carefully before installation and use. Failure to follow these instructions could result in property damage or personal injury.

- These products must be installed by a fully insured and licensed plumber only.
- Streamline is not responsible for any local code compliance for this product. Building and plumbing codes may vary state-to-state.
- Streamline shall not be held liable for all incidental damages or flood caused due to use of this product.
- Streamline shall not be held liable for all fees stemming from cost of installation, re-installation, removal, subsequent damage, or transportation in a case of a product defect.

2. SETUP AND INSTALLATION

2.1 Tools You May Need

- Silicone sealant
- Pencil
- Adjustable Wrench
- Level Bar
- Measuring Tape
- Safety Glasses

2.2 Pre-Installation Checklist

- Ensure that the floor at the installation site has enough floor support and is level.
- Waterproofing the floor is highly recommended.
- Determine the location of the drainpipe on the floor by taking measurements of the drain and waste location underneath the unit.

- Clean the drain hole area in preparation of setting the drain. The area should be dry and free from any debris.

2.3 Unpacking and Positioning

Carefully remove the bathtub from its box. It is recommended that the bathtub is carried by a minimum of two people. Ensure to carry and set down the bathtub only in the upside-down position to prevent damage. Gently place the bathtub in the upside-down position on a tarp or cardboard sheet in order to avoid contact with any rough surface.



Figure 1: The Streamline 61-inch Clawfoot Soaking Bathtub.

2.4 Clawfoot Assembly

Remove the safety caps from the bolts on the bathtub. Refer to the diagram below for a quick overview of how to assemble the claw feet. For further details, please refer to the installation instructions to determine which claw feet are applicable to your bathtub model. Make sure to check that you have received the correct amount of bolts and nuts.



LARGE SLOT FOR WINE GLASS

MULTIPLE SLOTS TO ADJUST TABLET ANGLE

HOLDER HAS HOLES TO AVOID SOAP BUILD UP

WIDE SIDES TO ENSURE STABILITY ON ALL OUR TUBS

SLOT TO HOLD CELLPHONE

REMOVABLE SHELVES

Figure 2: Clawfoot Assembly Diagram.

Once the claw feet have been installed, check to ensure that they are aligned properly with the bathtub and are sitting snug against the bathtub. Use a wrench to tighten all of the nuts.

2.5 Drain Installation

Take the strainer, place silicone sealant around it, and then place it into the drain hole ensuring a tight connection with the drain ell and gasket. Use silicone sealant. DO NOT use plumber's putty to seal. Insert the tailpiece into the trap inlet using the O-ring, coupling nut, and flange. The tailpiece may need to be cut for proper fit; 1 to 2 inches of the tailpiece should fit inside the trap. Slip the flange over the tailpiece and slide down to the floor. Assemble the tee section to the tailpiece, overflow, and drain ell using the coupling nuts and O-rings that are provided. Attach the tapered rubber gasket to the overflow ell. Align the overflow ell with the overflow hole and secure the drain to the tub with the provided screw and overflow plate. Make sure a watertight seal exists on all drain connections. Seal the connection by using a PVC pipe sealant to join the parts together.



Figure 3: Bathtub Drain Location.

100% pure acrylic **LUCITE™** sheets
guarantee the bathtub **will not**
fade, stain, or yellow over time with usage.

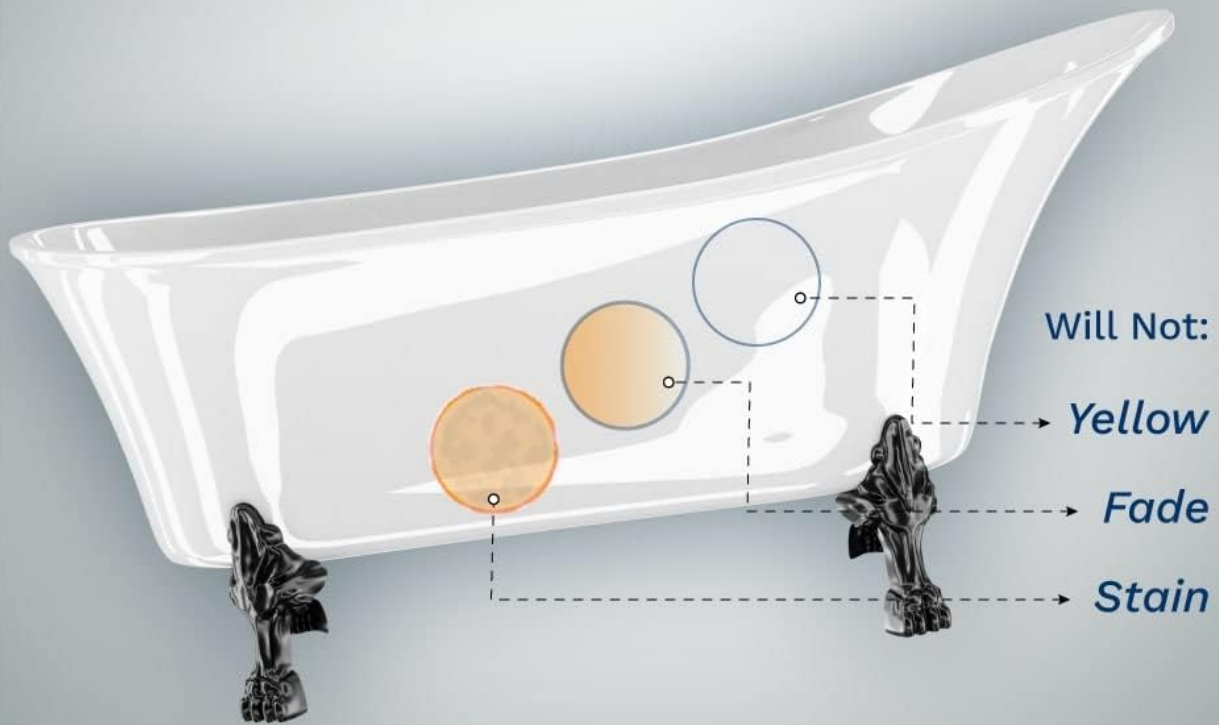


Figure 4: Acrylic Durability.

Glaze coating creates high-glossy finish that protects against chips and cracks, while adding fade-resistant properties.

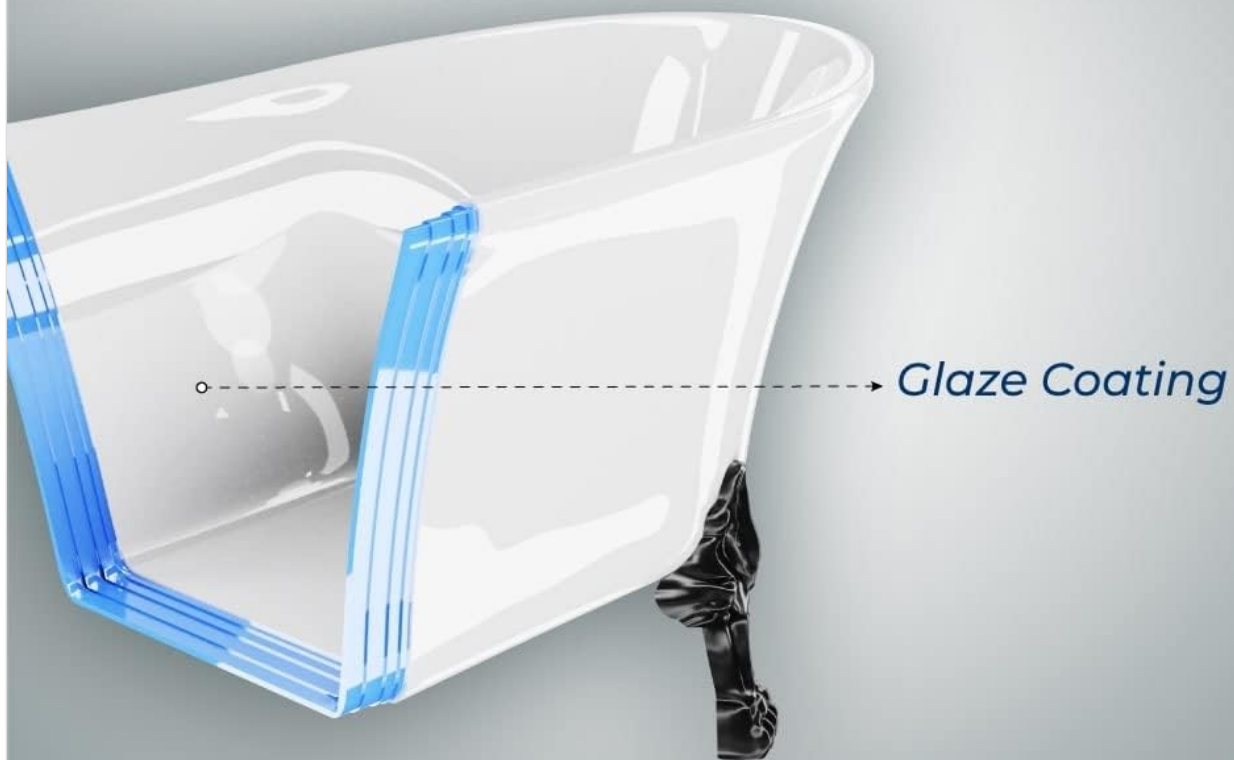


Figure 5: Glaze Coating Protection.

2.6 Installation Video Guide

Video 1: Streamline Acrylic Clawfoot Bathtub Installation Guide. This video provides a visual walkthrough of the installation process, including floor preparation, clawfoot assembly, and drain connection.

3. OPERATING INSTRUCTIONS

To use your Streamline Clawfoot Bathtub, simply fill it with water to your desired level. The generous 48-gallon capacity allows for deep, full-body immersion. Ensure the drain stopper is securely closed before filling. After use, open the drain stopper to empty the tub. The internal drain is designed for efficient water drainage.



Figure 6: Bathtub with included Bamboo Tray.

4. MAINTENANCE

4.1 Cleaning

Clean your acrylic bathtub regularly with a soft cloth and a non-abrasive, mild bathroom cleaner. Avoid using harsh chemicals, abrasive pads, or strong solvents, as these can damage the glossy finish and acrylic surface. Rinse thoroughly with water after cleaning.

4.2 Drain Care

Periodically check the internal drain for any hair or debris buildup to ensure proper drainage. Clean as needed to maintain optimal performance.

5. TROUBLESHOOTING

5.1 Leaks

If you notice any leaks, first check all drain connections to ensure they are tight and properly sealed with silicone sealant. If the leak persists, consult a licensed plumber.

5.2 Slow Drainage

Slow drainage is typically caused by a clog in the drain. Remove the drain stopper and clear any visible obstructions. If the issue continues, a plumber may be required to clear the drainpipe.

6. SPECIFICATIONS

Feature	Specification
Brand	Streamline
Model Number	N480BL-IN-BL
Color	Matte Black (Drain) / Glossy White (Tub)
Material	Acrylic
Product Dimensions (L x W x H)	61" x 27.6" x 31.5"
Style	Modern
Finish Type	Brushed (Drain)
Item Weight	101.2 Pounds
Installation Type	Clawfoot
Capacity	48 Gallons
Shape	Oval
UPC	041979471750
Included Components	Bathtub, Matte Black Drain

7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official Streamline website or refer to the warranty card included with your product. You may also find additional resources and FAQs on their support pages.

Additional documentation, including the Installation Manual and User Guide, can be found in PDF format on the product's Amazon listing page or the manufacturer's website.

Related Documents - N480BL-IN-BL

 INSTALLATION MANUAL CRYSTALTECH™ Treated Glass Model AQ-1220-CH-L-R, AQ-1230-BL-L-R  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE SHOWER DOOR SCAN FOR VIDEO  YouLike Channel	Streamline CRYSTALTECH™ Treated Glass Shower Door Installation Manual This installation manual provides comprehensive instructions for installing Streamline CRYSTALTECH™ Treated Glass shower doors, models AQ-1220-CH-L-R and AQ-1230-BL-L-R. It includes essential safety information, a list of required tools, a detailed parts diagram, step-by-step installation procedures, product care guidelines, and warranty details.
 CAST-IRON DROP-IN BATHTUB SERIES OWNER'S MANUAL & INSTALLATION GUIDE  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE BATHTUB SCAN FOR VIDEO  YouLike Channel	Streamline Cast-Iron Drop-In Bathtub Owner's Manual & Installation Guide Comprehensive owner's manual and installation guide for Streamline cast-iron drop-in bathtubs. Includes product overview, prior installation warnings, tools required, parts list, drain model compatibility, bathtub installation steps, and drain assembly instructions.
 INSTALLATION MANUAL CRYSTALTECH™ Treated Glass Model AQ-1600-BL-L-R, AQ-1601-BL-L-R  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE SHOWER DOOR SCAN FOR VIDEO  YouLike Channel	Streamline AQ-1600/AQ-1601 Shower Door Installation Manual Comprehensive installation manual for Streamline AQ-1600-BL-L-R and AQ-1601-BL-L-R CRYSTALTECH™ Treated Glass shower doors. Includes safety precautions, tools required, parts list, step-by-step installation guide, product care, and warranty information.
 INSTALLATION MANUAL CRYSTALTECH™ Treated Glass Model DSD-3460-235-BL, DSD-3464-236-CH, DSD-3468-237-BL, DSD-3472-238-CH  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE SHOWER DOOR SCAN FOR VIDEO  YouLike Channel	Streamline CRYSTALTECH™ Treated Glass Shower Door Installation Manual Comprehensive installation guide for Streamline CRYSTALTECH™ treated glass shower doors, including parts lists, tools required, step-by-step instructions, product care, and warranty information. Models: DSD-3460-235-BL, DSD-3464-236-CH, DSD-3468-237-BL, DSD-3472-238-CH.
 INSTALLATION MANUAL CRYSTALTECH™ Treated Glass Model DSD-3404-221-BL, DSD-3408-222-BL, DSD-3412-223-CH, DSD-3416-224-CH  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE SHOWER DOOR SCAN FOR VIDEO  YouLike Channel	Streamline CRYSTALTECH™ Treated Glass Shower Door Installation Manual This installation manual provides comprehensive guidance for Streamline CRYSTALTECH™ Treated Glass shower doors, including models DSD-3404-221-BL, DSD-3408-222-BL, DSD-3412-223-CH, and DSD-3416-224-CH. It details preparation, tools, parts, installation steps, and product care for a safe and effective setup.
 INSTALLATION MANUAL CRYSTALTECH™ Treated Glass Model AQ-1390-BL-L-R  Responsible for a Left or Right Door Installation READ ENTIRE INSTALLATION GUIDE PRIOR TO INSTALLING THE SHOWER DOOR SCAN FOR VIDEO  YouLike Channel	Streamline AQ-1390-BL-L-R CRYSTALTECH™ Treated Glass Shower Door Installation Manual Comprehensive installation manual for the Streamline AQ-1390-BL-L-R CRYSTALTECH™ Treated Glass shower door. Includes safety precautions, tools required, parts list, step-by-step installation guide, product care instructions, and warranty information.