

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aurlane](#) /

› [Aurlane FAC590 Blocks 90R Shower Wall Instruction Manual](#)

Aurlane FAC590

Aurlane FAC590 Blocks 90R Shower Wall Instruction Manual

Model: FAC590

Brand: Aurlane



Aurlane brand logo, featuring various bathroom product icons.

1. INTRODUCTION

Thank you for choosing the Aurlane FAC590 Blocks 90R Shower Wall. This manual provides essential information for the safe and correct installation, operation, and maintenance of your new shower wall. Please read these instructions carefully before beginning installation and retain them for future reference.

1.1 General Safety Information

- Always handle glass components with care to prevent breakage and injury.
- Ensure all mounting surfaces are structurally sound and capable of supporting the weight of the shower wall.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during installation.
- If you are unsure about any part of the installation process, consult a qualified professional.



Image 1.1: The Aurlane FAC590 Blocks 90R Shower Wall integrated into a contemporary bathroom setting, showcasing its design and functionality.

2. PRODUCT OVERVIEW

The Aurlane FAC590 Blocks 90R Shower Wall is designed for walk-in showers, featuring a modern aesthetic with a matte black aluminum frame and screen-printed tempered glass panels. It includes a main panel and a return panel for a complete enclosure.

2.1 Key Features

- Shower wall with return panel, suitable for walk-in shower installations.
- Constructed with 5 mm thick transparent tempered glass.
- Pivoting panel features a distinctive screen-printed 'Bricks' design.
- Equipped with an adjustable matte black aluminum wall mounting profile for precise fitting.

2.2 Dimensions and Components

The shower wall has overall dimensions of approximately 90 cm (width) x 195 cm (height) x 40 cm (depth of return panel). Key components include:

- **Aluminum Support Bar:** Matte black finish, 100 cm, cuttable to size.
- **Pivoting Panel:** 5 mm thick tempered glass with screen-printed design.
- **Aluminum Profile:** Matte black finish, adjustable by +/- 2 cm for wall mounting.
- **Fixed Wall Panel:** 5 mm thick tempered glass with screen-printed design.



Image 2.1: A comprehensive view of the Aurlane FAC590 Blocks 90R Shower Wall, highlighting its full structure and design.

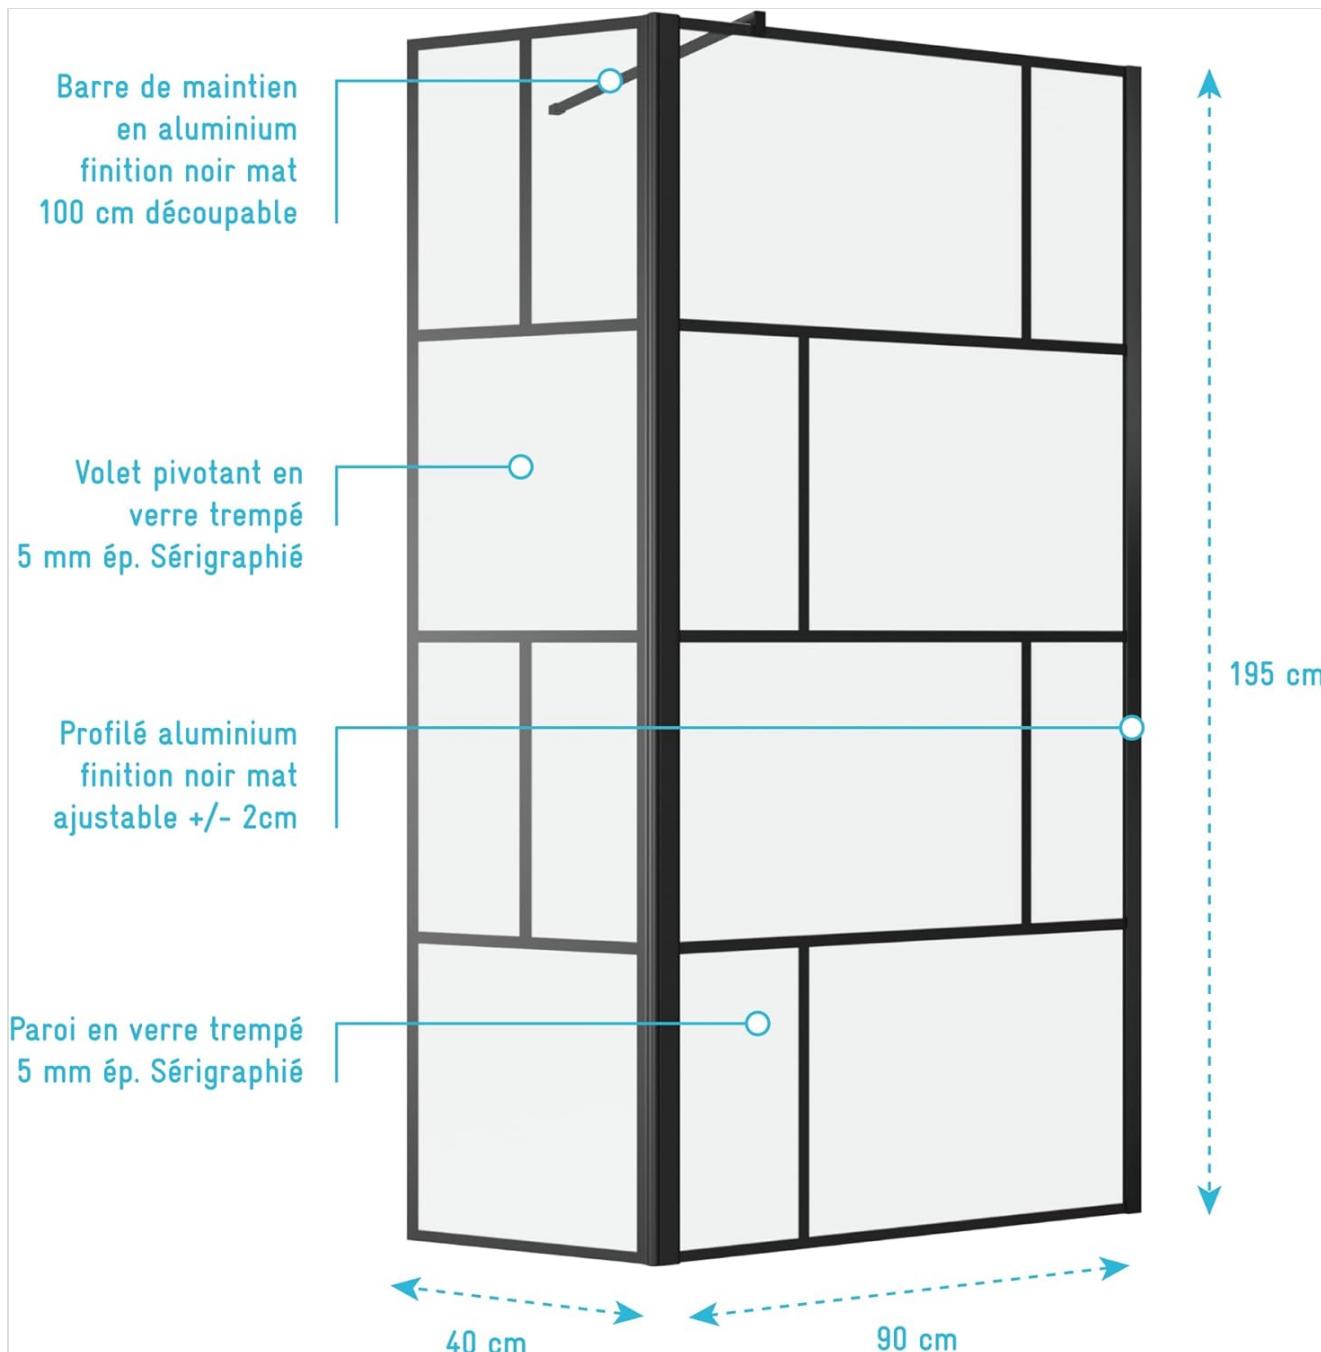


Image 2.2: Technical diagram illustrating the dimensions (90 cm width, 195 cm height, 40 cm return panel depth) and key components of the shower wall, including the aluminum support bar, pivoting glass panel, adjustable aluminum profile, and fixed glass wall panel.

3. SETUP AND INSTALLATION

Installation of the Aurlane FAC590 Blocks 90R Shower Wall requires careful attention to detail. It is designed for freestanding installation. Assembly is required.

3.1 Pre-Installation Checks

- Verify that all components listed in the packaging are present and undamaged.
- Ensure the installation area is clean, level, and has adequate drainage.
- Confirm that the wall where the profile will be mounted is solid and can support the weight.

3.2 Tools Required (Typical)

- Drill and appropriate drill bits for wall material
- Level
- Measuring tape
- Screwdriver set
- Silicone sealant and gun
- Utility knife
- Pencil for marking

3.3 Installation Steps (General Guide)

1. **Position the Wall Profile:** Place the adjustable aluminum wall profile against the wall at the desired height and location. Use a level to ensure it is perfectly vertical. Mark the drilling points.
2. **Drill and Secure Profile:** Drill holes at the marked points. Insert appropriate wall plugs (not always supplied, check packaging) and secure the aluminum profile to the wall using screws.
3. **Insert Glass Panels:** Carefully slide the fixed tempered glass wall panel into the secured aluminum profile. Ensure it is seated correctly and securely.
4. **Attach Pivoting Panel:** Connect the pivoting tempered glass panel to the fixed panel or wall profile according to the specific hinge mechanism. Refer to the detailed diagram (Image 2.2) for component orientation.
5. **Install Support Bar:** Measure and cut the aluminum support bar to the required length. Attach it between the top of the shower wall and the adjacent wall or ceiling for added stability.
6. **Seal Gaps:** Apply a waterproof silicone sealant along all joints where the shower wall meets the floor and the wall to prevent water leakage. Allow adequate drying time before use.



Image 3.1: A detailed view of the top corner joint, illustrating the connection points and the matte black aluminum frame.



Image 3.2: A close-up showing a lower connection point or profile detail, important for understanding assembly.

4. OPERATING INSTRUCTIONS

The Aurlane FAC590 Blocks 90R Shower Wall is designed for straightforward use. Once properly installed and sealed, it functions as a static and pivoting barrier for your shower area.

- **Pivoting Panel:** The pivoting glass panel allows for entry and exit from the shower area. Gently push or pull the panel to open or close it. Avoid excessive force.
- **Water Containment:** Ensure the pivoting panel is fully closed during showering to effectively contain water within the shower area.

5. MAINTENANCE

Regular cleaning and maintenance will help preserve the appearance and functionality of your Aurlane FAC590 Blocks 90R Shower Wall.

5.1 Cleaning the Glass Panels

- Use a soft cloth or sponge with warm water and a mild, non-abrasive glass cleaner.
- Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as these can scratch the glass or damage the screen-printed design.
- For best results, wipe the glass dry after each use to prevent water spots and limescale buildup.

5.2 Cleaning the Aluminum Profiles

- Clean the matte black aluminum profiles with a soft, damp cloth and a mild, non-abrasive cleaner.
- Do not use acidic or alkaline cleaners, as these can damage the finish.
- Dry the profiles thoroughly after cleaning to prevent water marks.

5.3 General Care

- Regularly check all screws and fittings for tightness. Tighten if necessary, but do not overtighten.
- Inspect silicone seals periodically for signs of wear or damage. Reapply sealant if necessary to maintain watertight integrity.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your shower wall.

6.1 Water Leakage

- **Issue:** Water is leaking from the base or sides of the shower wall.
Solution: Check the silicone sealant along all joints. If the sealant is cracked, peeling, or insufficient, remove the old sealant and reapply a fresh bead of waterproof silicone. Ensure the pivoting panel closes completely.

6.2 Instability or Wobbling

- **Issue:** The shower wall feels unstable or wobbles.
Solution: Verify that all wall mounting screws are securely tightened. Ensure the support bar is correctly installed and tightened. Check if the wall profile is firmly attached to a solid wall structure.

6.3 Difficulty Pivoting Panel

- **Issue:** The pivoting glass panel is stiff or difficult to move.
Solution: Check the hinges for any obstructions or debris. Clean the hinge mechanisms. If the issue persists, the hinges may require adjustment or lubrication (use a silicone-based lubricant suitable for bathroom environments).

7. SPECIFICATIONS

Feature	Detail
Brand	Aurlane
Model Number	FAC590

Feature	Detail
Product Dimensions	90 x 195 x 40 cm
Weight	20 kg
Finish	Matte
Number of Items in Package	1
Batteries Required?	No
Door Style	Pivoting doors
Style	Modern
Material	Aluminum, Glass, Metal
Installation Type	Freestanding
Shape	Rectangular
Assembly Required	Yes
Color	Multi-color (referring to glass design)
GTIN	03700710243717

8. WARRANTY INFORMATION


Specific warranty details for the Aurlane FAC590 Blocks 90R Shower Wall are not provided in this manual. Please refer to your purchase documentation or contact the retailer or manufacturer directly for information regarding warranty coverage and terms.

9. SUPPORT INFORMATION

For technical assistance, spare parts, or further inquiries regarding your Aurlane FAC590 Blocks 90R Shower Wall, please contact the retailer from whom you purchased the product. Manufacturer contact details may also be available on the product packaging or the Aurlane official website.

Related Documents - FAC590

	<p>Aurlane Designdusche White Sea - Safety and Installation Guide (Model 25892042)</p> <p>Essential safety warnings, installation guidance, and contact details for the Aurlane Designdusche White Sea shower enclosure. Ensure safe operation and maintenance.</p>
---	---

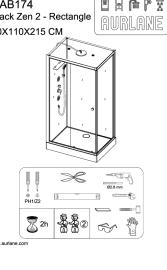 <p>AURLANE FAC112 & FAC113 : Receveurs de Douche Linéaires - Installation et Performances Découvrez les receveurs de douche linéaires AURLANE FAC112 (80x120cm) et FAC113 (90x140cm). Guide d'installation détaillé et déclaration de performances pour une salle de bain moderne et fonctionnelle.</p>	
 <p>AURLANE CAB265 Shower Cabin: Installation and User Guide Comprehensive installation guide, user manual, and maintenance tips for the AURLANE CAB265 shower cabin (90x115x218cm). Covers safety precautions, troubleshooting, and product specifications.</p>	
 <p>AURLANE CAB174 Black Zen 2 - Rectangle Shower Cabin: Installation and User Manual Comprehensive guide for the AURLANE CAB174 Black Zen 2 rectangular shower cabin, including pre-installation requirements, installation steps, usage guidelines, warranty information, troubleshooting tips, and declaration of conformity.</p>	
 <p>Aurlane CAB088 Shower Cabin Installation and User Manual Comprehensive guide for installing and using the Aurlane CAB088 shower cabin, including warranty, troubleshooting, and safety information. This manual provides detailed instructions for setup, operation, and maintenance.</p>	
 <p>Manuel d'installation et d'utilisation de la cabine de douche AURLANE CAB265 V2 Guide complet pour la cabine de douche AURLANE CAB265 V2 (90x115x218cm). Ce manuel couvre l'installation, l'utilisation, l'entretien, la sécurité et le dépannage, avec des informations sur la garantie et la conformité.</p>	