

RealTruck Revolver X4s (80213)

RealTruck BAK Revolver X4s Hard Rolling Truck Bed Tonneau Cover Instruction Manual

Model: 80213

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your RealTruck BAK Revolver X4s Hard Rolling Truck Bed Tonneau Cover. Please read this manual thoroughly before beginning installation or operation to ensure proper use and to maximize the lifespan of your product.

The BAK Revolver X4s is a premium hard rolling tonneau cover designed for durability and security. It features a matte-black finish, heavy-duty aluminum slats wrapped in industrial-grade vinyl, and a patented rotational locking system for enhanced security. When rolled forward, it provides full access to your truck bed without obstructing visibility.

2. PARTS LIST

Before beginning installation, verify that all components are present and undamaged. Refer to the packing list included with your product for a complete inventory. Key components typically include:

- Tonneau Cover Assembly
- Hardware Kit (clamps, bolts, seals, etc.)
- Installation Guide (this manual)

If any parts are missing or damaged, contact RealTruck customer support immediately.

3. SETUP AND INSTALLATION



Proper installation is crucial for the performance and longevity of your tonneau cover. It is recommended to have a second person assist with the installation.

3.1 Pre-Installation Steps


- **Clean Truck Bed Rails:** Ensure the truck bed rails are clean and free of debris, wax, or any protective coatings that might interfere with the adhesive seals.
- **Measure Truck Bed Length:** Accurate measurement of your truck bed is essential to ensure compatibility and proper fit.

HOW TO MEASURE YOUR TRUCK BED

RAM 1500

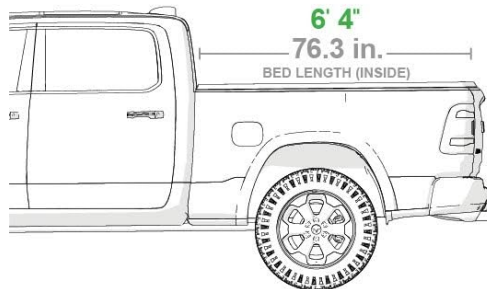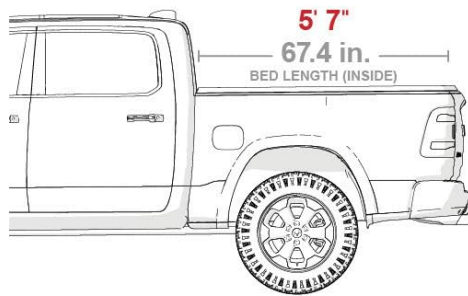

**CLASSIC
BODY STYLE
W/O RAMBOX**

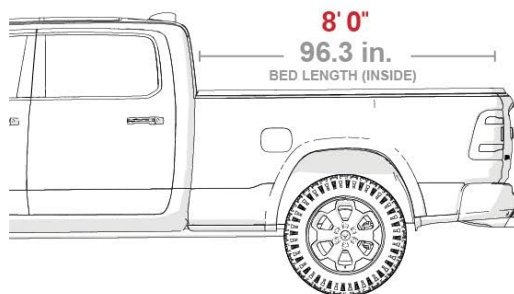

NEW vs CLASSIC 2019+ DODGE RAM

*DODGE OFFERED TWO BODY STYLES FOR 2019: THE NEW AND THE 19-20 CLASSIC. PLEASE CONFIRM APPLICATION BEFORE ORDERING.



NEW BODY STYLE



CLASSIC STYLE

Figure 3.1: Diagram illustrating how to measure your truck bed for proper fitment. This image shows different bed lengths for Ram 1500 trucks, indicating which length (6' 4" / 76.3") fits this specific model.

Your browser does not support the video tag.

Video 3.1: Official RealTruck video demonstrating the correct method to measure your truck bed for tonneau cover compatibility. This ensures you select the appropriate size for your vehicle.

3.2 Rail Installation

1. Position the side rails along the truck bed rails, ensuring they are flush and level.
2. Secure the rails using the provided clamps. Start from the middle and work your way towards the front and rear, ensuring even pressure.
3. Apply the bulkhead seal if your truck bed does not have a drop-in bed liner covering the bulkhead. Position it carefully to ensure a watertight seal.

3.3 Cover Placement

1. Carefully place the tonneau cover assembly onto the installed rails at the bulkhead end.
2. Align the cover with the rails and ensure it sits squarely on the truck bed.

3. Secure the cover to the rails according to the specific instructions in the hardware kit, typically involving tightening bolts or latches.



Figure 3.2: The BAK Revolver X4s Tonneau Cover fully installed and closed on a truck bed, showcasing its low-profile design and matte-black finish.

4. OPERATING INSTRUCTIONS

The BAK Revolver X4s is designed for ease of use and full bed access.

4.1 Opening the Cover


- To unlock the cover, pull down on the tailgate cable. This disengages the patented rotational locking system along the entire length of the bed.
- Once unlocked, the cover can be rolled forward smoothly towards the cab with one hand. The aluminum underbody is concealed to protect your hands during operation.
- Secure the rolled-up cover against the cab using the durable strap and buckle system. This allows for full bed access and maintains rear visibility.

ROLL WITH CONFIDENCE

REVOLVER X4s



Figure 4.1: A user demonstrating the one-hand operation of the Revolver X4s, rolling the cover towards the cab to access the truck bed.

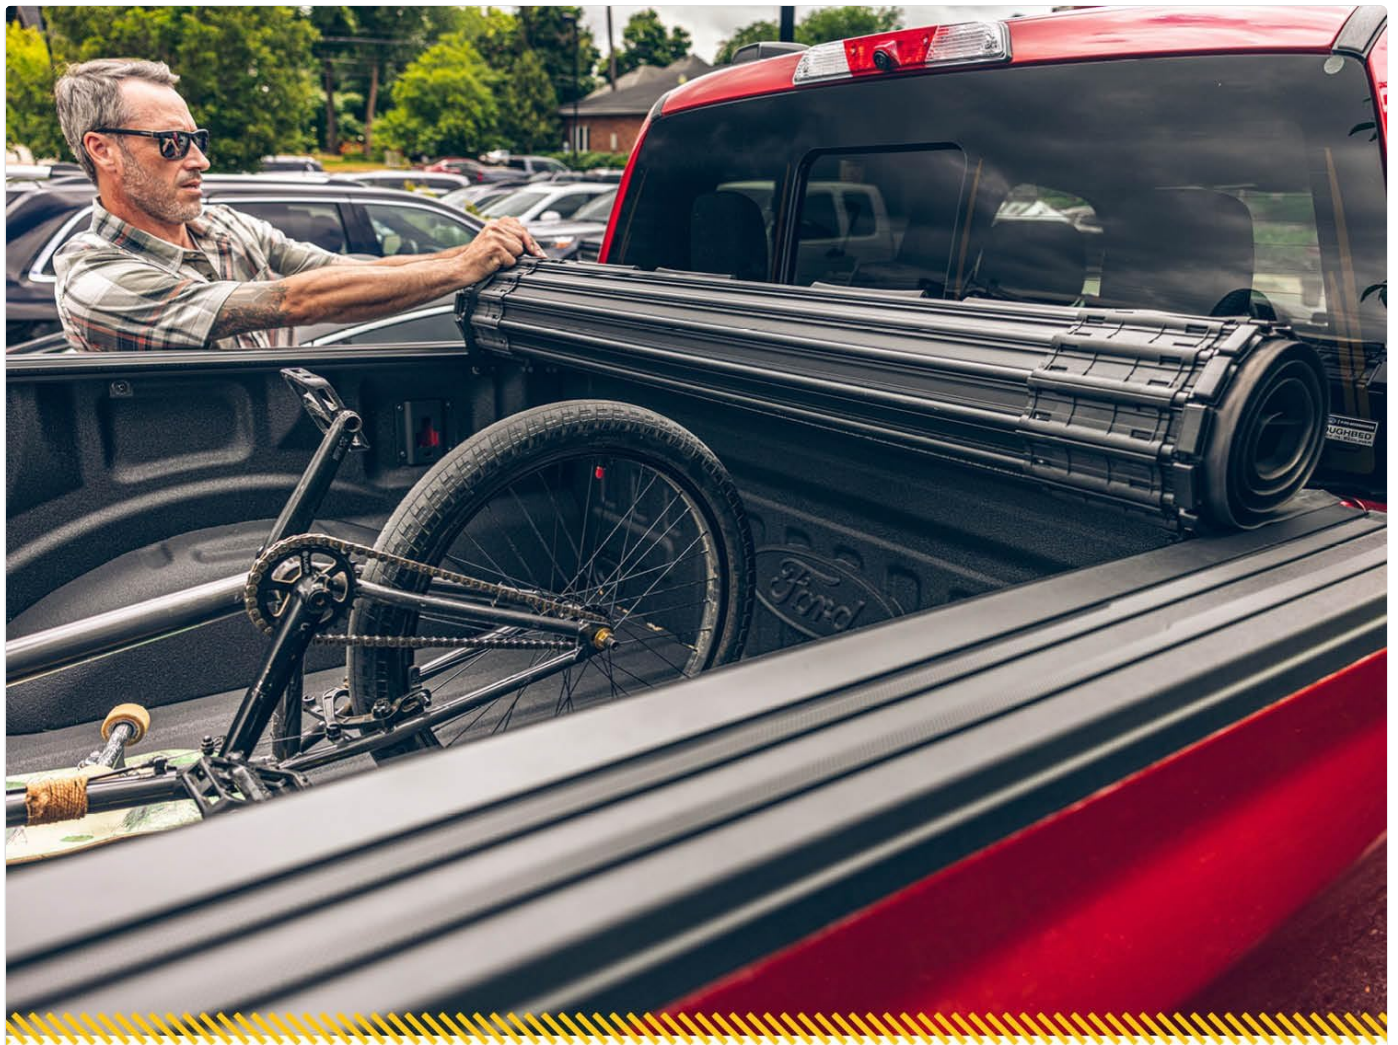

**ENHANCED
SECURITY**



**PREMIUM
DESIGN**



**ONE HAND
OPERATION**

Figure 4.2: The tonneau cover fully rolled up and secured against the truck's cab, providing complete access to the truck bed.

4.2 Closing the Cover

- Unbuckle the strap system and gently unroll the cover towards the tailgate.
- Ensure the cover is fully extended and properly seated on both side rails.
- Close the tailgate to engage the rotational locking system, securing the cover along the entire length of the bed.



Figure 4.3: The user closing the tonneau cover, ensuring it is properly aligned and secured over the truck bed.

5. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your BAK Revolver X4s tonneau cover.

- **Cleaning:** Wash the cover regularly with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the matte finish or vinyl.
- **Vinyl Care:** For optimal protection and appearance, apply a UV protectant specifically designed for vinyl surfaces periodically.
- **Rail and Latch Inspection:** Periodically inspect the side rails, clamps, and locking mechanisms for any signs of wear, damage, or loose connections. Tighten any loose hardware as needed.
- **Drain Tubes:** Ensure the drain tubes (if installed) are clear of debris to allow for proper water drainage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your tonneau cover.

Problem	Possible Cause	Solution
Cover does not roll smoothly.	Debris in rails, misaligned rails, or worn components.	Clean rails, check rail alignment, lubricate moving parts, or inspect for damage.
Water leakage into truck bed.	Improperly installed seals, damaged seals, or misaligned cover/rails.	Inspect and re-seat all seals, replace damaged seals, or adjust cover/rail alignment. Ensure drain tubes are clear.
Cover does not latch securely.	Misaligned cover, obstructed locking mechanism, or worn latch components.	Adjust cover position, clear any obstructions from the locking system, or inspect latch components for wear.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact RealTruck customer support.

7. SPECIFICATIONS

- **Brand:** RealTruck
- **Model:** Revolver X4s
- **Item Model Number:** 80213
- **Manufacturer:** BAK
- **Material:** Aluminum (slats), Industrial-grade Vinyl (surface)
- **Exterior Finish:** Matte Black (Painted)
- **Lock Type:** Tailgate (integrated rotational locking system)
- **Fit Type:** Vehicle Specific Fit (Fits 2009-2024 Dodge Ram 1500, 2010-2021 2500/3500 with 6' 4" Bed (76.3"))
- **Item Weight:** Approximately 92 pounds
- **Product Dimensions:** 84 x 12 x 11 inches (packaged)
- **Country of Origin:** USA with Global Materials
- **UPC:** 192631032175

8. WARRANTY AND SUPPORT

The RealTruck BAK Revolver X4s Hard Rolling Truck Bed Tonneau Cover is backed by BAK for 5 years, ensuring quality and durability. For warranty claims, technical assistance, or any product-related inquiries, please contact RealTruck customer support.

RealTruck Customer Support:

Website: www.realtruck.com

Phone: Refer to RealTruck's official website for current contact numbers.

Please have your product model number (80213) and purchase information ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question