

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [P PURLOVE](#) /
- › [P PURLOVE Twin Size Platform Bed Frame Instruction Manual](#)

P PURLOVE Twin Size Platform Bed Frame

P PURLOVE Twin Size Platform Bed Frame Instruction Manual

Model: Twin Size Platform Bed Frame

Brand: P PURLOVE

INTRODUCTION

This manual provides detailed instructions for the assembly, use, and maintenance of your P PURLOVE Twin Size Platform Bed Frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: The P PURLOVE Twin Size Platform Bed Frame, shown assembled in a white finish with a headboard and footboard.

SAFETY INFORMATION

WARNING: Always follow assembly instructions carefully to avoid injury. Be cautious of sharp edges during assembly and use. Do not exceed the maximum weight limit of **275 pounds**. Ensure all connections are securely tightened before use. Periodically check and re-tighten all bolts and screws to maintain structural integrity.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Headboard (1)
- Footboard (1)
- Side Rails (2)
- Wooden Slats (10)
- Support Legs (if applicable)

- Hardware Pack (screws, bolts, Allen wrench)



Figure 2: Exploded view of bed frame components. This image illustrates the main parts included in the package, such as the headboard, footboard, side rails, and slats, before assembly.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly requires two adults. Clear a spacious area for assembly. Do not fully tighten screws until all components are loosely assembled.

1. **Step 1: Attach Side Rails to Headboard.** Align the side rails with the pre-drilled holes on the headboard. Insert bolts and tighten them partially with the provided Allen wrench.



Figure 3: Detail of the headboard and side rail connection point, showing the pre-drilled holes for secure attachment.

2. **Step 2: Attach Footboard.** Connect the other end of the side rails to the footboard using the same method. Ensure the footboard is correctly oriented.



Figure 4: Detail of the footboard and side rail connection, highlighting the secure fastening points.

3. **Step 3: Install Slats.** Lay the wooden slats across the side rails. The slats are typically connected by a strap for even spacing. Secure the slats to the side rails using the provided screws.



Figure 5: View of the wooden slats, showing the connecting strap that ensures proper spacing and support for the mattress.

4. **Step 4: Final Tightening.** Once all components are in place, fully tighten all bolts and screws. Do not overtighten.
5. **Step 5: Place Mattress.** Position your twin-size mattress directly onto the installed slats. No box spring is required.

OPERATING INSTRUCTIONS

The P PURLOVE Twin Size Platform Bed Frame is designed to provide stable support for a twin-size mattress. Ensure the mattress is centered on the frame for optimal support and comfort. This bed frame does not require a box spring.

MAINTENANCE

- **Cleaning:** Wipe the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically inspect all bolts and screws. Re-tighten them as necessary to ensure the frame remains stable and secure.
- **Weight Distribution:** Distribute weight evenly across the bed frame to prevent undue stress on any single point.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly.	Loose bolts or screws.	Check and tighten all assembly hardware. Ensure all connections are secure.
Squeaking noises.	Loose connections or friction between parts.	Re-tighten all bolts. If squeaking persists, apply a small amount of lubricant (e.g., paraffin wax) to contact points between wood components.
Missing parts during assembly.	Packaging error.	Do not proceed with assembly. Contact P PURLOVE customer service immediately for replacement parts.

SPECIFICATIONS

Model: Twin Size Platform Bed Frame

Brand: P PURLOVE

Overall Product Dimensions: 79.5" L x 42" W x 41.4" H

Weight Capacity: 275 LBS

Material: Plywood, MDF, Pinewood

Number of Slats: 10

Recommended Mattress Thickness: 8"

Box Spring Required: No

Assembly Required: Yes

Color: White

UPC: 195358043714

SIZE INCH



Figure 6: Detailed dimension diagram of the twin size bed frame, including length, width, and height measurements.

WARRANTY AND SUPPORT

For warranty information or customer support, please contact P PURLOVE directly through their official website or the retailer where the product was purchased. Please have your model number (Twin Size Platform Bed Frame) and UPC (195358043714) available when contacting support.

You can visit the P PURLOVE Store for more information: [P PURLOVE Official Store](#)

IMPORTANT NOTES

This product is designed for indoor use only. Avoid exposing the bed frame to excessive moisture or direct sunlight, which can damage the wood finish.




WF310647 Cloud Bed Assembly Instructions

Step-by-step assembly instructions for the WF310647 cloud-shaped bed frame, including parts list, hardware details, and assembly steps.




Twin Daybed with Trundle Assembly Instructions - WF295030

Detailed assembly instructions for the P PURLOVE Twin Daybed with Trundle (Model WF295030). Includes part list, hardware list, and step-by-step guidance for easy setup.

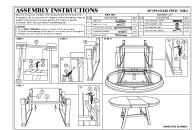


Assembly Instructions for WF299347AAD Preve Table

Detailed assembly instructions for the WF299347AAD Preve Table, including a parts list, hardware list, and step-by-step visual guides. This guide ensures proper assembly of the wooden furniture.

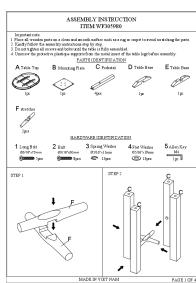

Assembly Instructions for WF305980 Dining Table


Step-by-step assembly guide for the WF305980 dining table, including parts identification, hardware identification, and assembly steps with detailed textual descriptions of diagrams.

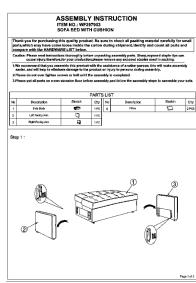

Assembly Instructions: WF297903 Sofa Bed with Cushion

Step-by-step assembly instructions for the WF297903 Sofa Bed with Cushion by P PURLOVE, detailing parts and assembly process for easy setup.

ASSEMBLY INSTRUCTIONS
ITEM CODE: WF307994 - WF307995

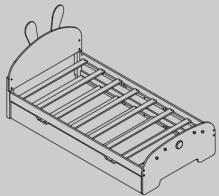

Page 01 Of 10

[**\[pdf\] User Manual**](#)

AI PT 45 WF307994 WF307995 Model 1 HIK Installation Manual P PURLOVE Twin Size Platform Bed Frame with Headboard Wood Slat Support and Trundle No Box Spring Needed Easy Assembly White Home Kitchen 91cQZ4NksbL m media amazon images I |||
...
lang: **score:25** filesize: 740.68 K page_count: 10 document date: 2023-08-09