

## ELEGANT B020-6072CO-C

# ELEGANT Semi-Frameless Sliding Shower Door Instruction Manual

Model: B020-6072CO-C (60 in. W x 72 in. H, Black Finish)

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your ELEGANT Semi-Frameless Sliding Shower Door. Please read all instructions carefully before beginning installation to ensure safe and correct assembly and use. Retain this manual for future reference.



*Image 1.1: ELEGANT Semi-Frameless Sliding Shower Door, 60x72 inches, Black Finish.*

## 2. SAFETY INFORMATION

---

- Always wear safety glasses during installation.
- Handle glass panels with extreme care. Tempered glass, while strong, can shatter if struck at the edges or corners.
- Ensure the installation surface (walls, floor) is structurally sound and level.
- Professional installation is recommended for optimal safety and performance.
- Do not overtighten screws, especially those attaching to glass, as this can cause damage.
- Keep children and pets away from the installation area.

## 3. PARTS LIST

---

Verify all parts are present before beginning installation. If any parts are missing or damaged, contact customer support.

- Tempered Glass Panels (2)

- Top Rail Track
- Bottom Guide Rail
- Wall Profiles/Aluminum Frame components
- Sliding Rollers/Wheels
- Long Handle (1)
- Interior Knobs (2)
- Anti-Crash Angles
- Clear Shower Door Seal Strips
- Fasteners and Screws

## 4. TOOLS REQUIRED

---

- Measuring Tape
- Pencil
- Level
- Drill
- Drill Bits (e.g., 1/4 inch or 8mm for wall anchors, as per specific instructions)
- Screwdriver (Phillips head)
- Caulking Gun and Silicone Sealant (waterproof)
- Utility Knife or Saw (for cutting guide/rail if adjustment is needed)
- Safety Glasses
- Gloves

## 5. SETUP AND INSTALLATION

---

Follow these steps carefully for proper installation. Refer to the included illustrated instructions for visual guidance.

### 5.1. Prepare the Installation Area

1. Ensure the shower base or tub is level and securely installed.
2. Measure the width of your shower opening at the top, middle, and bottom to confirm compatibility with the door's adjustable range (58.5 in. to 60 in. for this model).
3. Clean the wall surfaces where the shower door will be installed.

### 5.2. Width Adjustment (if necessary)

The top and bottom rail tracks can be cut to fit your specific bathroom width, allowing for a maximum adjustment of 1.5 inches.

1. Measure the exact required width.
2. Carefully mark the cutting line on the top and bottom rail tracks.
3. Use an appropriate saw to cut the tracks to the desired length. Ensure cuts are straight and clean.



## Width Adjustment

- Cutting the **top and bottom** rail track to fit your bathroom allows for a maximum adjustment of **1.5"**



*Image 5.2: Illustration of width adjustment for the rail tracks.*

### 5.3. Install Wall Profiles and Aluminum Frame

1. Position the wall profiles vertically on the shower walls, ensuring they are plumb using a level.
2. Mark the drilling points through the pre-drilled holes in the wall profiles.
3. Drill holes at the marked points. Insert wall anchors if required for your wall type.
4. Secure the wall profiles to the walls using the provided screws.
5. Attach the top and bottom aluminum frame components to the wall profiles, ensuring they are level.



*Image 5.3: Detail of the aluminum frame, emphasizing its stable structure.*

#### **5.4. Install Bottom Guide Rail**

The bottom guide rail is designed to be flush with the surface, creating a leak-proof barrier.

1. Place the bottom guide rail along the shower base or tub edge, centered between the wall profiles.
2. Secure it according to the specific instructions, often involving screws or adhesive.
3. Apply a small amount of waterproof silicone sealant at both ends of the guide block within the bottom rail to keep it in place and prevent movement when sliding doors.



## Bottom Guide Rail

- Designed to be flush with the surface, forming a leak-proof barrier



*Image 5.4: The bottom guide rail, designed for a leak-proof seal.*

### 5.5. Install Glass Panels and Rollers


1. Attach the sliding rollers/wheels to the top edge of the glass panels as per the diagram. Ensure screws are snug but not overtightened.
2. Carefully lift each glass panel and hang the rollers onto the top rail track.
3. Guide the bottom edge of the glass panels into the bottom guide rail.
4. Test the sliding motion of both panels to ensure smooth operation.





## Certified Tempered Glass

- Shatter-resistant glass makes the shower area extremely safe

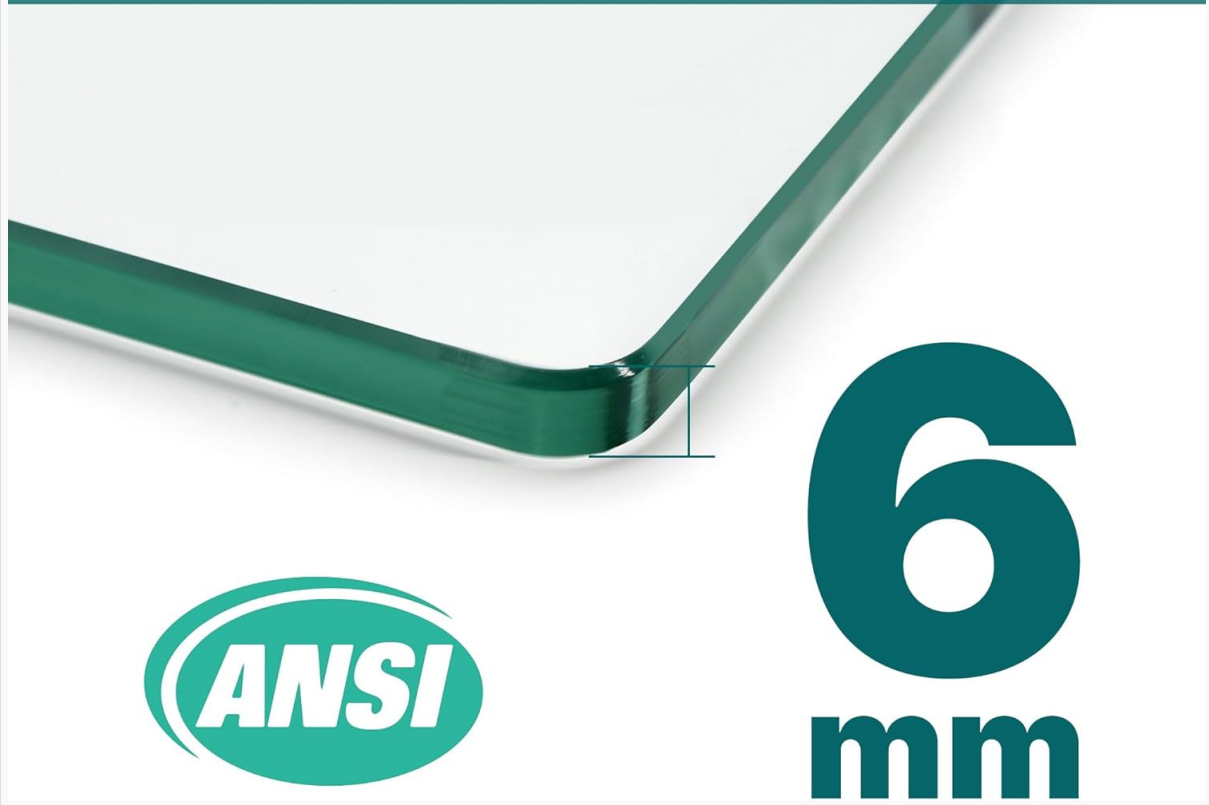

*Image 5.5: Certified 1/4 inch (6mm) tempered glass for safety.*

### 5.6. Install Handles and Knobs

1. Attach the long handle to the outside of one sliding glass panel. This handle can also serve as a towel rack.
2. Attach the two interior knobs to the inside of the glass panels.
3. Ensure all handles and knobs are securely fastened without overtightening.



## Aluminium Alloy Handle

- Not easily corroded and rusted, long-lasting
- Simple to open and close, also can be used as towel racks

*Image 5.6: The durable aluminum alloy handle.*

### 5.7. Install Anti-Crash Angles and Seal Strips

1. Install the high-quality anti-crash angles at the ends of the sliding path to protect the wall and glass from impact.
2. Apply the full-length clear shower door seal strips along the edges of the glass panels to prevent water leaks.





## Anti-Crash Angle

- High-quality anti-crash angles protect the wall from scratches



*Image 5.7: Anti-crash angles protect the wall from scratches.*

### 5.8. Sealing

1. Apply a continuous bead of waterproof silicone sealant along the exterior joints where the wall profiles meet the wall and where the bottom guide rail meets the shower base/tub.
2. Allow the sealant to cure completely (typically 24-48 hours) before using the shower.

## 6. OPERATING INSTRUCTIONS

The ELEGANT Semi-Frameless Sliding Shower Door features a double sliding design, allowing both glass panels to move smoothly.

- To open or close the door, gently grasp the handle or interior knob and slide the glass panel along the top and bottom tracks.
- Avoid forcing the doors. If resistance is felt, inspect the tracks for obstructions or debris.

## 7. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and appearance of your shower door.

- **Glass Cleaning:** Clean glass panels regularly with a soft cloth and a non-abrasive glass cleaner. Avoid harsh chemicals or abrasive pads that can scratch the glass or damage protective coatings.
- **Hardware Cleaning:** Wipe down black hardware with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Track Maintenance:** Keep the top and bottom tracks free of soap scum, hair, and debris to ensure smooth sliding operation. Use a small brush or vacuum to clear any blockages.
- **Seal Strips:** Periodically check the clear seal strips for wear or damage. Replace if necessary to maintain water-tightness.


## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not slide smoothly.	Debris in tracks, misaligned rollers, or worn rollers.	Clean tracks thoroughly. Check roller alignment and adjust if needed. Replace rollers if worn.
Water leaks from the door.	Damaged or improperly installed seal strips, insufficient sealant, or misaligned door.	Inspect and adjust seal strips. Reapply silicone sealant where necessary. Ensure door is properly aligned and plumb.
Glass panel appears loose.	Roller screws are loose.	Gently tighten the screws attaching the rollers to the glass panels. Do not overtighten.

## 9. SPECIFICATIONS

- **Model:** B020-6072CO-C
- **Dimensions:** 60 inches (W) x 72 inches (H)
- **Width Adjustment Range:** 58.5 inches to 60 inches
- **Glass Thickness:** 1/4 inch (6mm) tempered glass
- **Glass Certification:** ANSI certified
- **Hardware Color:** Black Finish
- **Material:** Stainless Steel (hardware), Aluminum (frame)
- **Item Weight:** Approximately 105 pounds
- **Assembly Required:** Yes

**ELEGANT**

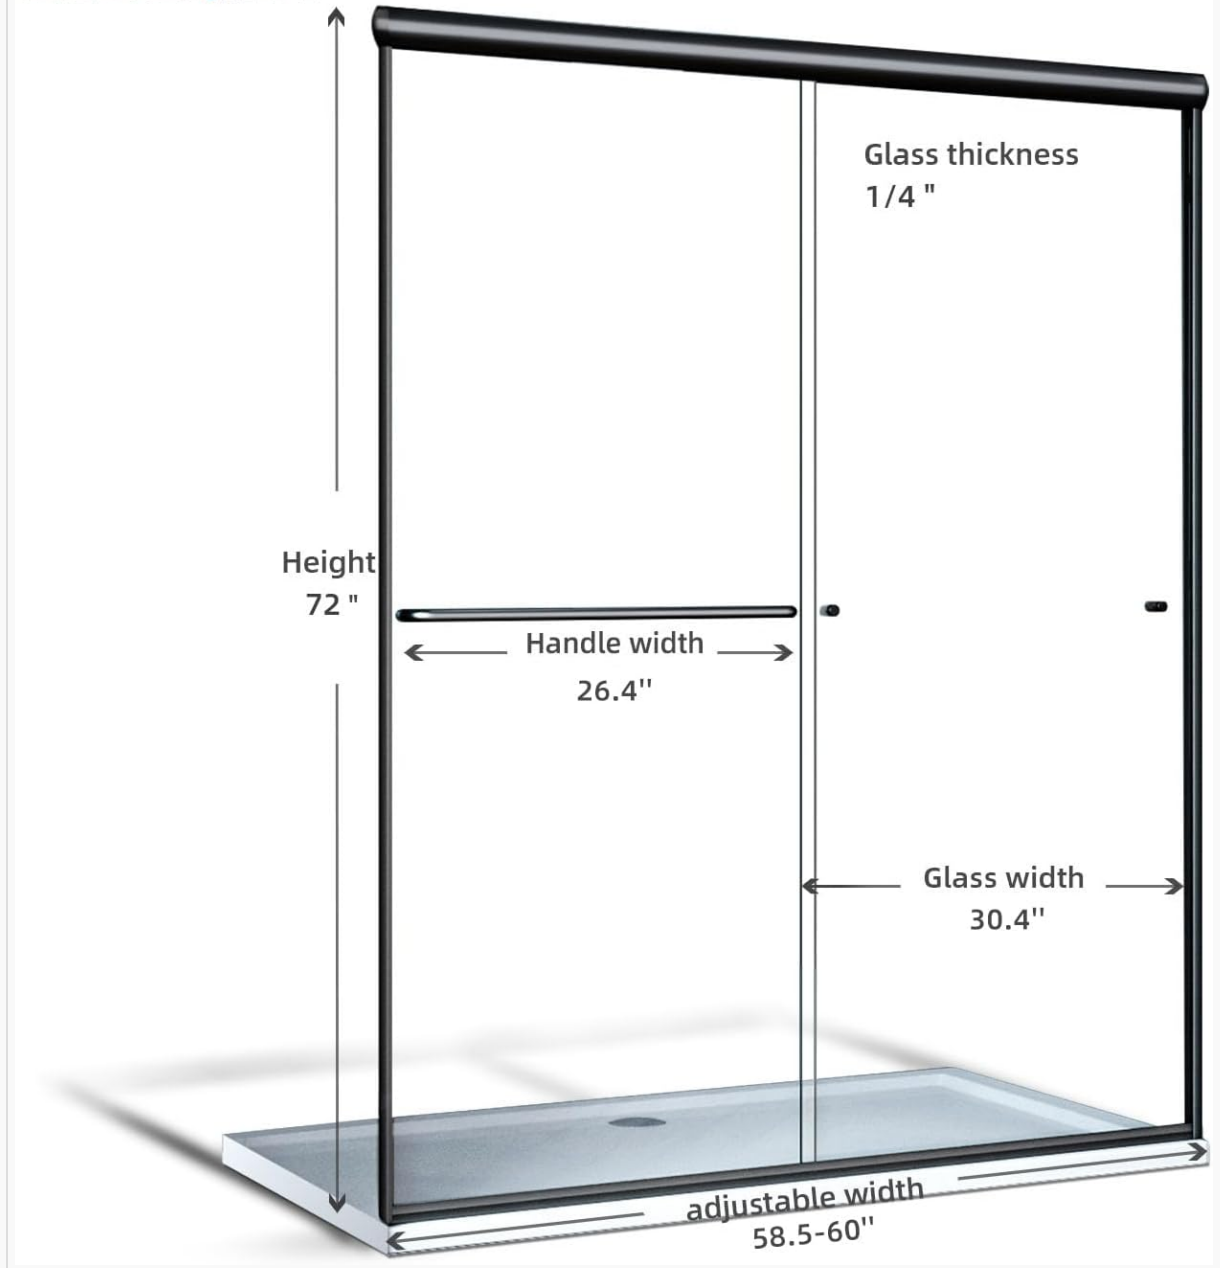

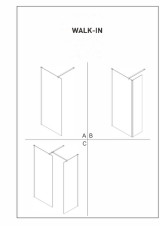





*Image 9.1: Dimensional diagram of the ELEGANT shower door.*

## 10. CUSTOMER SUPPORT

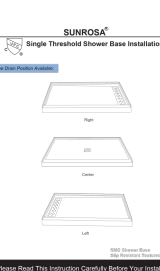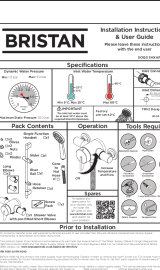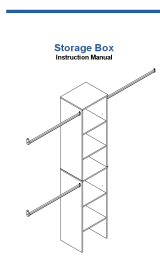For any questions, missing parts, or assistance with installation, please contact ELEGANT customer service. Our service representatives are available to help you.

**Returns:** This product is eligible for 30-day easy returns.

For more information, visit the [ELEGANT Store on Amazon](#).

 <p>Diagram showing the WALK-IN shower enclosure (WR60-B/C) with dimensions and labels A, B, and C. The MARENZA logo is at the bottom left.</p>	<p><a href="#">Marenza Bellini WALK-IN Shower Enclosure (WR60-B/C) - Installation &amp; Care Guide</a></p> <p>Comprehensive installation, assembly, and maintenance guide for the Marenza Bellini WALK-IN shower enclosure (model WR60-B/C). Features clear glass and matte black finish. Includes preparation, product care, and step-by-step assembly instructions with detailed diagram descriptions.</p>
 <p>Technical documentation for Megaflys Celeste Lucca shower corners, including product details, cleaning and maintenance instructions, warranty information, and technical specifications. Available in straight and curved designs with chrome or black finishes.</p>	<p><a href="#">Megaflys Celeste Lucca Shower Corner Documentation</a></p> <p>Technical documentation for Megaflys Celeste Lucca shower corners, including product details, cleaning and maintenance instructions, warranty information, and technical specifications. Available in straight and curved designs with chrome or black finishes.</p>
 <p>Instruction Manual Rain Shower System Manuel d'instruction Système de douche à effet de pluie</p> <p>D-3-3(YF)</p>	<p><a href="#">Instruction Manual Rain Shower System</a></p> <p>This manual provides instructions for installing and maintaining the MONDAWE Wall Mounted Rain Shower System, available in Models A, B, and C. It includes installation conditions, parts lists, dimensions, and cleaning guidelines.</p>
 <p>SUNROSA® Single Threshold Shower Base Installation</p> <p>Diagram showing the Sunrosa Single Threshold Shower Base installation steps: Right, Center, Left.</p>	<p><a href="#">Sunrosa Single Threshold Shower Base Installation Guide</a></p> <p>Comprehensive installation guide for Sunrosa Single Threshold Shower Bases, covering preparation, included parts, suggested tools, specifications, and warranty information. Learn how to properly install your SMC shower base for optimal performance and longevity.</p>
 <p>BRISTAN Installation Instructions &amp; User Guide</p> <p>Diagram showing the Bristan SOQ3 SHXAR C (D2) exposed sequential and concentric mini valve shower installation and user guide.</p>	<p><a href="#">Bristan SOQ3 SHXAR C (D2) Exposed Sequential and Concentric Mini Valve Shower Installation and User Guide</a></p> <p>Comprehensive installation and user guide for the Bristan SOQ3 SHXAR C (D2) exposed sequential and concentric mini valve shower. Includes specifications, pack contents, installation requirements, maintenance, troubleshooting, and safety information.</p>
 <p>Storage Box Instruction Manual</p> <p>Diagram showing the Storage Box closet system assembly.</p>	<p><a href="#">Storage Box Instruction Manual</a></p> <p>Comprehensive instruction manual for assembling a Storage Box closet system, detailing parts, hardware, and step-by-step assembly instructions.</p>