OVE Decors 15SSB-603660-WHTWM

OVE Decors Adena 60 x 36 Inch Anti-slip Shower Base with Side Hidden Drain User Manual

Model: 15SSB-603660-WHTWM

PRODUCT OVERVIEW

The OVE Decors Adena shower base offers a versatile and sleek design for your bathroom. Constructed from fiberglass-reinforced acrylic, it features an anti-skid textured surface for safety. Its unique low-profile design includes a hidden side drain, combining functionality with a modern aesthetic. This base can be installed with either a left or right orientation to suit various bathroom layouts.
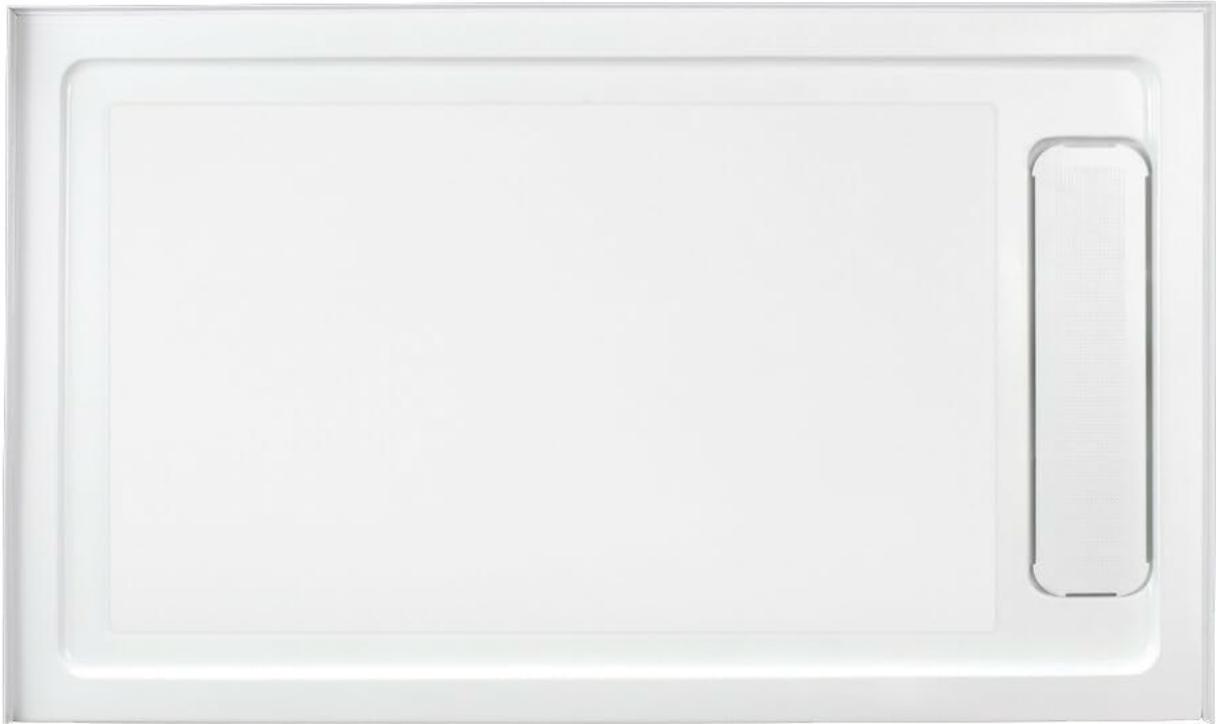
Figure 1: OVE Decors Adena 60 x 36 inch shower base with side hidden drain.

SETUP AND INSTALLATION

Proper installation is crucial for the longevity and performance of your OVE Decors shower base. It is recommended to consult a professional plumber or contractor for installation.

Required Tools and Materials (Not Included):

- Mortar mix or concrete (for base support)
- Caulking gun and waterproof sealant (silicone recommended)
- Level
- Measuring tape
- Standard plumbing tools
- Safety glasses and gloves

Installation Steps:

1. **Prepare the Subfloor:** Ensure the subfloor is clean, level, and structurally sound. Any unevenness can affect the

stability and drainage of the shower base.

2. **Position the Base:** Carefully place the shower base into the desired alcove or corner. Verify that the base fits correctly within the framed area.

Figure 2: Shower base positioned for installation within framing.

3. **Create a Mortar Bed:** Apply a generous layer of mortar mix or concrete evenly across the subfloor where the shower base will rest. This provides solid support and prevents flexing or creaking.

4. **Set the Base:** Gently press the shower base into the mortar bed. Use a level to ensure the base is perfectly horizontal in all directions. Allow the mortar to cure completely as per manufacturer instructions.

5. **Seal Side Flaps:** The shower base features side flaps designed to prevent water leakage. Apply a waterproof sealant (caulk) along these flaps where they meet the wall studs. This creates a watertight seal between the base and the wall structure.

Figure 3: Close-up of the hidden side drain and anti-slip texture.

6. **Connect the Drain:** Install the drain assembly according to the plumbing codes and the drain manufacturer's instructions. Ensure all connections are tight and leak-free. The hidden drain design allows for a seamless appearance once the cover is in place.

Figure 4: View of the drain opening before the cover is installed.

7. **Install Wall Surrounds:** Once the base is secure and the drain connected, proceed with installing your chosen wall surrounds (tile, panels, etc.) above the sealed side flaps.

OPERATING INSTRUCTIONS

The OVE Decors shower base is designed for straightforward use. Simply step onto the anti-skid textured surface for a secure footing during your shower. The hidden side drain efficiently channels water away, maintaining a clean and minimalist appearance.

Figure 5: Detail of the anti-skid textured surface for enhanced safety.

Maintenance and Care

To ensure the longevity and appearance of your shower base, follow these maintenance guidelines:

- **Regular Cleaning:** Clean the shower base regularly with a soft cloth or sponge and a non-abrasive, mild bathroom cleaner. Avoid harsh chemicals, abrasive scrubbers, or solvents, as these can damage the acrylic surface.
- **Drain Cleaning:** Periodically remove the hidden drain cover and clean any hair or debris from the drain grate to prevent clogs and ensure proper water flow.
- **Avoid Heavy Impact:** While durable, avoid dropping heavy objects onto the shower base to prevent cracks or damage.
- **Check Sealant:** Inspect the sealant around the edges of the base periodically for any signs of wear or cracking. Reapply sealant as needed to maintain a watertight seal.

Troubleshooting

Water Pooling on Base:

If water is pooling on the shower base after use, it may indicate an issue with the initial leveling of the base or a clogged drain.

- **Check for Clogs:** Remove the hidden drain cover and inspect the drain for any obstructions (hair, soap scum, etc.). Clear any blockages.
- **Verify Leveling:** If the issue persists and is significant, it might suggest the base was not perfectly level during installation. This may require professional assessment and potential re-installation.

Leaking Around Base Edges:

Leaks can occur if the sealant around the side flaps or drain is compromised.

- **Inspect Sealant:** Examine all caulked areas for cracks, gaps, or deterioration.
- **Reapply Sealant:** Clean and dry the affected area thoroughly, then remove old sealant and apply a fresh bead of waterproof silicone sealant.

SPECIFICATIONS

Brand	OVE Decors
Model Number	15SSB-603660-WHTWM
Part Number	60 in. x 36 in. Rectangle White Acrylic
Size	60" x 36"
Product Dimensions	60 x 35.83 x 35.98 inches
Item Weight	47 pounds
Color	White
Style	Adena
Finish	White
Material	Acrylic (with fiberglass reinforcement)
Shape	Rectangular
Installation Method	Screw-In (typically refers to securing to studs, base itself is set in mortar)
Low Profile	7 cm (2.76 in.)
Included Components	Shower Base
Anti-skid Texture	Yes
Drain Type	Side Hidden Drain

WARRANTY INFORMATION

This OVE Decors shower base is covered by a **5-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use and service. For specific terms, conditions, and claim procedures, please refer to the official warranty document included with your purchase or contact OVE Decors customer support.

CUSTOMER SUPPORT

For technical assistance, missing parts, or warranty inquiries, please contact OVE Decors customer support. You can typically find contact information on the product packaging or the official OVE Decors website.

Online Resources: Visit the OVE Decors Store on Amazon for additional product information and support.