

[Manuals.plus](#) /

› [YASONIC](#) /

› YASONIC Corner Adhesive Shower Caddy (Model YS-K-403) Instruction Manual

YASONIC YS-K-403

YASONIC Corner Adhesive Shower Caddy (Model YS-K-403) Instruction Manual

This manual provides detailed instructions for the installation, use, and maintenance of your YASONIC Corner Adhesive Shower Caddy.

1. INTRODUCTION

The YASONIC Corner Adhesive Shower Caddy is designed to maximize space utilization in your bathroom. Constructed from rust-proof 304 stainless steel, this caddy offers a durable and elegant storage solution for your shower essentials. Its adhesive mounting system ensures easy, drill-free installation and removal without damaging your walls.



Image 1: YASONIC Corner Adhesive Shower Caddy in use, organized with various bath products.

2. PACKAGE CONTENTS

Please verify that all components are present in your package:

- 2 × Adhesive Shower Caddies (L-shaped)
- 1 × Soap Holder
- 5 × Adhesive Stickers
- 1 × User Manual

What's In The Box ?

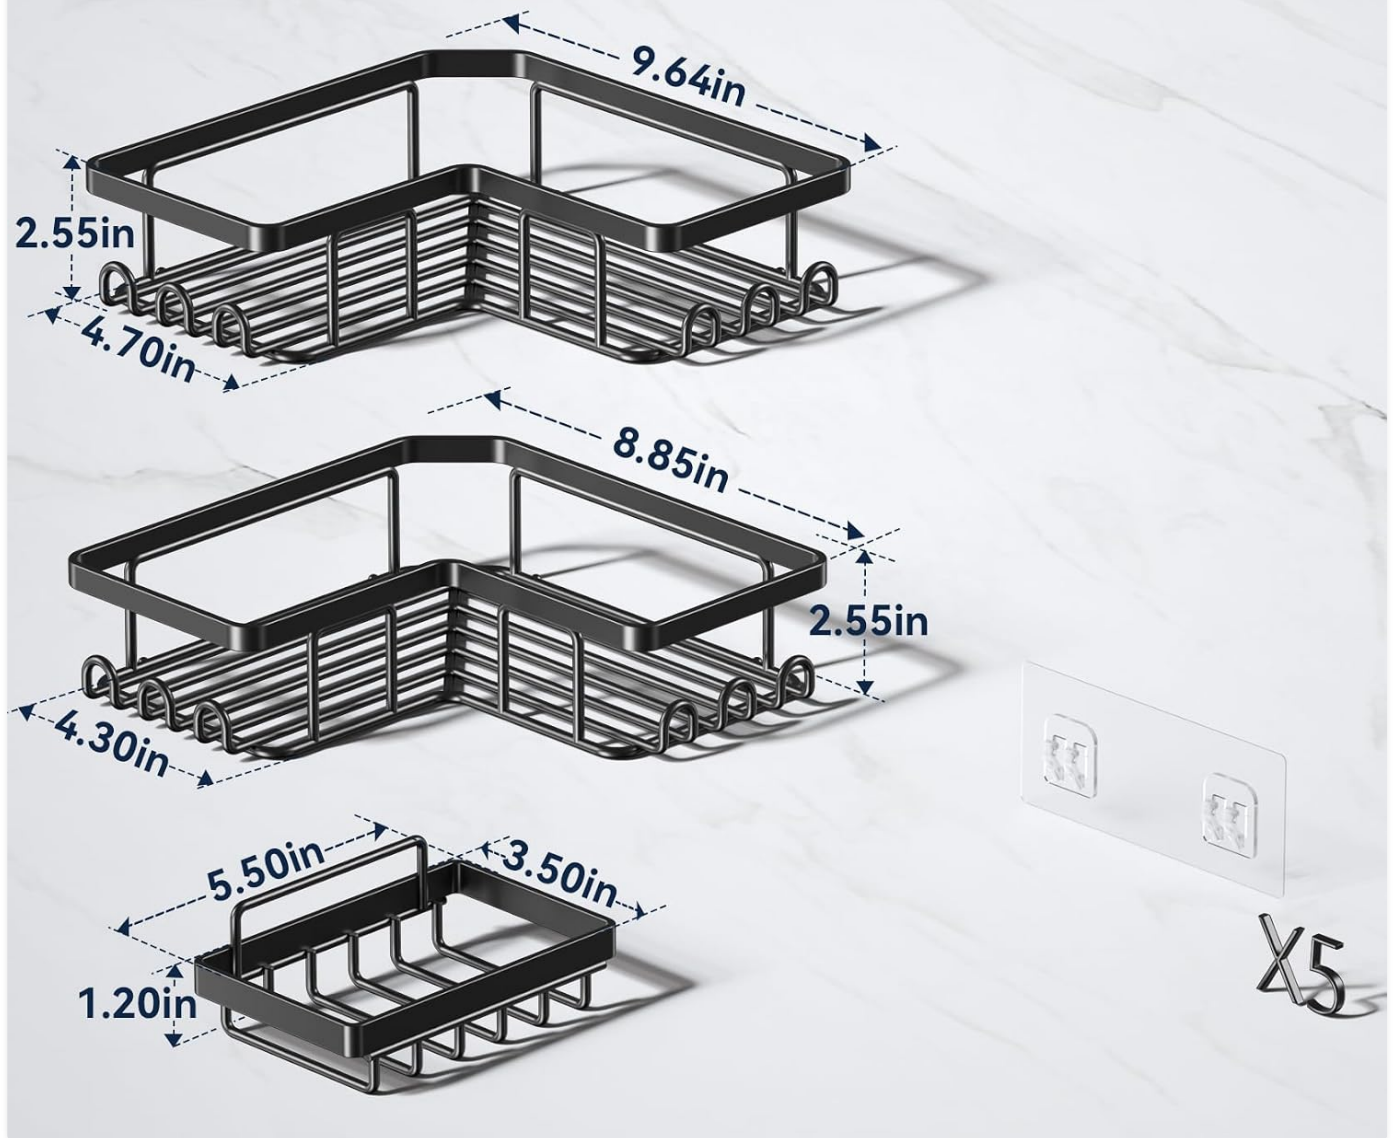


Image 2: Visual representation of all items included in the YASONIC Shower Caddy package, including dimensions.

3. SPECIFICATIONS

Feature	Description
Brand	YASONIC
Model Number	YS-K-403
Material	304 Stainless Steel
Color	Black
Product Dimensions	9.64"D x 9.64"W x 2.55"H

Shape	Corner (L-shaped)
Capacity	Up to 40 Pounds
Special Features	Rust Resistant, No Drilling, 12 Hooks, Soap Holder

4. SAFETY INFORMATION

- Ensure the installation surface is clean, dry, and smooth for optimal adhesive performance.
- Do not exceed the maximum weight capacity of 40 pounds per caddy.
- This caddy is designed for 90-degree wall corners only. It is not suitable for rounded or curved corners.
- Avoid installing on wallpaper, stucco walls, lime walls, or concrete walls, as the adhesive may not hold securely or could cause damage.
- Keep small hooks and accessories out of reach of children.

5. SETUP AND INSTALLATION

Follow these steps for a secure and lasting installation:

1. **Clean and Dry the Surface:** Thoroughly clean the desired installation area on your wall. Ensure the surface is completely dry and free from dust, oil, or moisture.
2. **Mark the Position:** Hold the shower caddy against the wall in your desired location. Use a pencil or marker to lightly mark the positions where the adhesive stickers will be placed. Ensure the caddy is level and fits snugly into the 90-degree corner.
3. **Apply Adhesive Stickers:** Peel off the protective film from the back of each adhesive sticker. Carefully align each sticker with your marked positions and press firmly against the wall. Smooth out any air bubbles to ensure full contact.
4. **Wait for Curing:** Allow the adhesive stickers to cure for at least 24 hours before hanging the caddies. This waiting period is crucial for the adhesive to achieve maximum strength and ensure stability.
5. **Hang the Caddies:** After the curing period, carefully align the caddy with the hooks on the adhesive stickers and hang it securely.
6. **Attach Hooks and Soap Holder:** The included 12 hooks can be attached to the caddy's frame as desired for hanging loofahs, razors, or washcloths. The separate soap holder can be installed using an additional adhesive sticker in a convenient location.

Suitable for Various Walls

✓ Suitable for:



Smooth Tiles



Smooth Marble



Smooth Glass



Smooth Metal



Smooth Wooden Walls

✗ Not Suitable for:



Wallpaper Walls



Whitewashed Walls



Lime Walls



Concrete Walls

Image 3: Detailed steps for installing the YASONIC Corner Adhesive Shower Caddy.

Suitable Surfaces

Suitable for:



Smooth Tiles



Smooth Marble



Smooth Glass



Smooth Metal



Smooth
Wooden Walls

Not Suitable for: 



Wallpaper Walls



Whitewashed Walls



Lime Walls



Concrete Walls

Image 4: Guide to suitable and unsuitable wall surfaces for installation.



Image 5: Illustration of the 90-degree wall corner requirement for proper caddy fit.

Your browser does not support the video tag.

Video 1: Official YASONIC video demonstrating the installation and features of the corner shower shelf.

6. OPERATING INSTRUCTIONS

Once installed, your YASONIC shower caddy is ready for use. Place your shampoo, conditioner, body wash, and other bath products securely within the caddies. Utilize the integrated hooks for hanging loofahs, razors, or washcloths, and the soap holder for bar soap.

The L-shaped design efficiently uses corner space, and the robust construction supports up to 40 pounds, accommodating multiple large bottles.


High Capacity

Utilize corner space



Image 6: The caddy's high capacity, holding numerous bath product bottles.

Stable & Sturdy

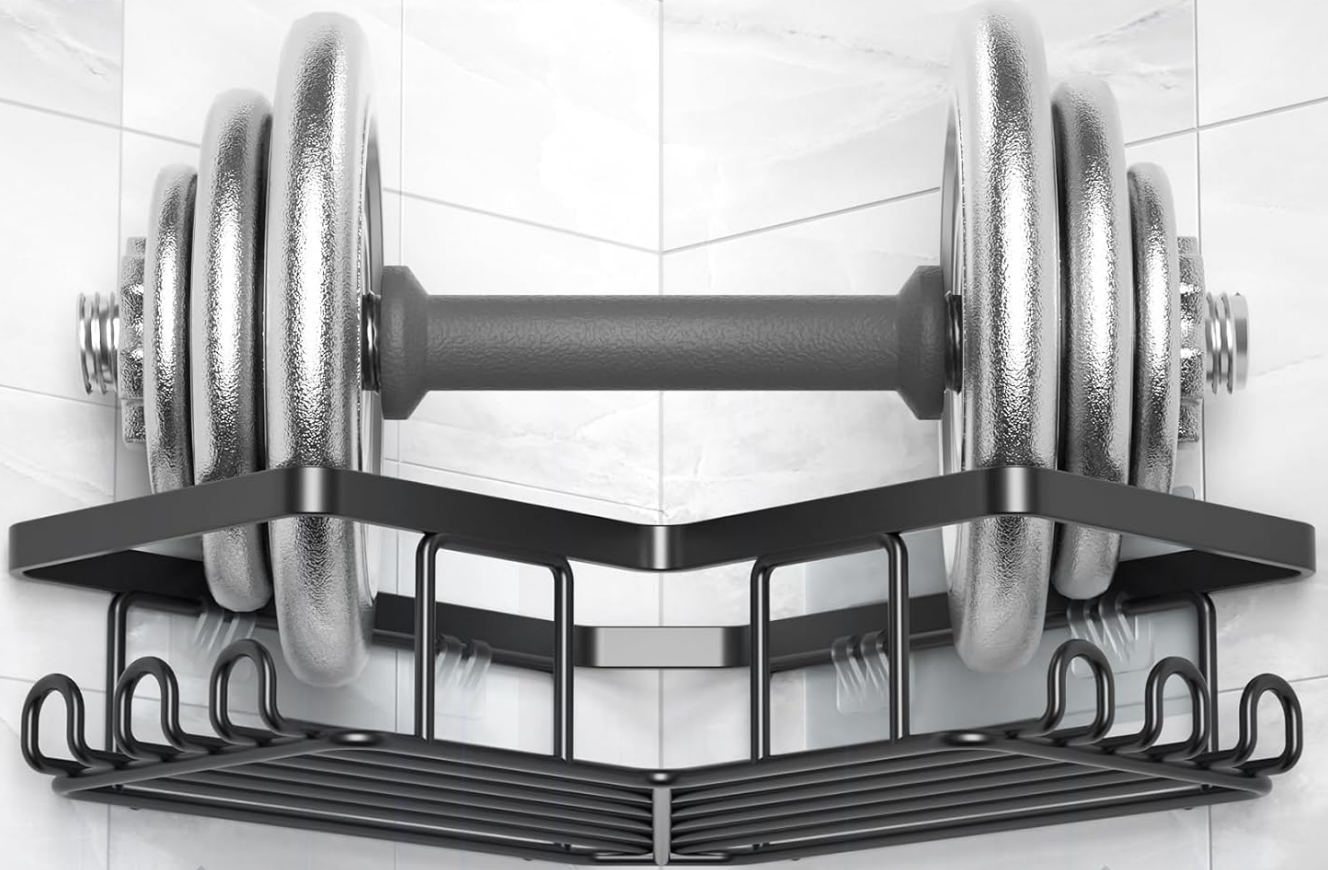

Maximum load **40** Pounds

Image 7: Demonstration of the caddy's robust construction and 40-pound weight capacity.

3-in-1 Design

Knows you more



Image 8: The caddy's integrated 12 hooks and separate soap holder for additional storage.

7. MAINTENANCE

The YASONIC shower caddy is made from 304 stainless steel with a rust-proof coating, making it easy to maintain.

- **Cleaning:** Wipe down the caddies regularly with a soft cloth and mild soap or a non-abrasive bathroom cleaner. Rinse thoroughly with water.
- **Drying:** For best results and to prevent water spots, dry the caddies with a clean, soft cloth after cleaning.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish and rust-proof coating.

Upgrade **304** Stainless Steel



Passed strict anti-rust testing

Image 9: Water draining from the rust-proof stainless steel caddy.

Why Rust-Proof ?

- Baking finish layer
- High temperature sealing layer
- Anodized layer
- Chemical polishing layer
- Anti-corrosion and anti-rust layer



8. TROUBLESHOOTING

- **Caddy is not sticking or falls off:**

- Ensure the installation surface was thoroughly cleaned and dried before applying the adhesive.
- Verify that the surface is smooth tile, marble, tempered glass, wood, or solid metal. The adhesive is not suitable for rough, porous, or painted surfaces like wallpaper, stucco, lime, or concrete walls.
- Confirm that you waited the recommended 24 hours for the adhesive to cure before placing items on the caddy.
- Check if the caddy is overloaded. The maximum capacity is 40 pounds.

- **Difficulty removing adhesive:**

- To remove the adhesive stickers without damaging the wall, heat the adhesive with a hairdryer for 3-5 minutes. This will soften the adhesive, making it easier to peel off.

9. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your YASONIC Corner Adhesive Shower Caddy, please refer to the contact information provided with your purchase or visit the official YASONIC website for customer support.

© 2025 YASONIC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question