

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [iPormis](#) /

› iPormis Queen Size Platform Bed Frame (Model 620B1) Instruction Manual

## iPormis 620B1

# iPormis Queen Size Platform Bed Frame Instruction Manual

MODEL: 620B1

## 1. IMPORTANT SAFETY INFORMATION

---

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Weight Limit:** Do not exceed the maximum weight capacity of 800 lbs.
- **Assembly:** Follow all assembly instructions carefully. Ensure all bolts and screws are securely tightened before use.
- **Sharp Edges:** Be cautious of any sharp edges during unpacking and assembly.
- **Children:** Keep small parts away from children during assembly to prevent choking hazards.
- **Placement:** Place the bed frame on a level surface.

## 2. PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x Instruction Manual
- 1 x Metal Bed Frame
- 1 x Wingback Headboard
- 12 x Wooden Slats
- Installation Tools & Accessories (screws, bolts, Allen wrench)



Figure 2.1: All components included in the package.

### 3. SETUP (ASSEMBLY)

The iPormis Queen Size Platform Bed Frame is designed for straightforward assembly. All necessary tools are included. It is recommended to assemble with two people for ease and speed.

1. **Unpack:** Carefully remove all components from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Connect the side rails to the headboard and footboard using the provided bolts and Allen wrench. Ensure all connections are firm.
3. **Install Support Legs:** Attach the reinforced bed legs to the frame as indicated in the detailed instructions.
4. **Place Slats:** Position the wooden slats across the frame. The Velcro-secured wooden slats ensure stability and simplify installation.
5. **Secure Slats:** Ensure the EVA foam mute bars are properly placed between the steel frame and wooden slats to eliminate noise.



Figure 3.1: Details of the sturdy metal frame, thick solid wood slats, and reinforced bed legs.



## Velcro Slats Attached

Offer extre stability between slats and foudation plus easy installing

## EVA Foam Mute Bars

Avoid direct contact between steel frame and wood slats plus noises eliminating



Figure 3.2: Velcro slats and EVA foam mute bars for silent and stable support.

## 4. OPERATING (USAGE)

The iPormis Queen Size Platform Bed Frame is designed for comfort and functionality, eliminating the need for a box spring.

- **Mattress Placement:** Place your mattress directly onto the wooden slats. No box spring is required.
- **Recommended Mattress Height:** For optimal aesthetic and comfort, a mattress height of 8-12 inches is recommended.
- **Under-Bed Storage:** The frame provides 8 inches of clearance underneath, offering practical space for storing household items.
- **Headboard Features:** The soft, button-tufted wingback headboard provides comfortable back support. The winged sides offer a convenient shelf for small items like glasses or a phone.



Figure 4.1: The iPormis Queen Size Platform Bed Frame in a bedroom setting.



Figure 4.2: Illustration of the 8-inch under-bed storage space.

# QUEEN SIZE



Weight Capacity



30 Mins Assembly

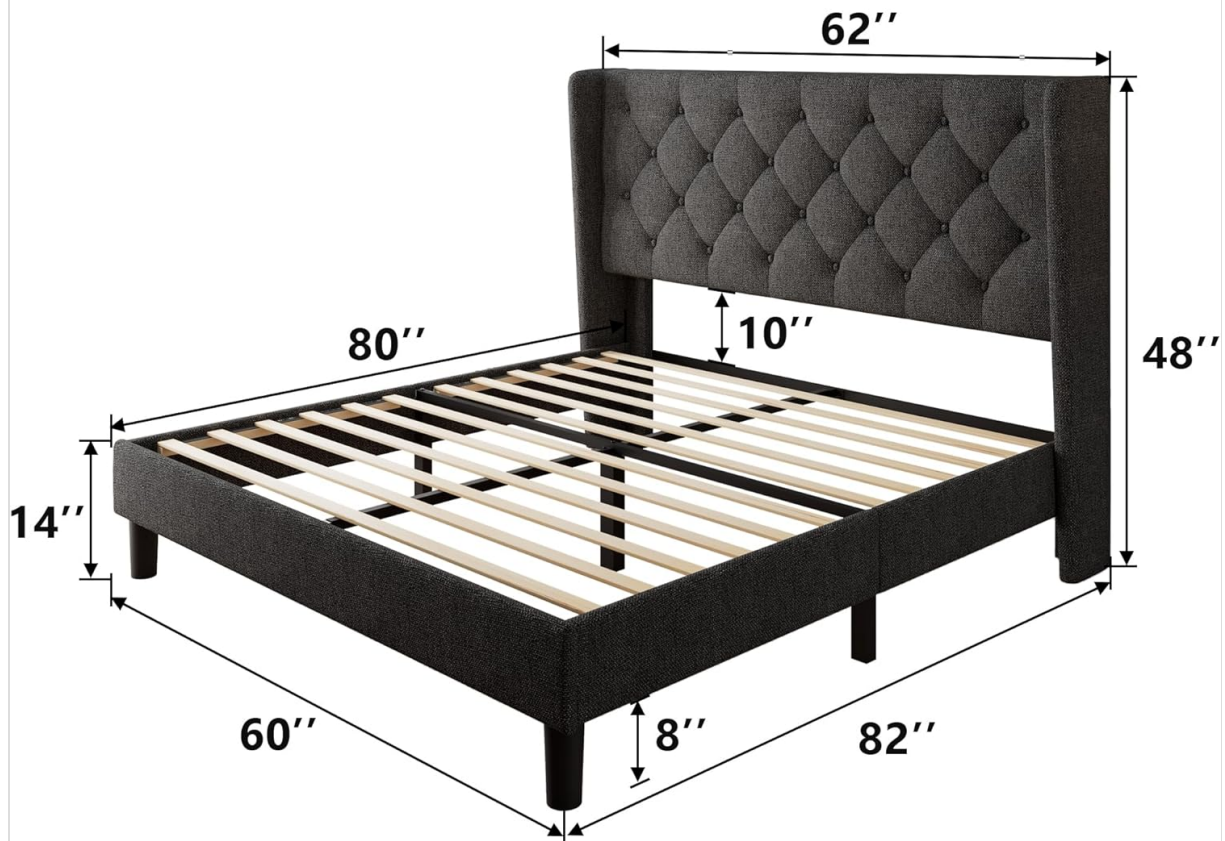


Figure 4.3: Features of the soft upholstered wingback headboard.

## 5. MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Cleaning:** The upholstered fabric should be dry cleaned only. For minor spills, gently blot with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the headboard and frame with a soft cloth or vacuum with a brush attachment.
- **Tighten Fasteners:** Periodically check and re-tighten all bolts and screws to ensure the frame remains stable and noise-free.

## 6. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common solutions:

- **Squeaking Noises:** If the bed frame develops squeaks, check all connections and tighten any loose bolts. Ensure the EVA foam mute bars are correctly positioned between the slats and the metal frame.
- **Unstable Frame:** Verify that all legs are securely attached and that the bed is placed on a flat, even surface. Re-tighten all assembly hardware.
- **Mattress Sliding:** The design is intended to prevent mattress sliding. If your mattress moves

excessively, ensure it is properly centered on the slats and that the bed frame is level.

## 7. SPECIFICATIONS

Attribute	Detail
Brand	iPormis
Model Number	620B1
Size	Queen
Color	Dark Grey
Product Dimensions	82"L x 60"W x 48"H
Item Weight	74 Pounds
Weight Capacity	800 LBS
Under-Bed Clearance	8 Inches
Upholstery Fabric Type	Linen
Finish Type	Steel, Wooden
Assembly Required	Yes
Box Spring Required	No
Product Care Instructions	Dry Clean Only
UPC	194858986736



Figure 7.1: Key dimensions of the iPormis Queen Size Platform Bed Frame.

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or contact the retailer where the product was purchased. For further assistance or support, please contact iPormis customer service.

**Brand:** iPormis