

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunrosa](#) /

› [Sunrosa Aluminum Bathroom Medicine Cabinet User Manual \(Model MC48275\)](#)

Sunrosa MC48275

Sunrosa Aluminum Bathroom Medicine Cabinet User Manual

MODEL: MC48275

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Sunrosa Aluminum Bathroom Medicine Cabinet, Model MC48275. Please read all instructions carefully before beginning installation or use to ensure proper function and safety.

Safety Information

Observe the following safety precautions during handling, installation, and use of the medicine cabinet:

- Always exercise caution when handling and installing this product.
- Keep hands and fingers clear of the door when it is closing to prevent injury.
- Do not install the cabinet in a location where it could be easily dislodged or where children can access it unsupervised.
- Ensure the cabinet is securely mounted to a stable wall structure.

Package Contents

Verify that all components are present before beginning installation:

- Medicine Cabinet Unit (with pre-installed doors and hinges)
- 4 Adjustable Tempered Glass Shelves
- Mounting Hardware (screws, anchors, brackets)
- Installation Template (if included)
- Side Mirror Panels (for surface mount installation)

Specifications

Brand	Sunrosa
Model Number	MC48275
Product Dimensions	4.75"D x 48"W x 27.5"H
Item Weight	67.8 pounds
Frame Material	Aluminum
Door Style	Mirrored (Triple Doors)
Number of Shelves	4 (Adjustable Tempered Glass)
Hinges	BLUM Self-closing Hinges
Mounting Type	Wall Mount (Surface or Recessed)

Installation

The Sunrosa medicine cabinet can be installed as either a surface mount or a recessed mount. Ensure you have the necessary tools (e.g., drill, level, measuring tape, screwdriver) and assistance for safe installation due to the cabinet's weight.

General Preparation:

1. Unpack the cabinet and all components. Inspect for any damage.
2. Determine the desired mounting height and location. Use a level to mark the horizontal line for the top or bottom of the cabinet.
3. Locate wall studs if possible for secure mounting. If studs are not available, use appropriate drywall anchors.

Surface Mount Installation:

For surface mounting, the cabinet is installed directly onto the wall surface.

1. Attach the bottom mounting bracket to the wall using screws and anchors, ensuring it is level. If possible, secure into wall studs.
2. Carefully lift the cabinet and rest it on the bottom bracket.
3. Secure the top of the cabinet to the wall using the provided top brackets and screws, ensuring the cabinet is plumb and level.
4. Apply the side mirror panels to the exposed sides of the cabinet. Note that the adhesive is strong, so align carefully before pressing firmly.

Surface Mount Medicine Cabinets



Image: Sunrosa medicine cabinet installed as a surface mount above a bathroom vanity.

Recessed Mount Installation:

For recessed mounting, a wall opening is required. The rough opening dimensions should accommodate the cabinet body, typically slightly smaller than the overall cabinet dimensions to allow for the frame to overlap the wall opening.

1. Create a wall opening according to the cabinet's recessed dimensions. Ensure the opening is square and plumb.
2. Insert the cabinet body into the wall opening.
3. Secure the cabinet to the wall studs or framing within the opening using appropriate screws through the pre-drilled holes in the cabinet frame.
4. Ensure the cabinet frame sits flush against the finished wall surface.

Recessed Mount Medicine Cabinets



Image: Sunrosa medicine cabinet installed as a recessed mount above a bathroom vanity.

Installing Adjustable Shelves:

1. Locate the shelf clips inside the cabinet.
2. Insert the shelf clips into the desired height positions. Ensure all four clips for a single shelf are at the same level.
3. Carefully place the tempered glass shelves onto the installed clips. Some users have noted a tight fit; ensure proper alignment and gentle pressure to avoid damage. If a shelf is excessively tight, ensure clips are fully seated.

Mirror Everywhere, Inside and Out

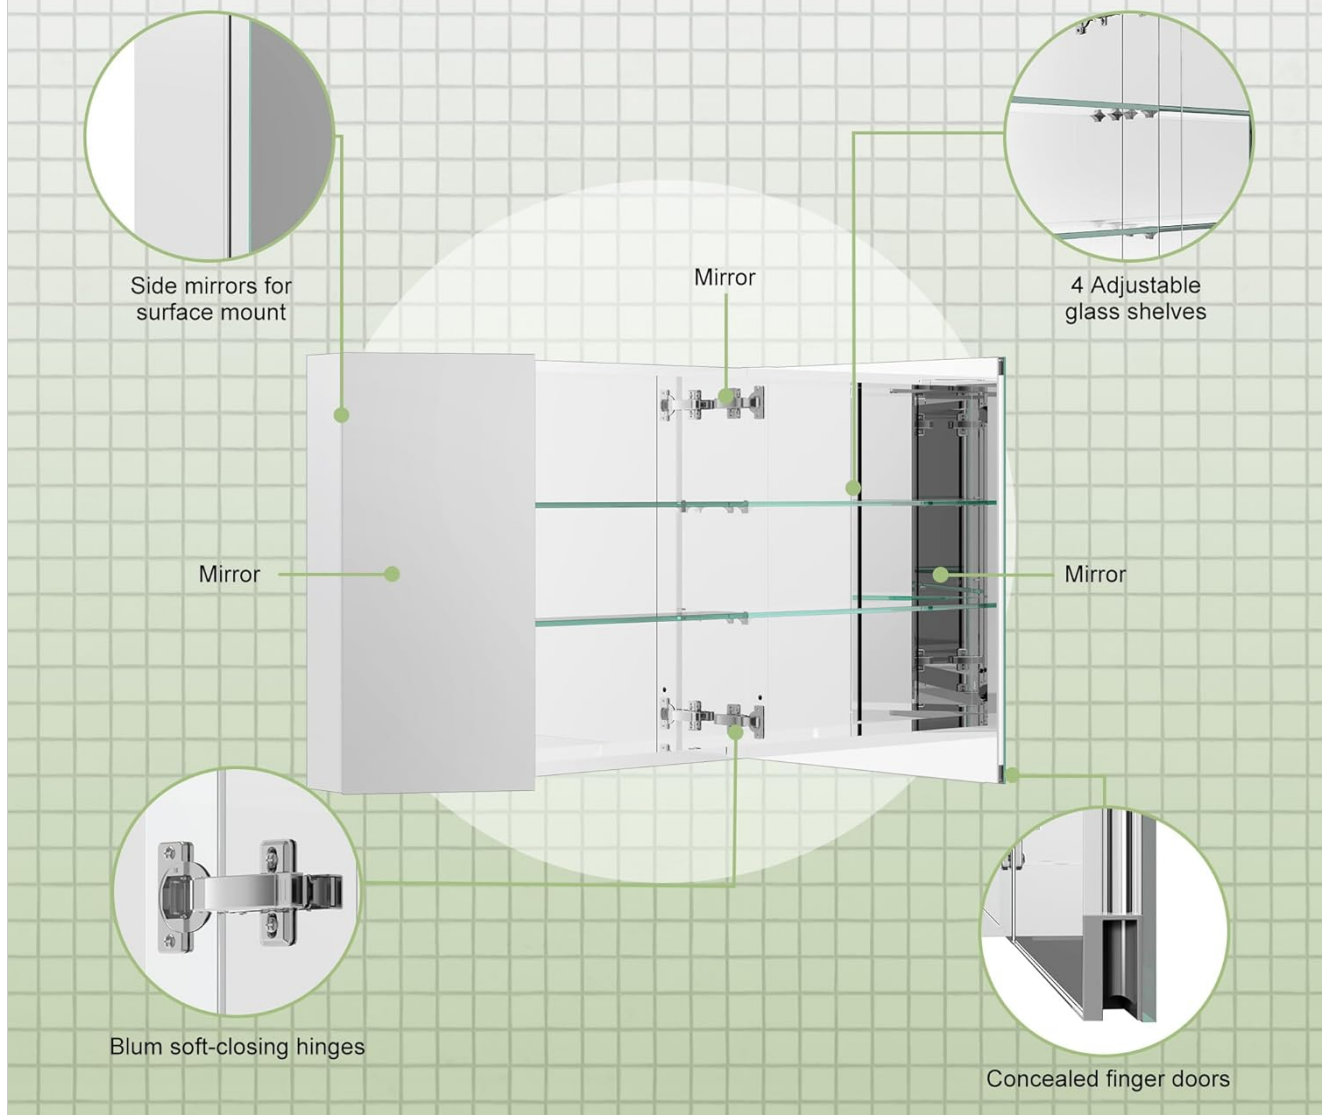


Image: Diagram illustrating key features including adjustable glass shelves and Blum soft-closing hinges.

Operation

Opening and Closing Doors:

The cabinet features three mirrored doors equipped with BLUM self-closing hinges. These hinges allow the doors to close slowly and quietly without slamming. To open, gently pull the door using the concealed finger grip. To close, push the door gently; the self-closing mechanism will engage and pull the door shut smoothly.

Adjusting Shelf Height:

The four tempered glass shelves are adjustable. To change a shelf's height, carefully remove any items from the shelf, then lift the shelf off its clips. Reposition the shelf clips to the desired height and re-insert the shelf. Ensure the shelf is stable before placing items on it.

Super Ample Storage for Everyone

Adjustable Shelves Respond to Demand



Image: Interior view of the medicine cabinet with doors open, showing adjustable shelves.

Maintenance

Regular cleaning and maintenance will ensure the longevity and appearance of your medicine cabinet.

- **Cleaning Mirrors and Glass:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the mirror or cabinet, to avoid liquid seeping into edges.
- **Cleaning Aluminum Frame:** Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Hinge Maintenance:** The BLUM hinges are designed for durability and smooth operation. No regular lubrication is typically required. If doors become misaligned, minor adjustments can be made using a screwdriver on the hinge screws.

Troubleshooting

- **Doors not closing smoothly:** Check for any obstructions in the hinge area. Ensure the cabinet is installed

plumb and level. Hinge adjustments may be necessary.

- **Shelves are difficult to install or fit too tightly:** Verify that all shelf clips are fully seated and aligned at the same height. Ensure no debris is obstructing the clips or shelf edges.
- **Side mirror panels not adhering properly (surface mount):** Ensure the cabinet surface is clean and dry before application. Apply firm, even pressure across the entire panel.

Warranty and Support

Sunrosa is committed to product quality. If you are not completely satisfied with your product or receive a defective item, please contact us directly. We are available to resolve any issues or answer questions you may have regarding your medicine cabinet.

For support, please refer to the contact information provided at the point of purchase or visit the official Sunrosa website.

Product Dimensions Diagram

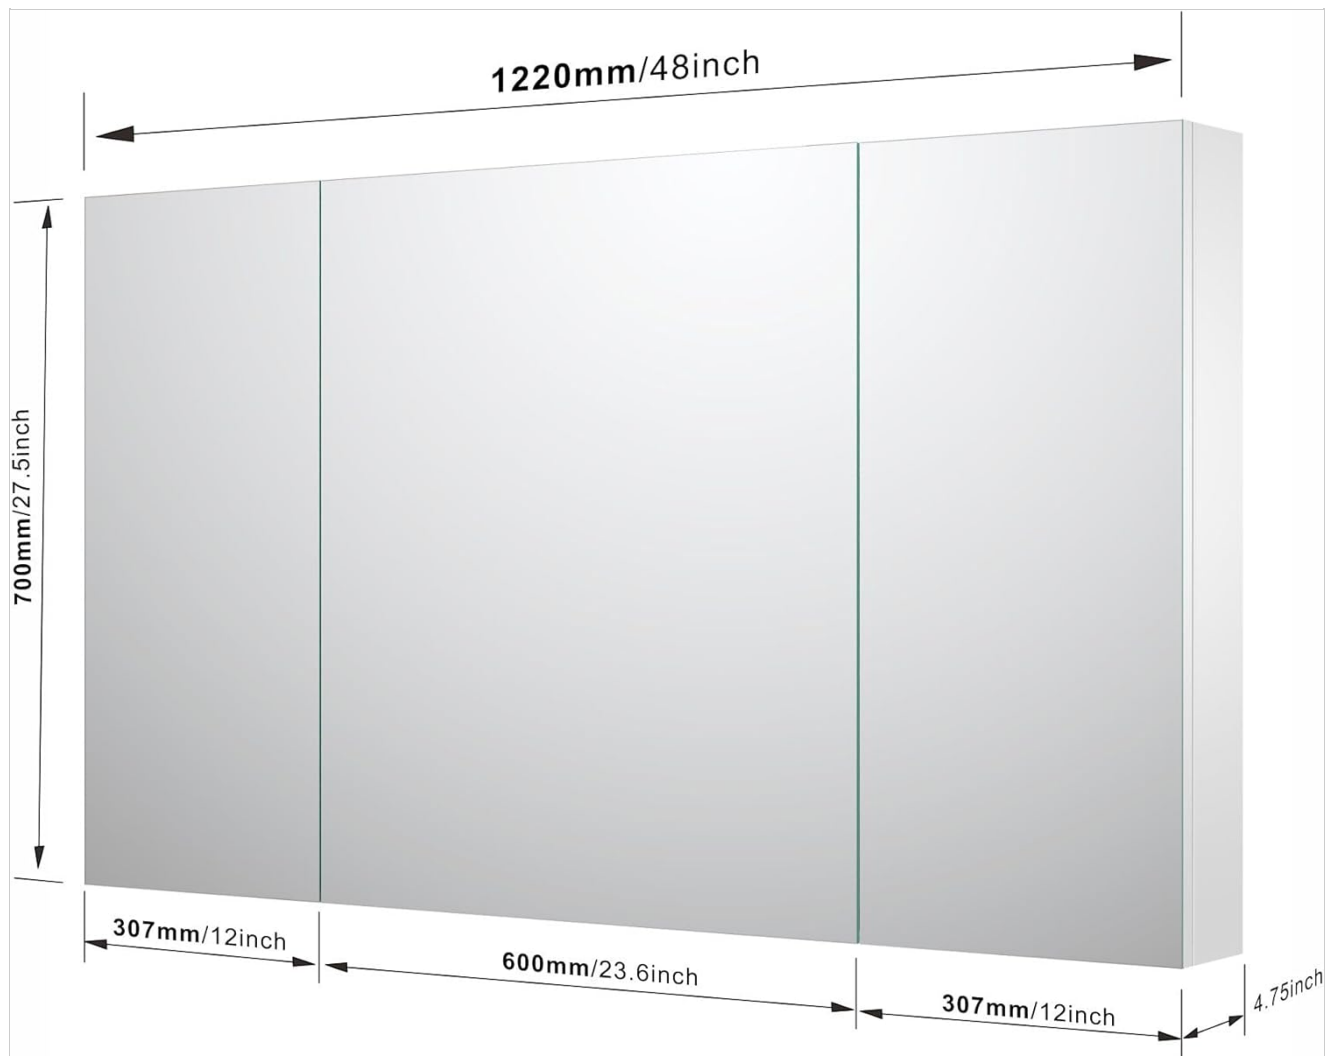


Image: Dimensional drawing of the 48-inch medicine cabinet, showing width (1220mm/48inch), height (700mm/27.5inch), and depth (12inch/307mm for doors, 4.75inch for cabinet body).