

P PURLOVE Double Shared Bed

P PURLOVE Double Twin Size House Platform Bed with Drawers Instruction Manual

Model: Double Shared Bed

PRODUCT OVERVIEW

The P PURLOVE Double Twin Size House Platform Bed with Drawers is designed to provide a comfortable and engaging sleeping solution for children. This unique bed frame features a house-shaped design with a pitched roof and window sections, creating a playful environment. It includes two side-by-side twin-size platform beds and two integrated under-bed storage drawers, making it suitable for shared rooms or maximizing space in multi-child families. Constructed from pine wood and high-quality MDF, the frame is built for stability and durability, supporting up to 250 lbs per bed without requiring a box spring.

Key Features:

- **House Bed Frame Design:** Features a pitched roof and window sections, offering a unique and playful aesthetic.
- **Twin Size Shared Beds:** Two side-by-side twin-size platform beds, ideal for siblings or shared spaces.
- **Integrated Storage Drawers:** Equipped with two large under-bed drawers for efficient space utilization and organization.
- **Solid Wood Construction:** Crafted from pine wood and high-quality MDF for durability and stability.
- **Slat Support System:** Each bed includes 14 wooden slats, eliminating the need for a box spring and supporting up to 250 lbs.

SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in serious injury.

- Ensure all components are securely fastened during assembly.
- Do not exceed the maximum weight capacity of 250 lbs per bed.
- Regularly check all bolts and screws to ensure they remain tight.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not allow children to jump on the bed or use it as a climbing structure beyond its intended design.
- Supervise children when using the slide (if applicable) and ensure proper landing area is clear.

PACKAGE CONTENTS

Verify that all parts listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image 1: Front view of the assembled P PURLOVE Double Twin Size House Platform Bed with Drawers, showing the house-shaped roof and two twin beds side-by-side, with two pull-out drawers at the bottom.

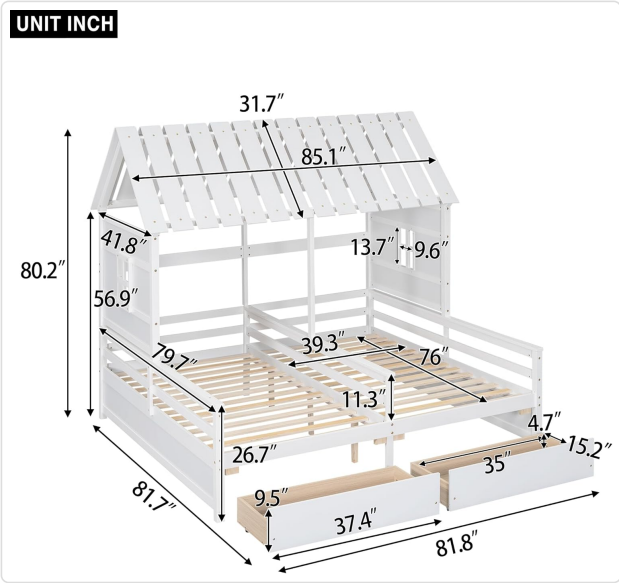


Image 2: Detailed dimensions diagram of the P PURLOVE Double Twin Size House Platform Bed, illustrating overall length, width, height, and individual component measurements.



Image 3: Angled view of the P PURLOVE Double Twin Size House Platform Bed, showcasing the house structure, two twin beds, and the integrated storage drawers.



Image 4: Front view of the P PURLOVE Double Twin Size House Platform Bed without bedding, highlighting the slat support system and the structure of the house frame.



Image 5: Side angled view of the P PURLOVE Double Twin Size House Platform Bed, showing the house frame, bed

platforms, and pull-out drawers.



Image 6: Side view of the P PURLOVE Double Twin Size House Platform Bed with one drawer extended, illustrating the storage capacity.



Image 7: Close-up view of the house-shaped window detail on the P PURLOVE Double Twin Size House Platform Bed frame.

SETUP AND ASSEMBLY

Assembly of the P PURLOVE Double Twin Size House Platform Bed requires two adults and approximately 2-3 hours. Follow the step-by-step instructions provided in the included assembly guide. Ensure all hardware is tightened securely, but do not overtighten to avoid damaging the wood.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify against the parts list.
2. **Assemble Bed Frames:** Begin by assembling the two individual twin-size platform bed frames according to the diagrams. Attach side rails, headboards, and footboards.
3. **Install Slats:** Securely place and fasten the wooden slats onto each bed frame. Ensure even spacing and firm attachment for mattress support.
4. **Construct House Frame:** Assemble the house-shaped roof and window sections. Attach these to the bed frames as indicated in the instructions.

5. **Assemble Drawers:** Put together the two under-bed storage drawers, ensuring the wheels are properly installed for smooth operation.
6. **Final Placement:** Position the assembled bed in its desired location. Ensure it is level and stable.

For visual guidance, please refer to the official product videos below:

Your browser does not support the video tag.

Video 1: Preview of the P PURLOVE L-shape twin house beds with fence, demonstrating its features and assembly process. This video is a short preview and provides a quick overview.

Your browser does not support the video tag.

Video 2: Preview of the P PURLOVE Grey House Bunk Beds with Slide, providing a detailed look at the design and functionality. While the color differs, the assembly principles are similar.

OPERATING INSTRUCTIONS

The P PURLOVE Double Twin Size House Platform Bed is designed for simple and safe use.

- **Sleeping Area:** Each twin bed is intended for one occupant. Ensure mattresses are properly sized (Twin) and fit snugly within the frame.
- **Storage Drawers:** The two under-bed drawers can be easily pulled out and pushed in for storing toys, bedding, or other items. Do not overload drawers to ensure smooth operation and prevent damage.
- **House Structure:** The house frame provides a decorative and playful element. Avoid hanging heavy objects from the roof or side panels.

MAINTENANCE

Regular maintenance will help prolong the life of your P PURLOVE bed.

- **Cleaning:** Wipe down the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Hardware Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and connections to ensure they are tight. Retighten as necessary.
- **Drawer Maintenance:** Keep drawer tracks free of debris to ensure smooth gliding. Lubricate with a silicone-based spray if drawers become stiff.
- **Structural Integrity:** Check for any signs of wear, cracks, or damage to the wood frame. Address any issues promptly to maintain safety.

TROUBLESHOOTING

Common issues and their solutions:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware.	Check and tighten all bolts and screws. Ensure the bed is on a level surface.
Drawers are difficult to open/close.	Overloaded, debris in tracks, or misaligned.	Reduce load in drawers. Clean tracks. Realign drawers if necessary.
Squeaking noises.	Loose connections or friction between wood parts.	Tighten all hardware. Apply a small amount of wax or silicone spray to friction points.

SPECIFICATIONS

Feature	Detail
Brand	P PURLOVE
Model	Double Shared Bed
Color	White
Size	Twin (Two beds)
Product Dimensions	85.1" L x 81.7" W x 80.2" H (Overall)
Material	Pine Wood, MDF
Weight Capacity (Each Bed)	250 LBS
Recommended Mattress Thickness	8 inches
Assembly Required	Yes
Special Feature	Integrated Drawers

WARRANTY AND SUPPORT





For warranty information or customer support, please refer to the documentation included with your purchase or contact P PURLOVE directly through their official website or the retailer where the product was purchased.


Return Policy: This product typically has a 90-day return/replacement policy from the date of purchase. Please check with your retailer for specific terms and conditions.

Protection Plans: Extended protection plans may be available for purchase. Consult your retailer for details on 2-Year or 3-Year protection plans.



Related Documents - Double Shared Bed

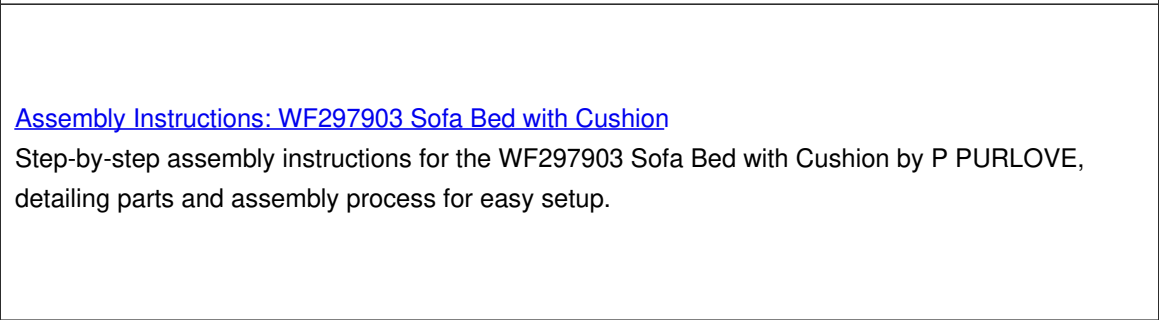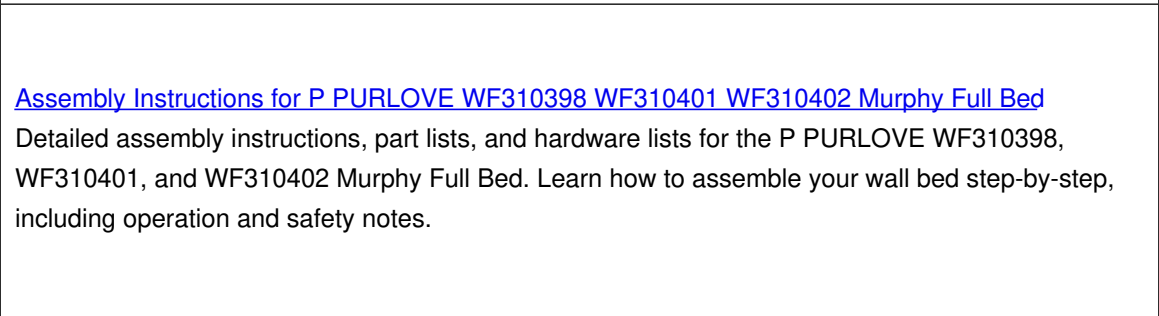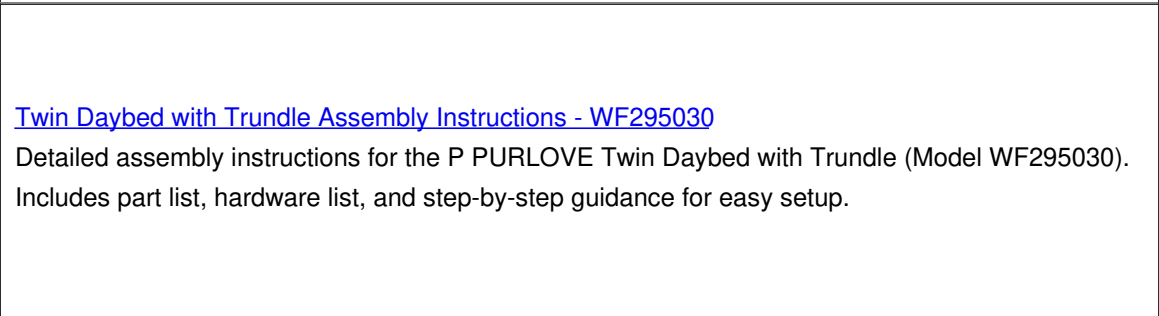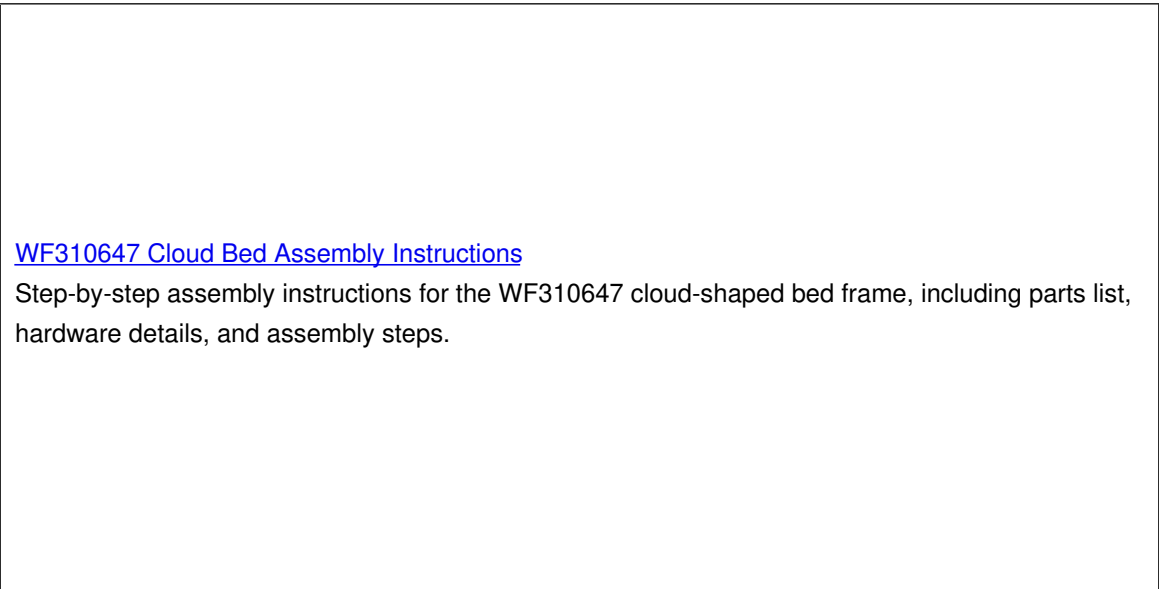

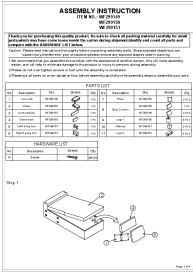

[Assembly Instructions for P PURLOVE Sectional Sofa WF299149, WF299150, WF299151](#)

Detailed assembly instructions for the P PURLOVE Sectional Sofa, including parts list, hardware list, and step-by-step visual guides for models WF299149, WF299150, and WF299151.



[P PURLOVE Sofa Assembly Instructions - WF310613, WF310614, WF310615](#)

Step-by-step assembly instructions for the P PURLOVE Sectional Sofa with Ottoman, including hardware and parts lists, and tips for setup and care. Model numbers: WF310613, WF310614, WF310615.