

[manuals.plus](#) /

› [DWIL](#) /

› [DWIL Tub and Tile Refinishing Kit Instruction Manual](#)

## DWIL Bathtub kit/50sq.ft White

# DWIL Tub and Tile Refinishing Kit Instruction Manual

Model: Bathtub kit/50sq.ft White

## 1. PRODUCT OVERVIEW

The DWIL Tub and Tile Refinishing Kit is a high-performance, water-based paint solution designed to revitalize and protect various bathroom surfaces. It offers a low odor and low VOC formula, making it a user-friendly option for DIY home improvement projects. This kit provides excellent coverage and a durable, semi-gloss finish, resistant to wear and scrubbing.

## 2. INCLUDED COMPONENTS

The DWIL Tub and Tile Refinishing Kit comes with all necessary tools for a smooth application process:

- Part A: Tub and Tile Refinishing Emulsion (1kg)
- Part B: Hardener (10g x 2)
- Masking Film (1)
- Paint Roller (1)
- Brush (1)
- Sandpaper (2)
- Gloves (1 pair)
- Masking Tape (1)



Image: The complete DWIL Tub and Tile Refinishing Kit, showing the paint can, hardener, and various application tools.

### 3. SURFACE PREPARATION

Proper surface preparation is crucial for optimal adhesion and a long-lasting finish. Ensure the area is well-ventilated before beginning.

- 1. Clean the Surface:** Thoroughly clean the bathtub, sink, or tiles to remove all dirt, grease, soap scum, and mildew. Use a degreaser or appropriate cleaner. Rinse completely with water and allow to dry fully.
- 2. Sand the Surface:** Lightly sand the entire surface using the provided sandpaper. This creates a textured surface for the paint to adhere to. Wipe away any dust after sanding.
- 3. Mask Off Areas:** Use the masking tape and film to protect surrounding areas that you do not wish to paint, such as faucets, drains, and walls.

**Important Note:** Do not use this product on artificial marble, metal, powdery, or peeling substrates. If the surface of your cast iron bathtub does not have enamel, do not use it. For darker substrate colors, two kits may be required for perfect coverage.

## BEFORE & AFTER

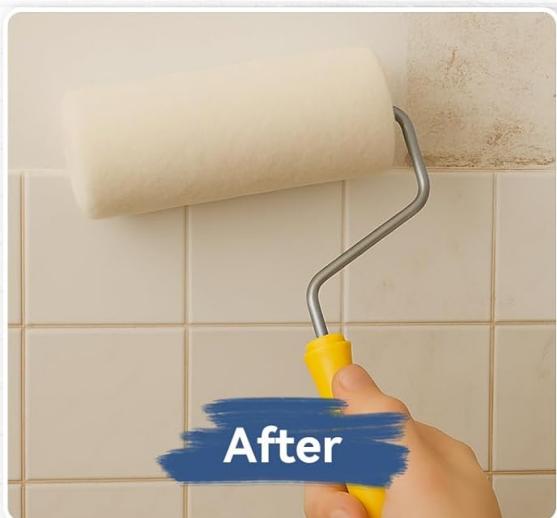


Image: Visual comparison of surfaces before and after refinishing, highlighting the effectiveness of the kit.

Video: A demonstration of the initial steps for refinishing tiles, including cleaning and smoothing the surface.

### 4. SETUP (MIXING PAINT)

Once the surface is prepared, mix the paint components.

1. **Open Paint Can:** Carefully tear off the safety buckle and open the can of Part A (emulsion).
2. **Add Hardener:** Open the packets of Part B (hardener) and pour both into the Part A emulsion.
3. **Mix Thoroughly:** Stir the mixture for 2-3 minutes until it is evenly combined.

**Important:** You must finish the application within 1.5 hours after mixing the paint with the curing agent, as it will begin to harden.

# Easy to Apply

## 01 Surface Preparation



Clean and polish the surface

## 02 Mix and stir(2-3 minutes)



1 Kg

Mix part A refinish paint & part B hardener evenly before using

## 03 Rolling & Brushing



Apply 2-3 thin coats, allowing at least 2 hours between each on a fully dry surface

## 04 Work Done



Dries in 24 hours, fully cures in 7 days

Image: A visual guide showing the mixing process of the paint and hardener.

Video: A step-by-step guide demonstrating the mixing of the refinishing paint components.

## 5. APPLICATION (OPERATING)

Apply the paint in thin, even coats for best results.

- First Coat:** Apply the first thin coat using the provided roller and brush. Ensure even coverage without applying too much paint in one area to avoid drips or unevenness.
- Drying Between Coats:** Allow at least 2 hours for the first coat to dry completely to the touch before applying the next.
- Second Coat (and subsequent if needed):** Apply a second thin coat, ensuring complete coverage. For darker original surfaces, a third coat may be necessary.

The kit is designed to cover 2 layers of 50 sq.ft.

Video: A demonstration of applying the DWIL Tub and Tile Paint for a long-lasting transformation.

## 6. DRYING AND CURING

Allow adequate time for the paint to dry and fully cure to ensure maximum durability.

- **Dry to Touch:** The surface will be dry to the touch after 24-36 hours. At this point, you can carefully remove any masking tape and film.
- **Full Cure:** The paint will be fully cured in 7 days. During this period, avoid scrubbing or heavy cleaning of the newly painted surface.

## 7. MAINTENANCE

---

To maintain the semi-gloss finish and durability of your refinished surface, regular gentle cleaning is recommended. The specially formulated acrylic resin provides high adhesion and resistance to flaking and scratches, making cleaning easy with just a gentle wipe.

## 8. TROUBLESHOOTING

---

- **Uneven Coverage:** If the original substrate color is darker, apply additional thin coats until desired coverage is achieved.
- **Paint Peeling/Flaking:** Ensure proper surface preparation (cleaning and sanding) was performed. The product is not suitable for powdery or peeling substrates.
- **Hardener Solidified:** If the hardener packets appear solidified or damaged upon arrival, contact customer support immediately.
- **Short Working Time:** The mixed paint has a working time of 1.5 hours. Plan your application accordingly and work efficiently.

## 9. SPECIFICATIONS

---

Feature	Specification
Brand	DWIL
Color	White
Finish Type	Semi-Gloss
Item Volume	1 Quarts
Special Feature	Low VOC, Low Odor
Paint Type	Water based
Specific Uses For Product	Bathtub, Countertop, Floors, Sink, Shower, Tile
Surface Recommendation	Tile, Glass, Wood, Stone, Plastic, Fiberglass
Indoor/Outdoor Usage	Indoor
Full Cure Time	7 Days
Coverage	Covers 2 layers of 50 sq.ft
Water Resistance Level	Waterproof

## 10. WARRANTY & SUPPORT

---

For any product issues or questions, please contact DWIL customer support. We are happy to help ensure your satisfaction with the refinishing kit.

An official User Manual (PDF) is also available for download:[Download User Manual PDF](#)